

Wire Mesh Grille Instruction


The below install is for reference. The install is similar for all wire mess grille installations whether is Ford, Chevy or Dodge.

Tools Required: Socket Set / Adjustable Wrench/ cut tooling

NOTE: Be Careful not to scratch the grills Surface.

(1) Before installation, please check new mesh grille fitment for your vehicle model.

Open the box, take out new mesh grille, and put it into opening grille shell to test, to be sure it is match with your vehicle. (If purchased with LED lights, the factory grille will need to be cut. Use the grille overlay as a reference and trim as needed until the lights fit).

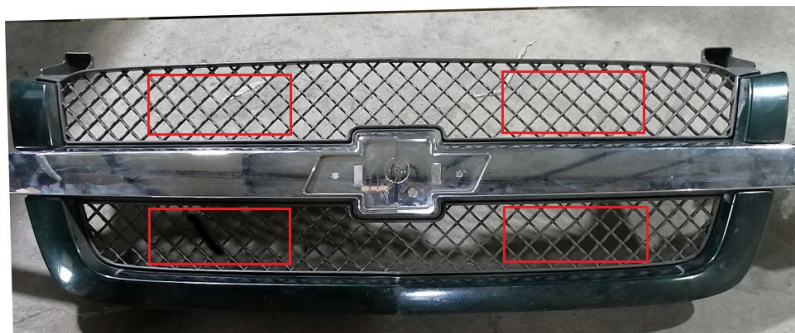

(2) Open the package, take out the studs, and place each stud into the welded nut on the mesh grille frame, see below. (Some grille will come with bolt welded directly to the grille frame.)



(3) Install the mesh grille into the grille opening. Place the washer and nut on the stud, loosely tighten the nut. Center the grille in the opening. Adjust the light as needed. Then tighten the remaining hardware.



(4) Reinstall grille shell to complete the installation.

These instructions are for reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend a professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!