



OE-STYLE TOUCHSCREEN NAVIGATION UNIT WITH SMARTPHONE LINK

(2007-2013 CHEVROLET SILVERADO)
(2007-2013 GMC SIERRA)

INSTALLATION INSTRUCTIONS

CONTENTS

-See Step 1

TOOLS REQUIRED

Flat Blade Screwdriver
7mm Socket
Socket Wrench
Plastic Panel Removal Tool

SKU # S119216


STEP 1



Identify the contents on the package.


- | | | |
|--------------------------------|-----------------------------|--|
| (1) Navigation Unit | (1) Main Harness Amplified | (1) Main Harness 2012-2013 w/ Factory Nav. |
| (1) AUX Input Harness | (1) AUX Output Harness | (1) iLink USB Dongle w/ Extension |
| (1) Factory USB Adapter(MTS-3) | (1) Antenna Adapter Harness | (1) GPS Micro SD |
| (1) Microphone | (1) GPS Antenna | (1) USB Extension Cord |
| (1) Rear Camera Harness | (1) USB Extension | (1) Satellite Radio Harness |
| (1) Audio Filter Module | | |

STEP 2

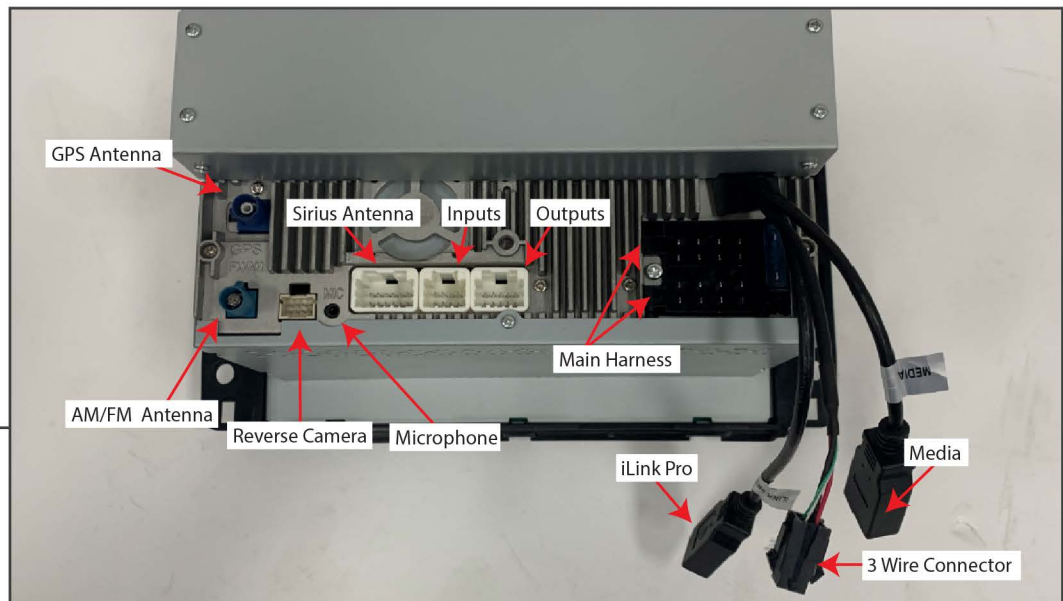

Identify the harness locations on the back of the navigation unit. Please Note: All harnesses are not required for installation, and not all plugs on all the harnesses will be used for every application.

STEP 3

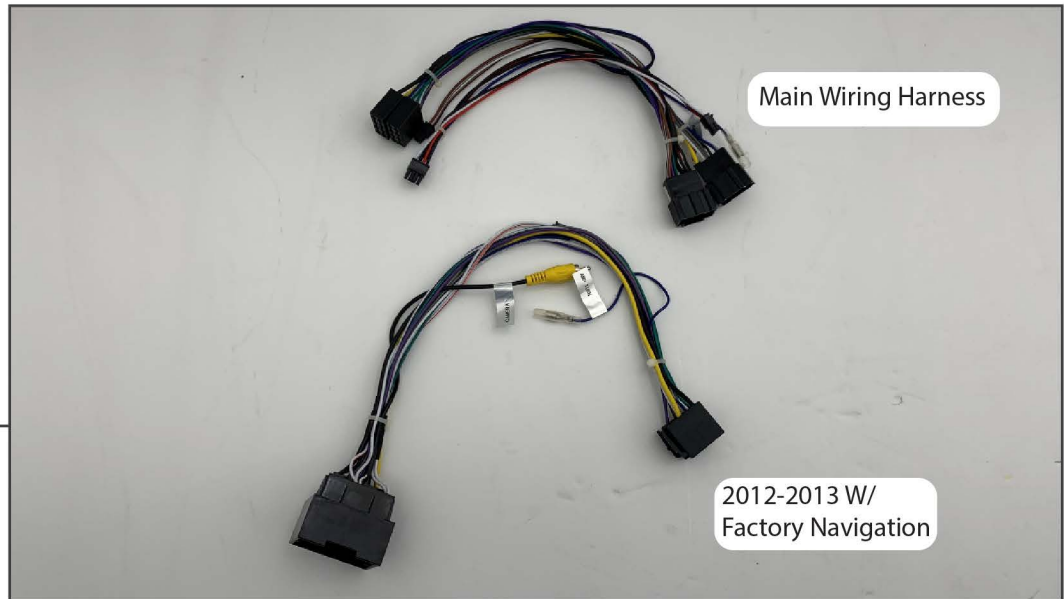

Identify the correct main harness for your vehicle. There are (2) different harness (1) for 2012-2013 vehicles with factory navigation, and (1) what will be used on all other trucks.

STEP 4 (Optional Requires Additional Purchase)




To connect back up camera, connect the camera harness to the navigation unit, and connect the back up camera (not included) to the harness following the labels on the wires.



STEP 5

Remove the vehicles dash bezel to access the screws securing the radio to the vehicle. Using a 7mm socket, remove the (6) screws.

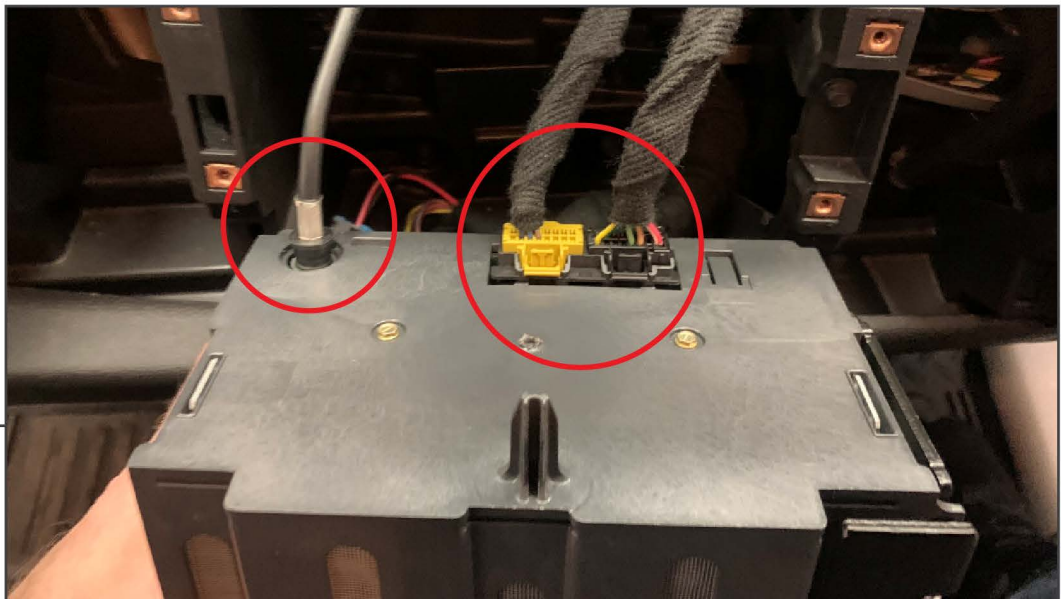

STEP 6

Pull the factory radio away from the dash board, disconnect the various electrical connectors on the back of the unit.




STEP 7

- Install the Navos unit using the appropriate main harness for the vehicle.
- Vehicles with a factory amplifier will need to use the amplifier retention harness. If this harness is not used, the volume output after installation may be very loud and there may be various electrical noise issues. Installing the amp retention harness will lower the output of the head unit to better match the factory amplifier.
- Place the GPS Antenna on a metal surface behind the dashboard.
- Vehicles equipped with factory USB plugs on the dash, use the provided adapter(MTS-3) to retain factory USB location. Otherwise route the USB cables to the glove box.
- Route the iLink to the glove box.
- Route the Microphone to the desired location on the driver side of the vehicle, adjust mounting position for best sound quality.
- Connect and route the back-up camera. (If applicable)
- Add additional input and outputs as needed/desired for your application.
- Ensure the radio and GPS antennas are connected.
- Install the Navos unit in reverse order using the factory hardware.

****No Audio Trouble Shooting****

Factory Amplified systems must select “OE DSP AMP” for audio to work. Reference page 70 of the user manual to select the “OE DSP AMP” setting. Failure to do so will result in extremely low Volume.

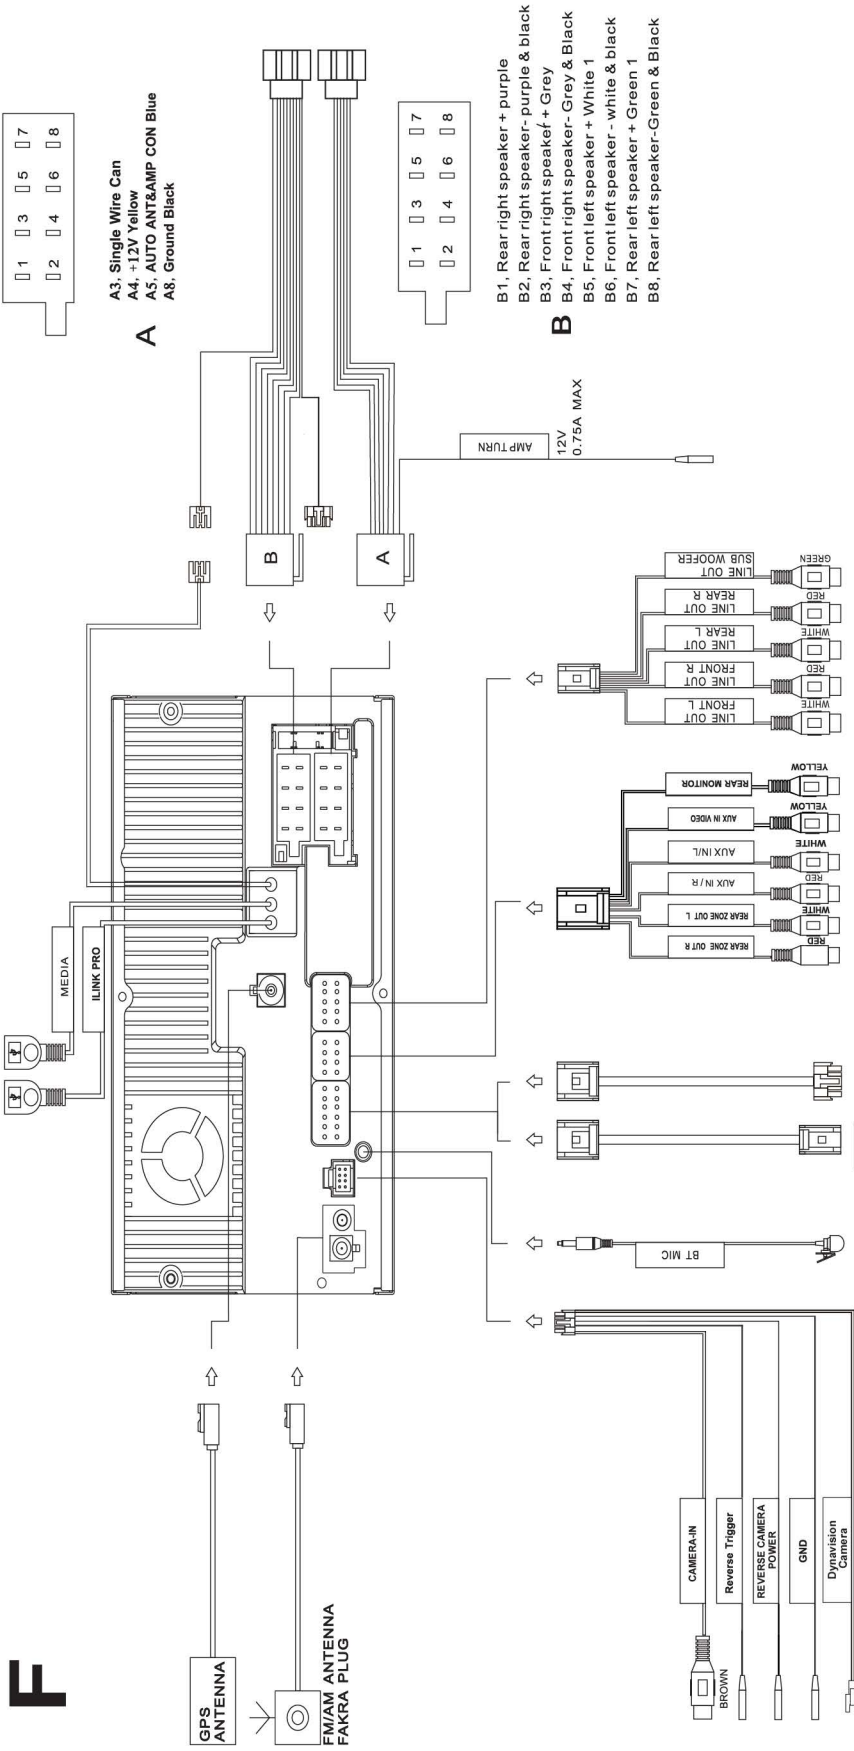

F

- A**
- A3. Single Wire Can
 - A4. +12V Yellow
 - A5. AUTO ANT& CON Blue
 - A8. Ground Black

- B**
- B1. Rear right speaker- purple
 - B2. Rear left speaker- purple & black
 - B3. Front right speaker- Grey
 - B4. Front right speaker- Grey & Black
 - B5. Front left speaker- White 1
 - B6. Front left speaker - white & black
 - B7. Rear left speaker + Green 1
 - B8. Rear left speaker-Green & Black

E9 10R-041223

CE

FC

RoHS