



LED THIRD BRAKE LIGHT

(2014-2018 SILVERADO)

(2014-2018 SIERRA)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Third Brake Light

TOOLS REQUIRED

T-20 Torx Screwdriver
Plastic Pry Tool

SKU # S122503




STEP 1

Remove (2) T-20 Torx screws from the third brake light assembly.



STEP 2

With the screws removed, remove the brake light from the vehicle using a plastic pry tool. Unplug the electrical connector from behind the brake light.

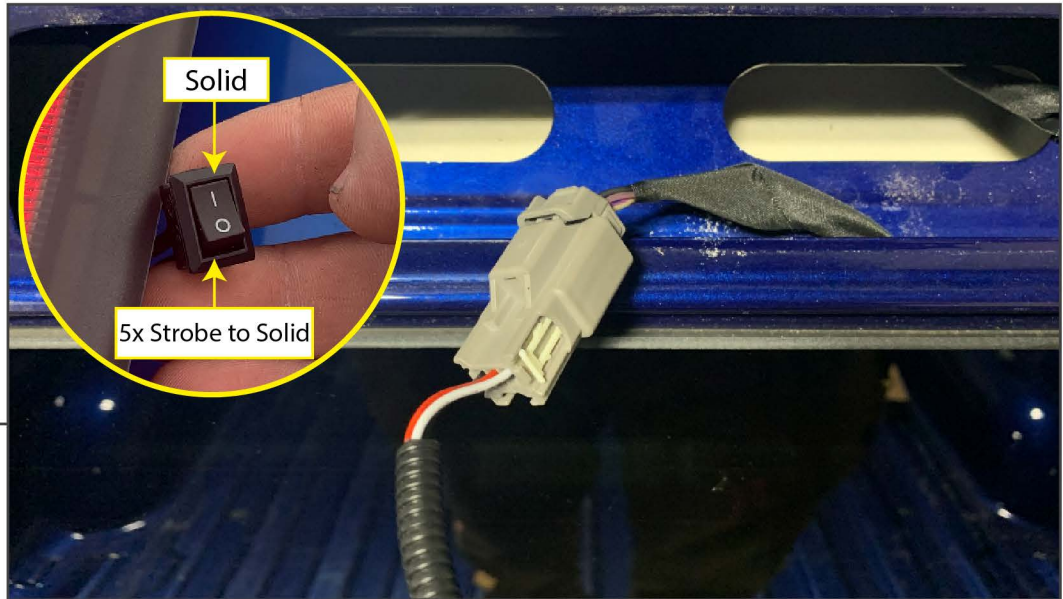

STEP 3

Plug in the brake light electrical connector into the vehicle's wiring harness. Toggle the switch to enable 5x strobe feature.



STEP 4

Re-assemble the vehicle using the original hardware. Tighten until secure.

Installation is now complete.