

LED HEADLIGHTS

(2007-2013 SILVERADO 1500)

(2007-2014 SILVERADO 2500)


INSTALLATION INSTRUCTIONS

CONTENTS

(2) Headlight Assemblies
(1) DRL Harness


TOOLS REQUIRED

10mm Socket
8mm Socket
Panel Removal Tool
Needle Nose Pliers

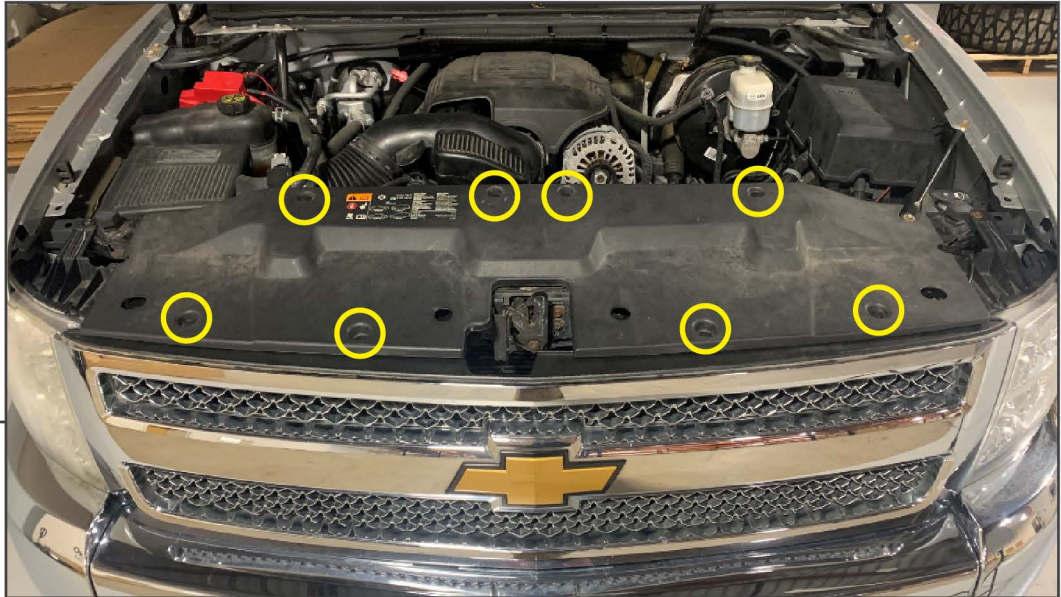

STEP 1

Remove (8) push clips to remove the upper plastic cover.

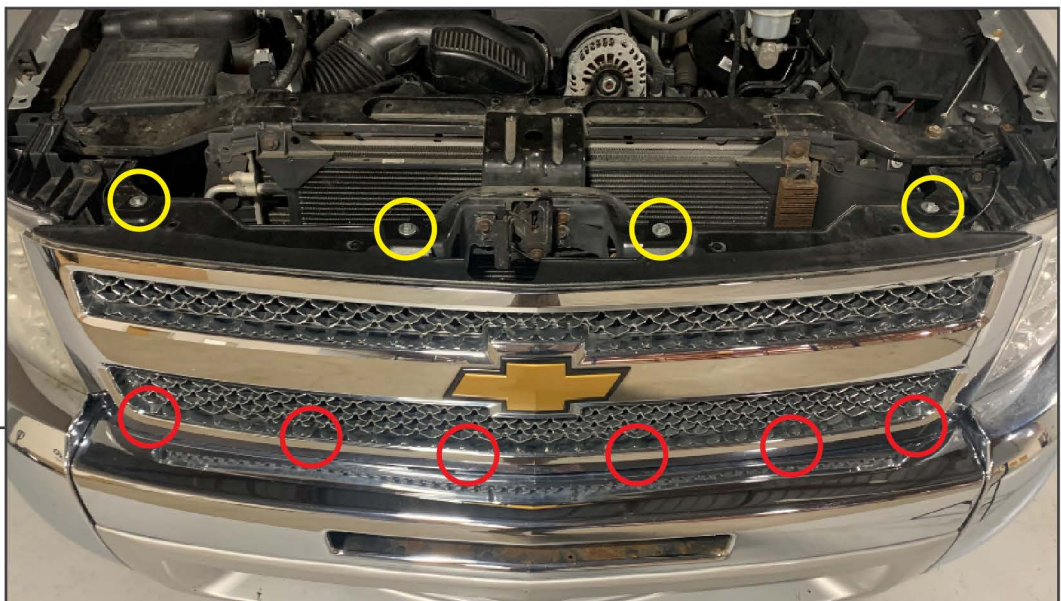

STEP 2

Remove (4) 10mm bolts, then pull up and out on the grille, releasing the (6) lower clips.



STEP 3


Remove the (3) 10mm bolts from each headlight housing.

Note: (1) headlight bolt is located under the headlight housing.




STEP 4

Unplug the wiring harness from each headlight housing.

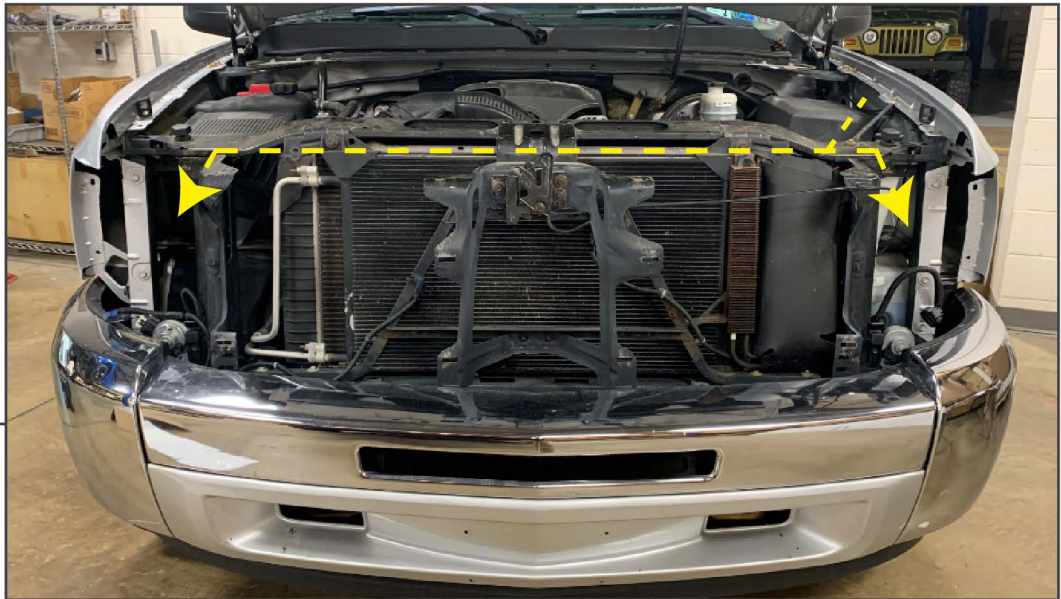

STEP 5
(Optional)


Route the provided DRL wiring harness across radiator support, out of the way of other components. Plug the ends into the designated harness attached to the headlight.

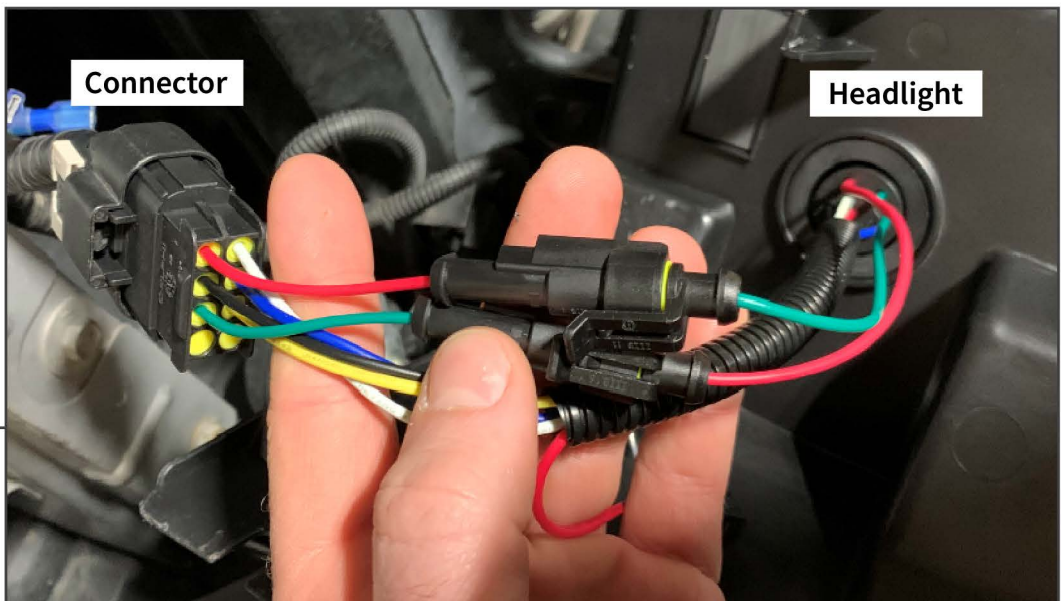

STEP 6

Plug the headlight into the vehicle harness. Using the diagram below, plug in the additional wires on the headlight and headlight plug. Install each headlight into the vehicle re-using original hardware.

<u>Silverado 1500</u>		<u>Silverado 2500</u>			
Headlight Red	-	Connector Red	Headlight Red	-	Connector Green
Headlight Green	-	Connector Green	Headlight Green	-	Connector Red

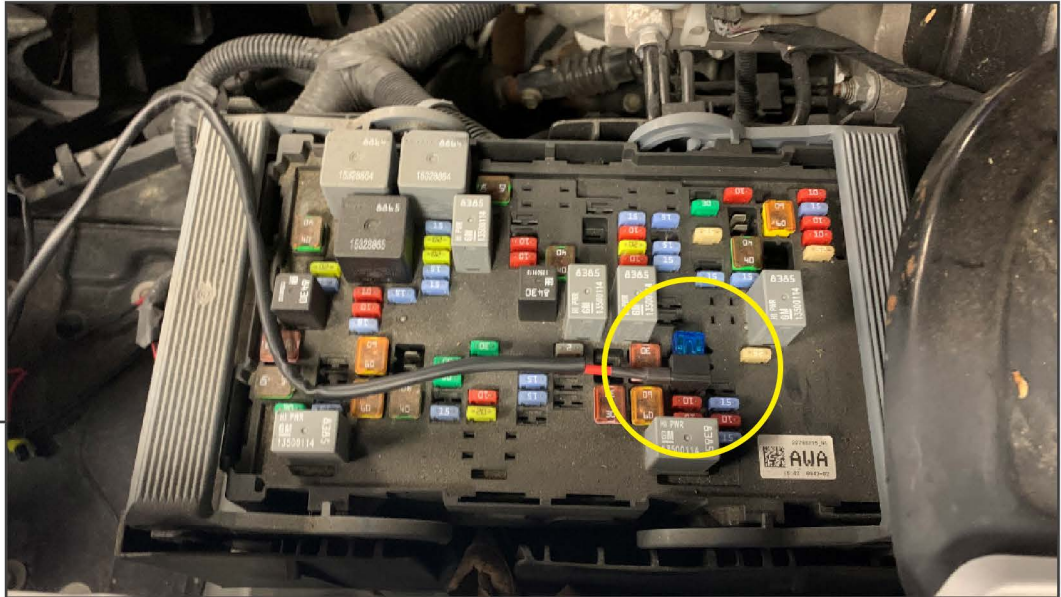

STEP 7
(Optional)

Plug the fuse tap on the DRL harness into fuse #43 (Misc. Ignition) into the fuse box.



STEP 8

Re-assemble vehicle following steps 1-4 in reverse order.

Installation is now complete.