



DRIVER SIDE MASTER POWER WINDOW SWITCH

(2007-2013 CHEVROLET SILVERADO)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Master Switch

TOOLS REQUIRED

10mm Socket
Ratchet
Plastic Panel Removal Tool

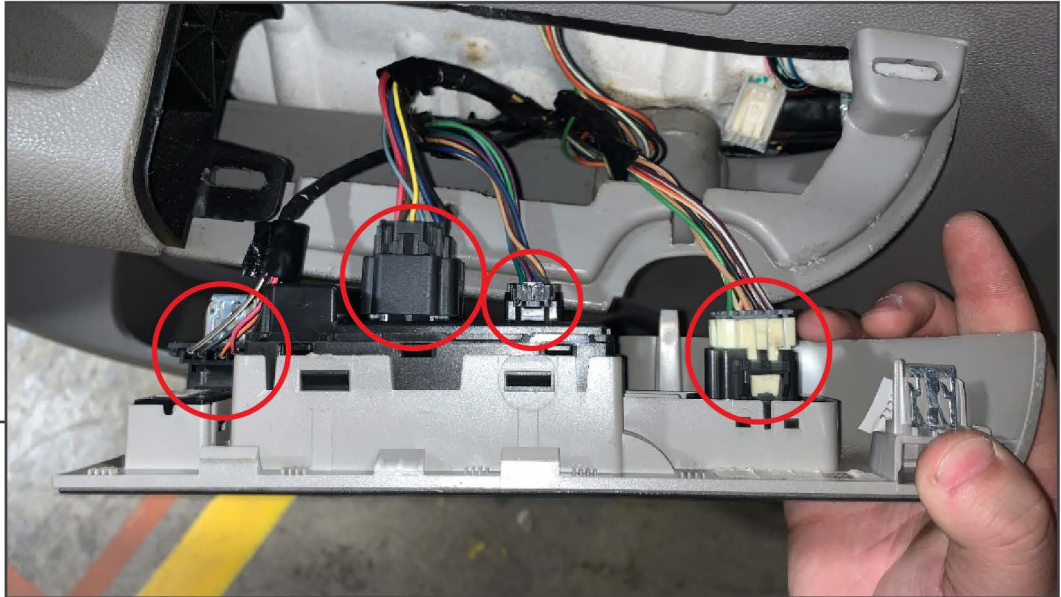
SKU #S123330

STEP 1

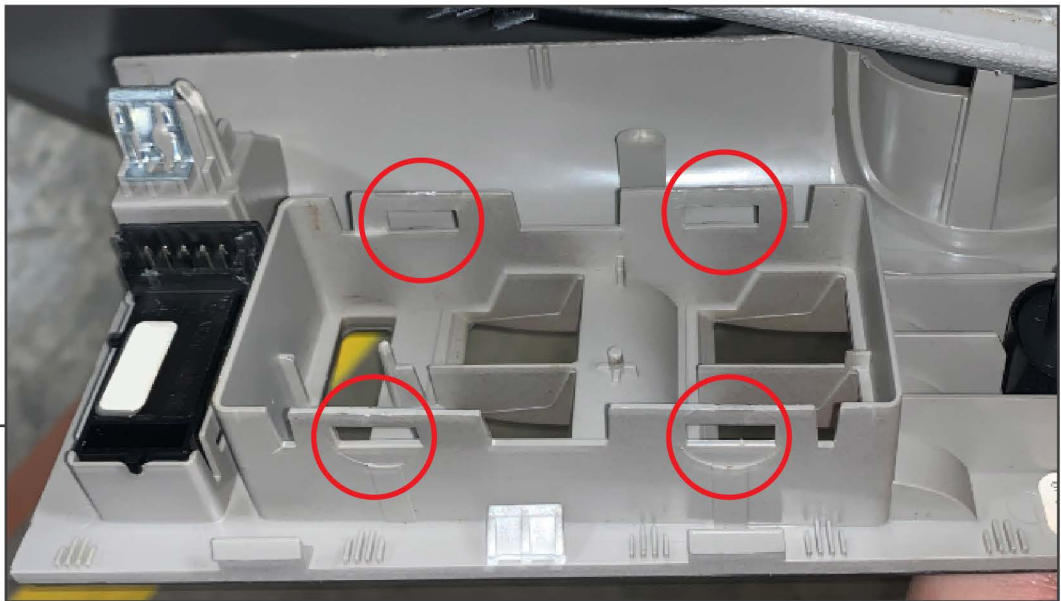
Using a plastic panel removal tool, remove the plastic cover on the grab handle, starting from the cutout located at the bottom of the grab handle. Remove (2) 10mm bolts securing the grab handle to the door.

STEP 2

Using a plastic panel removal tool, pry around the switch panel to release the clips. With the clips dislodged, lift the switch panel away slightly.

STEP 3

Remove the (4) electrical connectors from the back of the master switch.

STEP 4

Using a plastic panel removal tool, gently pry back the (4) switch locking tabs while pulling the switch away from the switch panel to release the window master switch.



STEP 5

Re-assemble vehicle following steps 1-4 in reverse order.

Installation is now complete.