



# LED THIRD BRAKE LIGHT

(2007-2013 SILVERADO/SIERRA 1500)

(2007-2014 SILVERADO/SIERRA 2500 & 3500)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(1) LED Third Brake Light

### TOOLS REQUIRED


---

T-20 Torx Screwdriver



**STEP 1**

Remove (2) T-20 Torx screws from the third brake light housing.

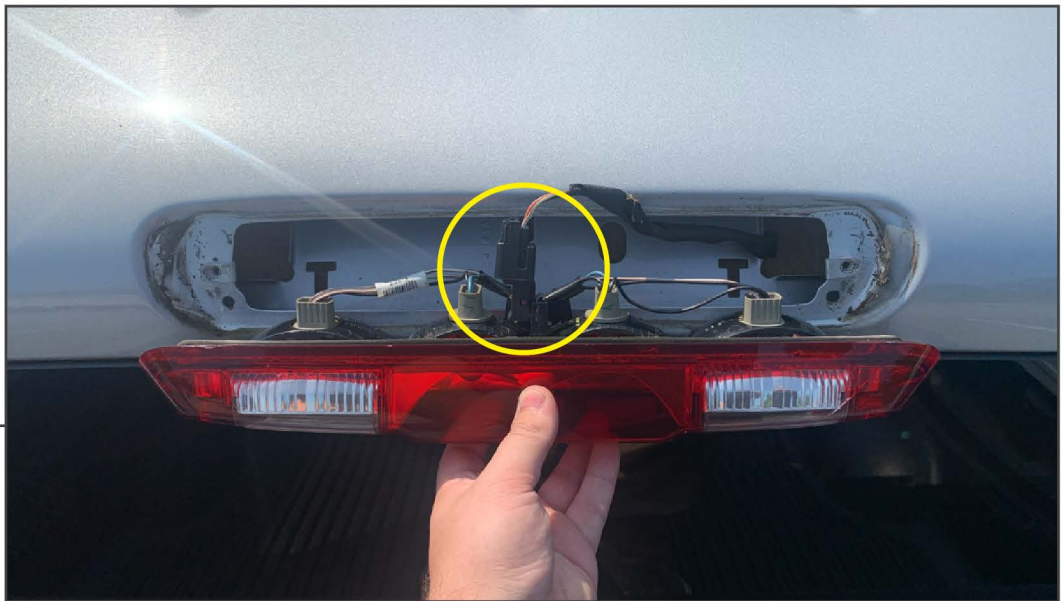

**STEP 2**

Unplug the electrical connector from the original third brake light.

## STEP 3



Plug in the third brake light assembly. Toggle the switch on the back-side of the light assembly to enable/disable 5x strobe to solid feature. Test the light for functionality.

## STEP 4



Install the new third brake light into the vehicle reusing original hardware.

Installation is now complete.