



LED THIRD BRAKE LIGHT

(2007-2013 SILVERADO/SIERRA 1500)

(2007-2014 SILVERADO/SIERRA 2500 & 3500)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LED Third Brake Light


TOOLS REQUIRED

T-20 Torx Screwdriver



STEP 1

Remove (2) T-20 Torx screws from the third brake light housing.

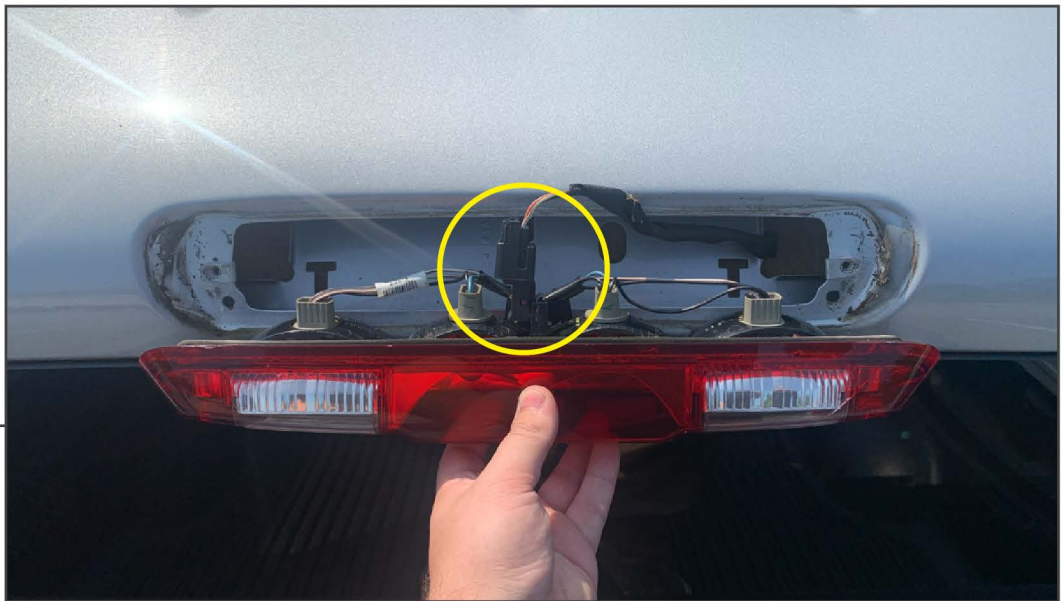

STEP 2

Unplug the electrical connector from the original third brake light.

STEP 3



Plug in the third brake light assembly. Toggle the switch on the back-side of the light assembly to enable/disable 5x strobe to solid feature. Test the light for functionality.

STEP 4



Install the new third brake light into the vehicle reusing original hardware.

Installation is now complete.