

REDROCK

Packaged Grille Installation Instructions

Part#: S141352

FITS Chevy Silverado1500 07 -13

Key To Components

A. 1 ea. Grille

B. 1ea. Wiring Harness

Tools required

Ratchet

10mm Socket

Plastic clip removal tool or similar
tool Pliers

A



B



ELECTRICAL INSTALLATION



This grill comes complete with light markers which need to be connected to a power source. Failure to properly make these connections could result in damage to the LED lights and/or your vehicle and may result in personal injury. If you are not qualified to make the proper connections, we highly recommend that you contact an installation expert to complete the connections.



Please take a few minutes to read and thoroughly familiarize yourself with the installation procedures outlined in this manual. Following the steps as outlined will save you time and help reduce mistakes. Once the instructions are reviewed, if you feel that you are not capable of safely installing the parts seek the help of a qualified installation expert to help you complete the job. The manufacture is in no way responsible for any personal injury or vehicle damage that may occur during the installation.

NOTES ON INSTALLATION

Please read and understand all instructions prior to beginning the installation process.

Pre-fit all panels as you proceed with the installation before attempting to bolt into position. This will enable you to understand exactly how the part is intended to fit onto vehicle.

Do NOT over-tighten screw.

If the instructions call for you to save and re-install parts set them aside in a protected area so as not to damage them.

California Proposition 65 Warning!


This product includes a power cord which may contain lead a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

REMOVING FACTORY GRILLE




Step 1

Using a plastic clip removal tool or similar tool locate and remove 10 factory clips holding the radiator shroud. Remove plastic radiator shroud from vehicle. Set shroud and hardware aside for reinstallation.

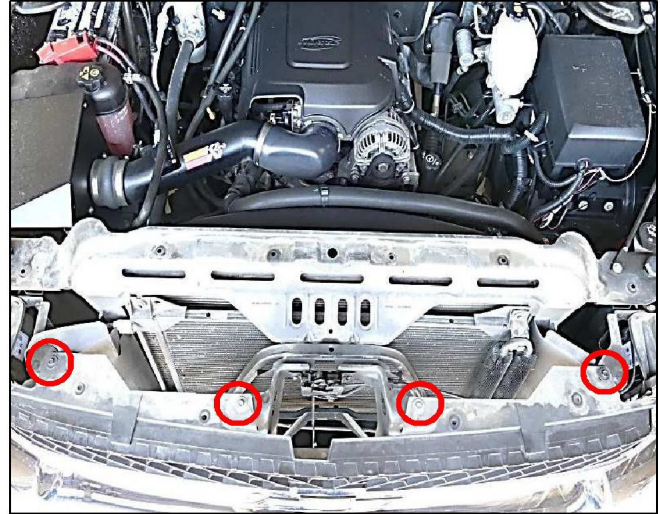


Step 2

Open vehicles hood. Using a 10mm socket locate and remove 4 bolts circled above. Set hardware aside for reinstallation.

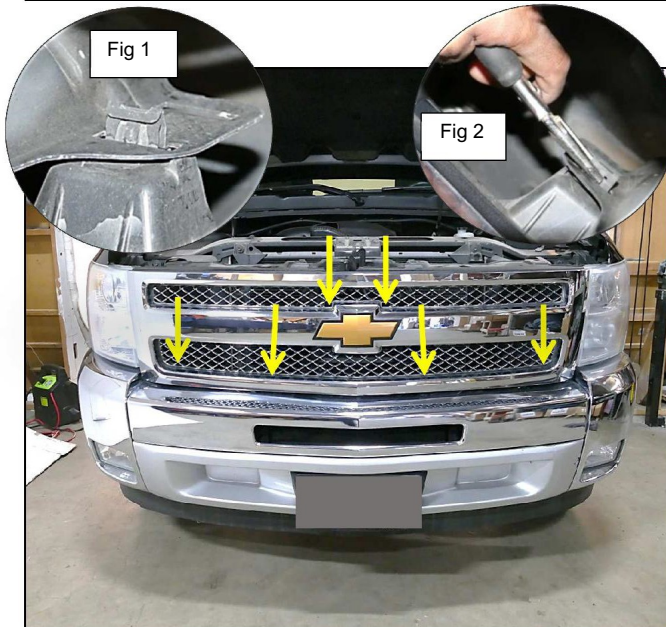

Step 3

The grille has six metal clips fig1 that clip into the core support two behind the Chevy logo and four along the bottom. Pull the grille forward; use a pair of pliers to release the clips fig 2.

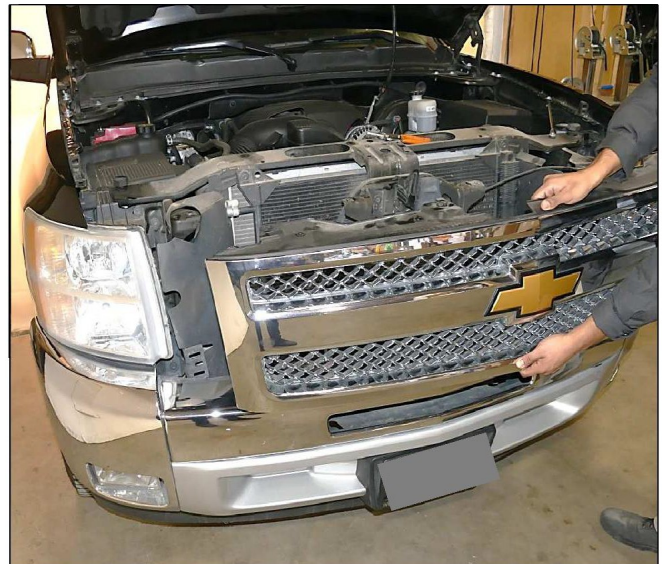

Step 4

Firmly grab and pull factory grille off of vehicle. Discard factory grille.

INSTALLING NEW GRILLE



Step 1
Place grille (A) onto vehicle.

Step 2
Install grille onto vehicle by reversing steps 1-2 in
page 2.

This completes the installation.