



BED CARGO TIE DOWNS

(2007-2022 SILVERADO/SIERRA)


INSTALLATION INSTRUCTIONS

CONTENTS

(2) Bed Cargo Tie Down Kits

TOOLS REQUIRED

Pry Tool
12mm Wrench

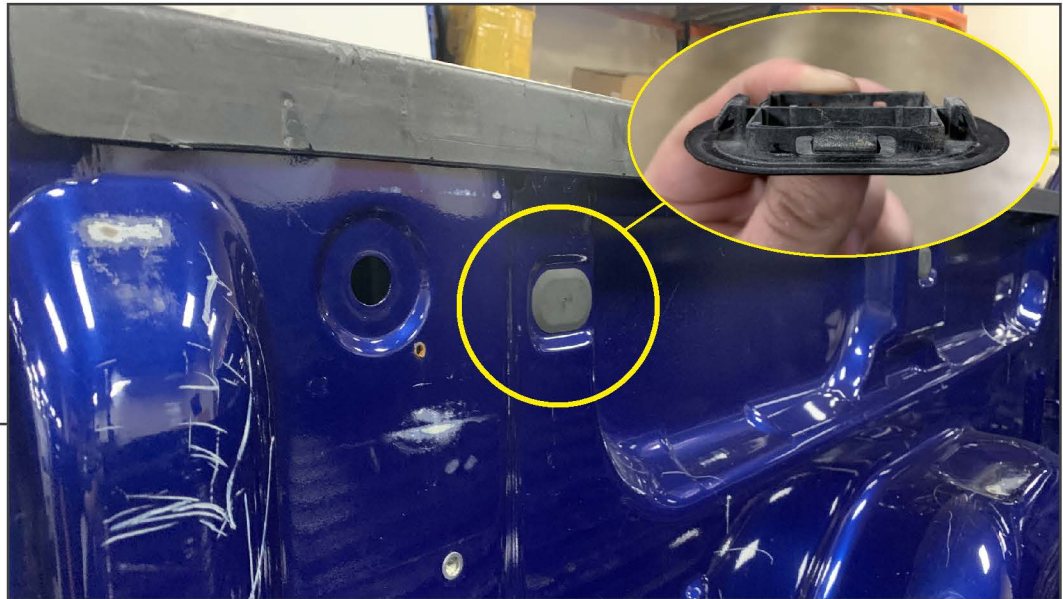

STEP 1

Remove the plastic grommet from the bed side using a pry tool.



STEP 2

Place the foam gasket onto the tie down assembly, and ensure the threaded plate is parallel with the tie down hook.



STEP 3

Place the tie down into the bed. Loosen the bolt slightly to turn the threaded plate horizontally behind the bed, and tighten the bolt to secure the tie down.

Repeat steps 1-3 to the remaining tie down. Installation is now complete.