



OEM STYLE LED FOG LIGHTS

(2019-2021 SILVERADO)

INSTALLATION INSTRUCTIONS

CONTENTS


- (1) LH Fog Light
- (1) RH Fog Light
- (1) Wiring Harness
- (1) Switch Harness
- (5) Cable Ties

TOOLS REQUIRED

- 8mm, 10mm Sockets
- Ratchet
- Razor Knife

SKU: S143474


STEP 1

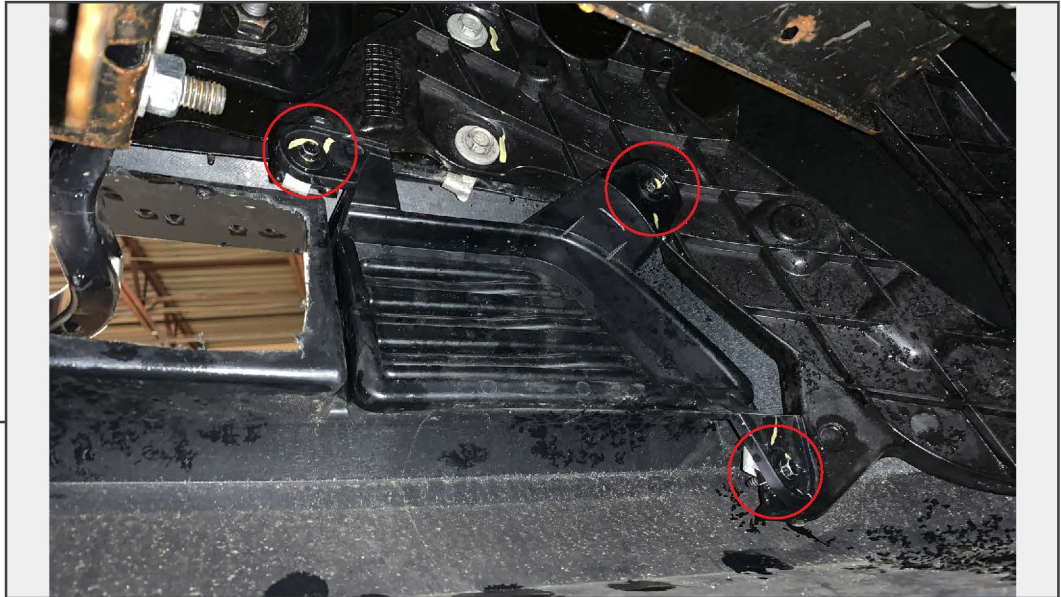

From behind the front bumper, locate the fog light filler panel. Remove (3) 8mm bolts to remove the filler panel.

Repeat this step for the opposite side of the vehicle.

STEP 2

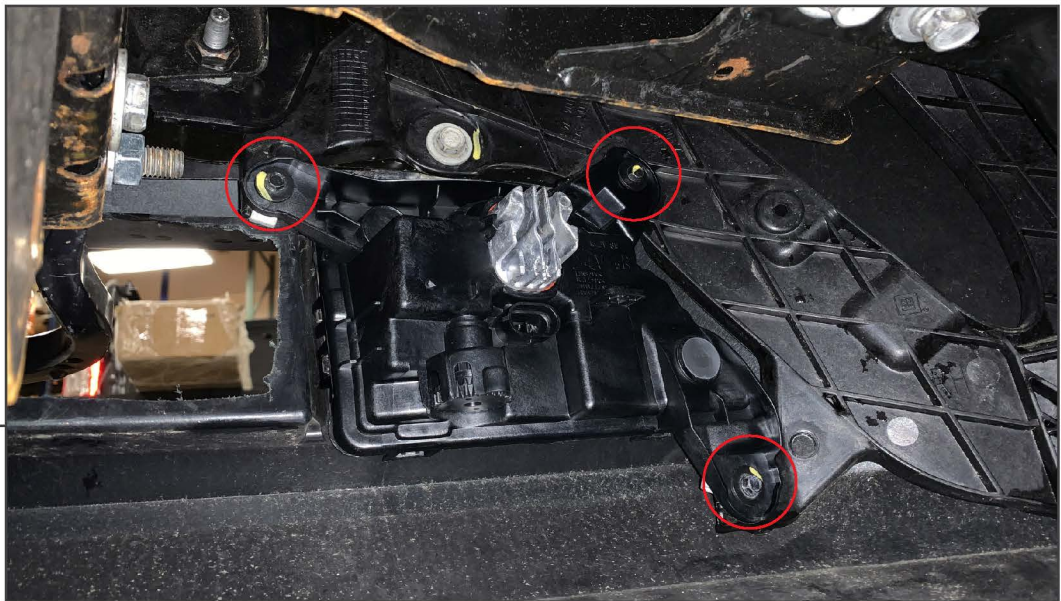

Install the corresponding fog light into the fog light holes using the (3) 8mm bolts previously removed from the filler panel.

STEP 3



Plug the included wiring harness into each fog light assembly, and route the harness towards the vehicle battery. Secure the positive and negative leads to the battery terminals. Secure the included relay.

<u>Wiring Harness</u>	-	<u>Battery</u>
Red Wire	-	Positive Terminal (+)
Black Wire	-	Negative Terminal (-)

STEP 4



Route the switch harness through a suitable firewall grommet and adhere to the vehicle dashboard.

Installation is now complete.