



LED TAIL LIGHTS

(2007-2013 SILVERADO)

INSTALLATION INSTRUCTIONS

CONTENTS


- (1) LH Tail Light
- (1) RH Tail Light
- (4) M4 Tail Light Mounting Bolts
- (8) Zip Ties
- (4) M4 Bolts
- (2) M4 Nuts
- (4) Vampire Clips
- (2) Resistor Brackets

TOOLS REQUIRED

Phillips Screwdriver

SKU: S150366

STEP 1

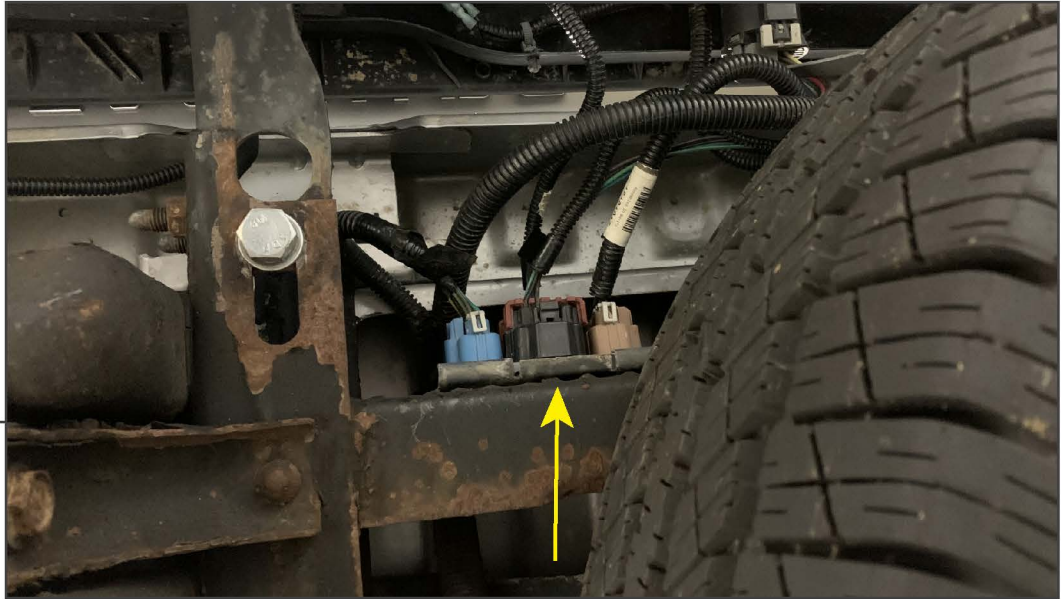

From under the vehicle above the spare tire on the LH side of the vehicle, unplug the (2) center electrical connectors from the junction box. This disconnects the LH and RH tail light harnesses from the vehicle. Disconnect the wiring harnesses from any frame retainers.

STEP 2



Open the vehicle tailgate, and remove (2) Phillips screws from the tail light housing.



STEP 3

Firmly pull the tail light towards the rear of the vehicle to dislodge the push pins behind the light. Pull the tail light harness through following the tail light housing.



STEP 4

Route the new tail light wiring harness through the bed, then align the tail light to the vehicle. Install the resistor to the included mounting bracket using (2) M4 bolts and nuts. Then, secure the resistor to the inside of the vehicle bed using (2) vampire clips.

Secure the tail light to the vehicle using the (2) provided M4 bolts.



STEP 5

Plug the tail light assembly into the junction box. Repeat steps 2-4 to the opposite side of the vehicle.

Installation is now complete.