



# LED TAIL LIGHTS

(2014-2018 SILVERADO)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Tail Light
- (1) RH Tail Light
- (2) Resistor Brackets
- (4) Vampire Clips
- (4) M4 Bolts
- (4) M4 Nuts
- (8) Cable Ties


### TOOLS REQUIRED

---

- T-15 Torx Socket
- Phillips Screwdriver
- Pliers

SKU: S151298

## STEP 1

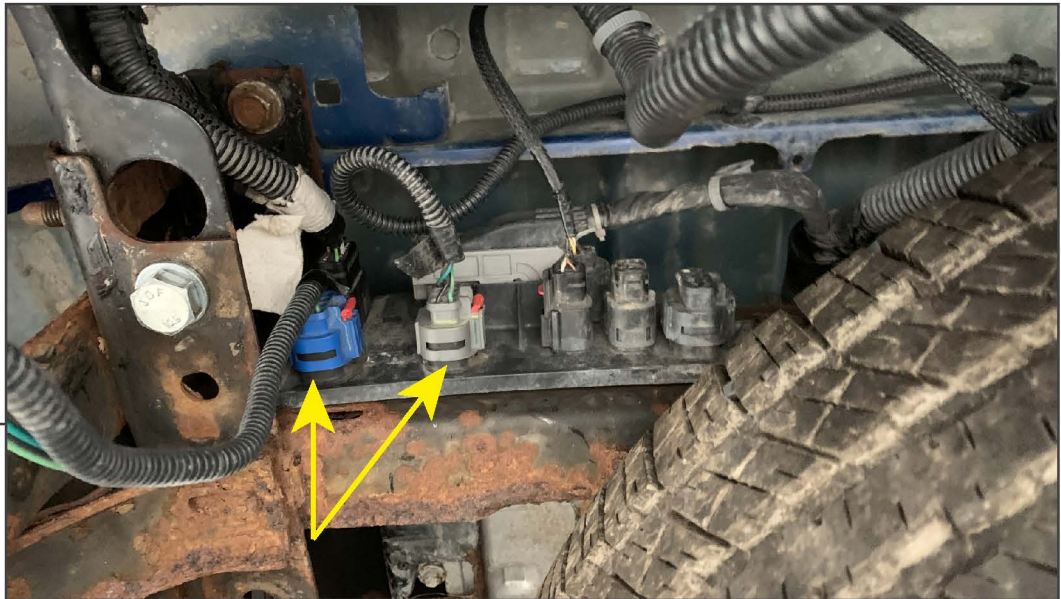

From under the vehicle, locate the tail light wiring connectors. Slide the red locking tab back, and depress the retaining tab while pulling the connector away from the junction box.

## STEP 2



Remove (2) T-15 Torx screws from the tail light assembly.



## STEP 3

Remove the tail light from the vehicle. Route the new tail light wiring harness towards the lower junction box, and neatly secure using the provided cable ties. Plug in the connector into the vehicle junction box. Install the resistor to the included mounting bracket using (2) M4 bolts and nuts. Then, secure the resistor to the inside of the vehicle bed using (2) vampire clips.

Secure the new tail light to the vehicle using the original T-15 Torx bolts.

Installation is now complete.