



---

# SOFT ROLL UP TONNEAU COVER

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Tonneau Cover
- (1) LH Side Rail
- (1) RH Side Rail
- (6) Tapered Allen Bolts
- (4) Tapered Phillips Bolts (Utility Rail)
- (1) 4mm Allen Key
- (1) 2.5mm Allen Key
- (6) Tonneau Clamps
- (4) Utility Rail Clamps
- (4) Utility Rail Blocks
- (1) Bulkhead Seal (Long)
- (1) Side Rail Seal (Short)

### TOOLS REQUIRED

---

- 2.5mm Allen Key
- 4mm Allen Key
- 14mm Socket (Utility Rail)
- Phillips Screwdriver (Utility Rail)



## STEP 1


Clean the vehicle bed bulkhead using isopropyl alcohol and a microfiber cloth. Once dry, test fit the bulkhead seal to the vehicle. Trim to the appropriate size, and peel the paper backing and adhere the seal to the vehicle bulkhead.



## STEP 2

Locate the side rail identification sticker, and align each appropriate side rail to the vehicle bed rail. Slide the pre-installed upper clamps evenly down the side rail. Loosely secure the side rail to the bed side using the (2) middle/rear clamps, (1) front clamp, and (3) tapered Allen bolts per side.  
**\*See last page for Utility Rail Mounting Clamps**

Note: Clamp mounting locations and side rail alignment may change, leave clamps loose at this time. If the bed rail is not flat, use the included side rail seal to fill the gap, cut to fit as necessary.

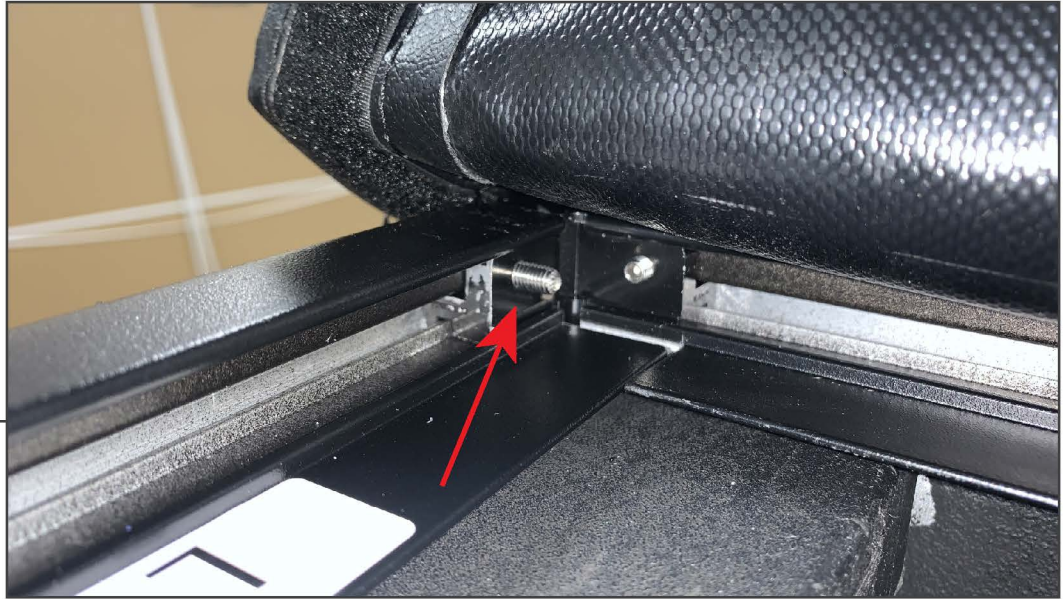

## STEP 3

Fit the tonneau cover into each side rail. Secure the tonneau to the side rail using the (1) 2.5mm Allen key to turn the Allen screw on each side until secure.



## STEP 4

Unroll the tonneau cover, and latch the rear of the tonneau cover into the side rail. Adjust the tonneau cover to best fit the bed. Slight over-hang on the bulkhead and tailgate is intentional. Once properly adjusted, pull the pull strap and roll the cover towards the bulkhead and secure all mounting clamps into place.

Note: If the clamps interfere with the tonneau cover cross bars, slide the clamps away until proper clearance is achieved.



## STEP 5

When tonneau cover is not in use, roll the cover neatly towards the bulkhead, and secure using the (2) attached nylon straps.



## STEP 6

Installation is now complete.



UTILITY RAILS

Slide (2) side rail blocks into each of the tonneau cover side rails. Space the (2) blocks apart evenly, and tighten the Allen studs to secure the blocks into place.

Note: If the tonneau cover interferes with the clamp location, loosen the Allen studs and relocate the clamps down the rail.



UTILITY RAILS

Remove the plastic cap from the vehicle utility rail. Slide the utility rail clamps into the utility rail, and match the clamp with the previously placed side rail blocks. Secure the clamp to the side rail blocks using (1) tapered Phillips bolt per clamp. Then, tighten the (1) 14mm bolt securing the clamp to the utility rail. Re-install the plastic utility rail cap.

If necessary, use the included additional flat washers to space the clamp away from the side rail, or remove flat washers to pull the clamp inwards.