



---

# TCX HD DROP STEPS

2019-2024+ SILVERADO 1500 DOUBLE CAB

2020-2024+ SILVERADO 2500-3500 DOUBLE CAB

2019-2024+ SIERRA 1500 DOUBLE CAB

2020-2024+ SIERRA 2500-3500 DOUBLE CAB

(Exclude 2019 SILVERADO 1500 LD / SIERRA 1500 Limited)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(1) LH Drop Step  
(1) RH Drop Step  
(4) LH Step Brackets  
(4) RH Step Brackets  
(16) M8 x 30mm Hex Bolts  
(16) M8 x 24mm OD x 2mm Flat Washers  
(16) M8 Lock Washers  
(16) M8 x 25mm Combo Bolts


### TOOLS REQUIRED

---

13mm Wrench/Socket  
Ratchet

SKU # S185109  
Edited:08/13/2024

## STEP 1

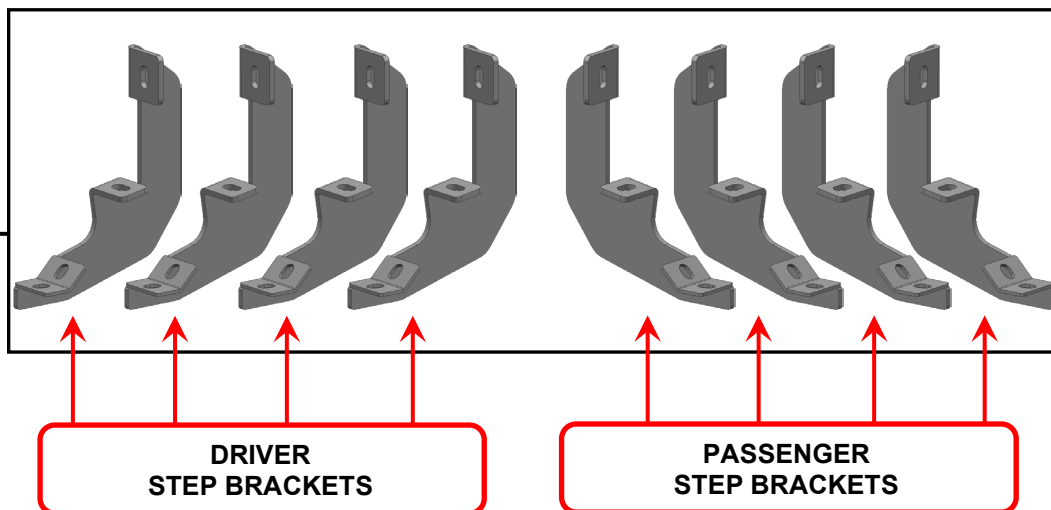


Please identify each mounting bracket using the engraved location identifier. **Notice: The brackets can be used at any position along the same side of the vehicle.**

DF: Driver Front  
DC: Driver Center  
DC: Driver Center  
DR: Driver Rear


PF: Passenger Front  
PC: Passenger Center  
PC: Passenger Center  
PR: Passenger Rear

## STEP 2

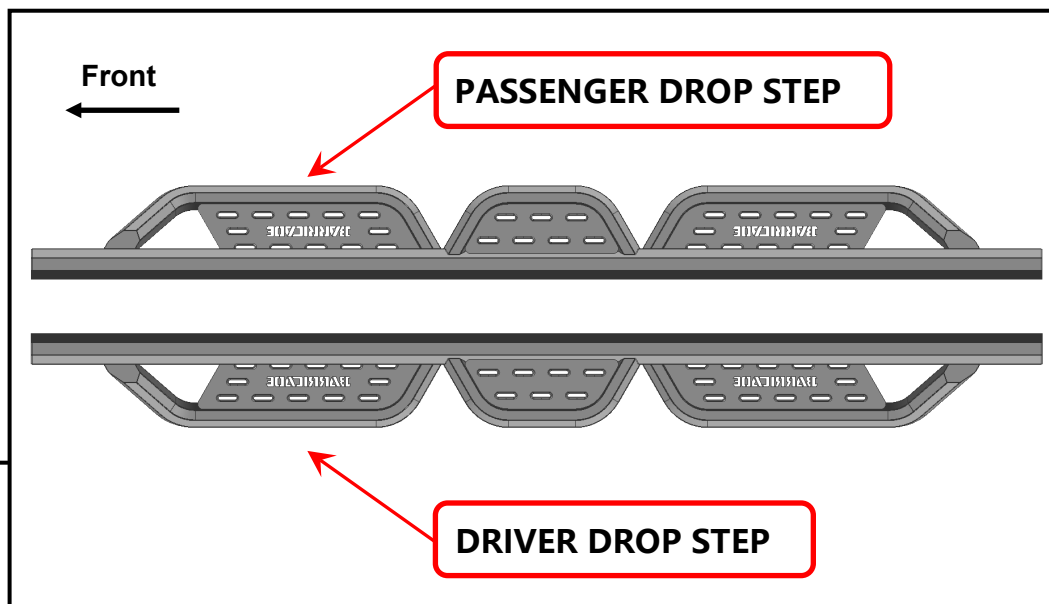

Identify each drop step by identifier on the front. **Notice: "D" for Driver/Left Side; "P" for Passenger/Right Side.**


## STEP 3

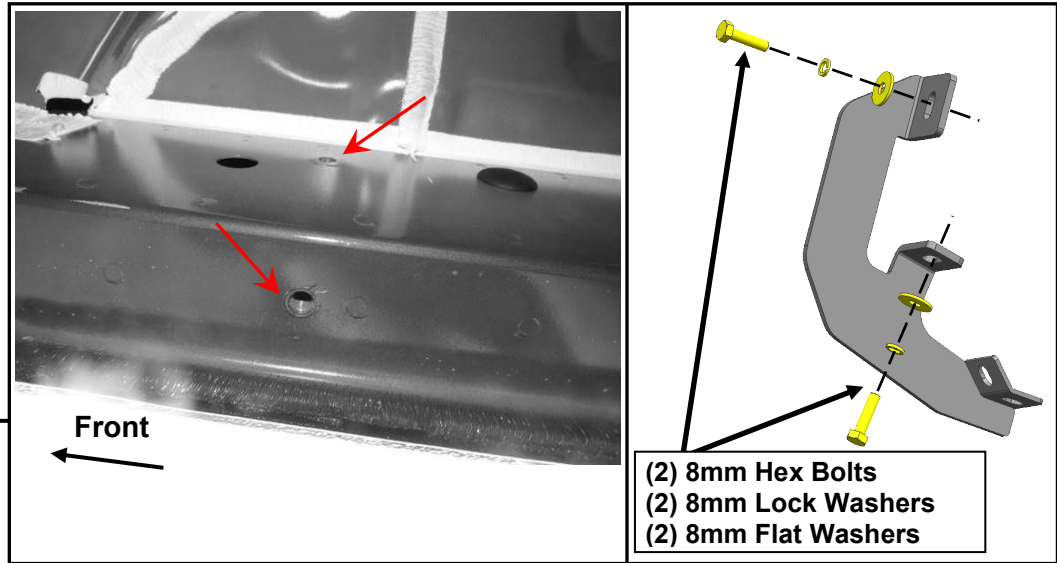

Start installation toward the front of the Passenger/Right side of the vehicle.


Loosely fit the (1) bracket to the vehicle threaded body hole using (2) M8 x 30mm hex bolts, (2) M8 lock washers, and (2) M8 flat washers. Do not fully tighten to allow for later adjustments. Repeat this step for all step brackets.

## STEP 4

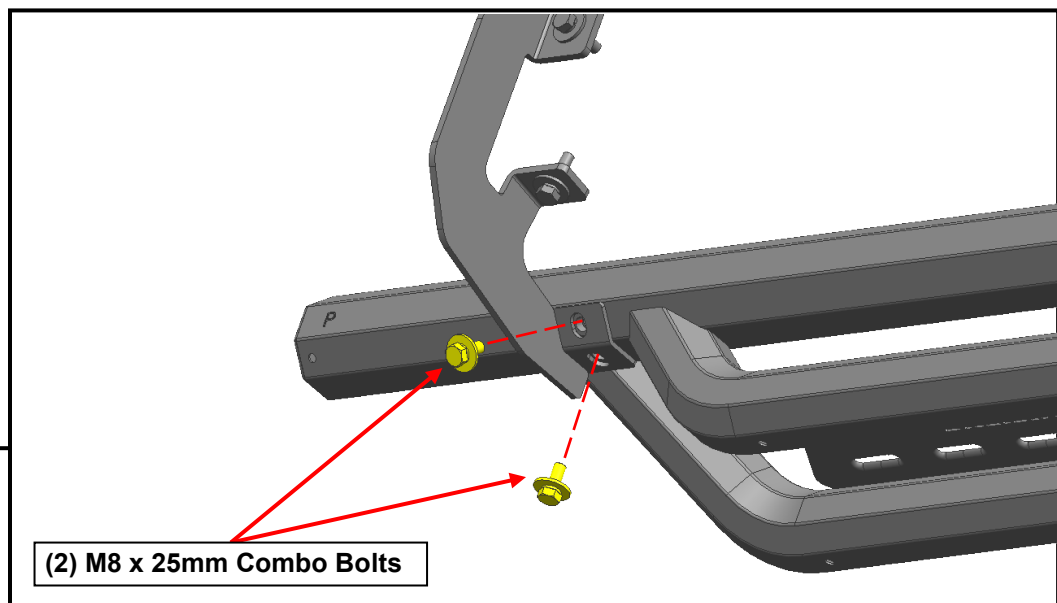

With all brackets loosely mounted to the vehicle, fit the Passenger/Right Drop Step onto the brackets, and loosely secure into place using (8) M8 x 25mm combo bolts.

## STEP 5

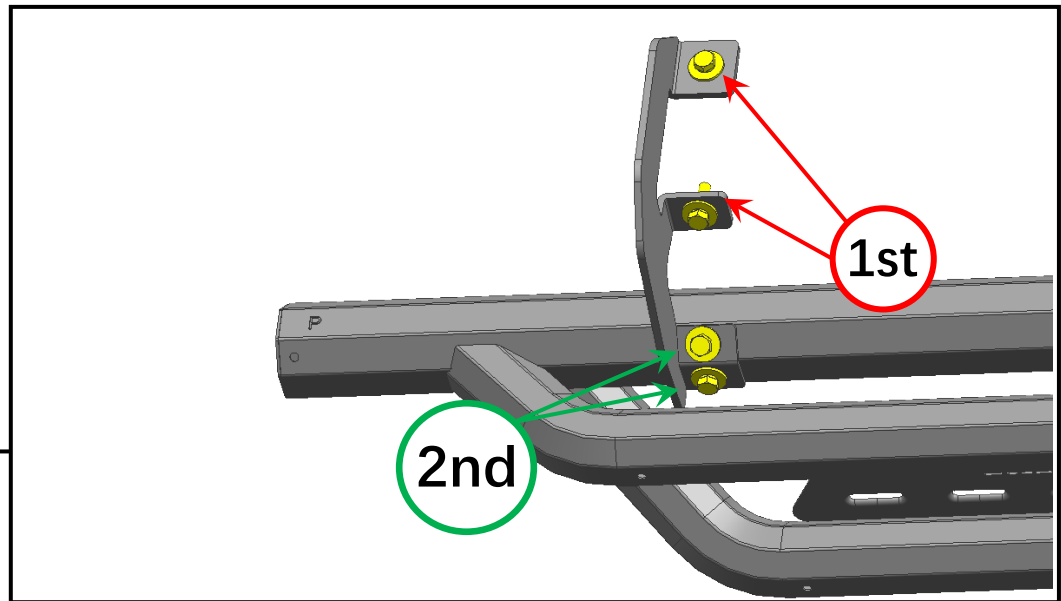

Tighten the mounting brackets to the vehicle. Adjust the Drop Step to the desired angle, and tighten the M8 combo bolts to secure the step into place. See photo for tightening order visual.

Repeat steps 1-5 for the remaining Drop Step.

Installation is now complete.