



ARMOR GRILLE WITH LED OFFROAD LIGHTING

(2016-2018 SILVERADO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Grille Assembly
- (2) Scotchlok Connectors

TOOLS REQUIRED

10mm Socket
Ratchet
Panel Removal Tool
Pliers


SKU # S188415

STEP 1



Open the vehicle hood. Remove (12) plastic push clips securing the radiator cover to the vehicle. Remove the cover from the vehicle.


STEP 2

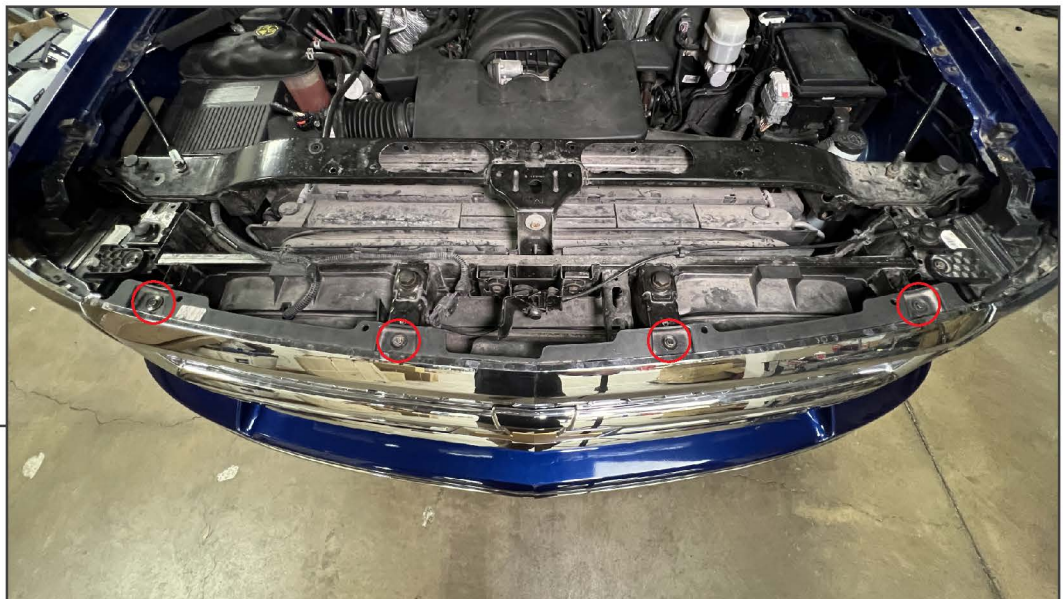

Remove (4) 10mm bolts from the top of the grille assembly. Then, firmly pull the grille away from the vehicle to disengage the various metal retaining clips around the perimeter and center of the grille. Remove the grille from the vehicle and set aside.

Note: If any metal retaining clips remain inside the vehicle radiator support, remove the clips using a pry tool.


STEP 3

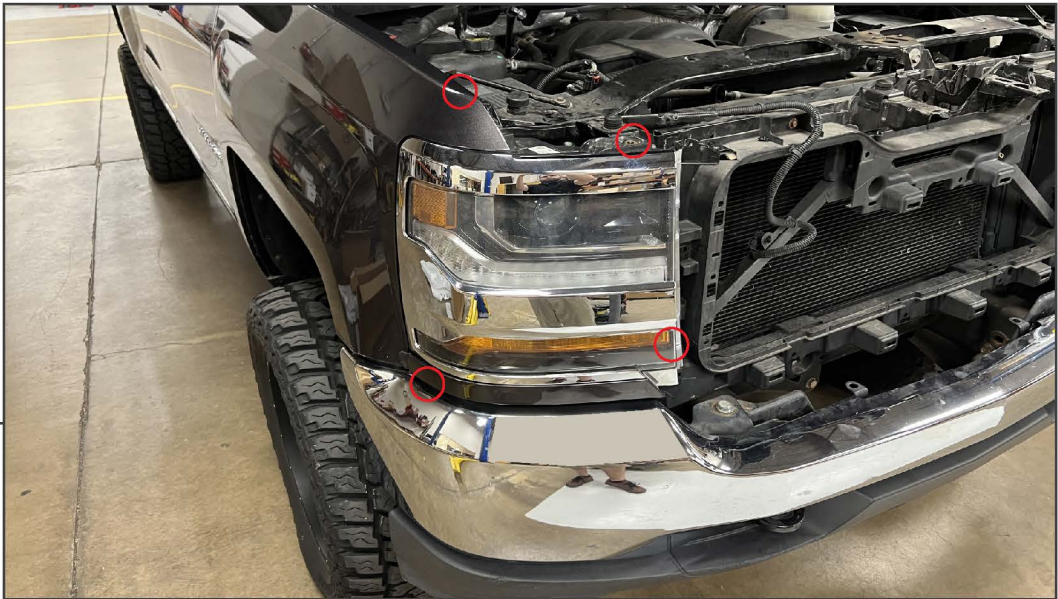

Remove the RH side headlight trim ring, and remove (4) 10mm bolts from the headlight assembly. Pull the headlight assembly away to reveal the wiring harness. Splice the LED light harness into the parking lamp circuit following the diagram below using the (2) scotchlok connectors.

<u>Vehicle Parking Lamp</u>	-	<u>Offroad Light Harness</u>
Gray/Brown (+)	-	Red (+)
Black (-)	-	Black (-)

STEP 4

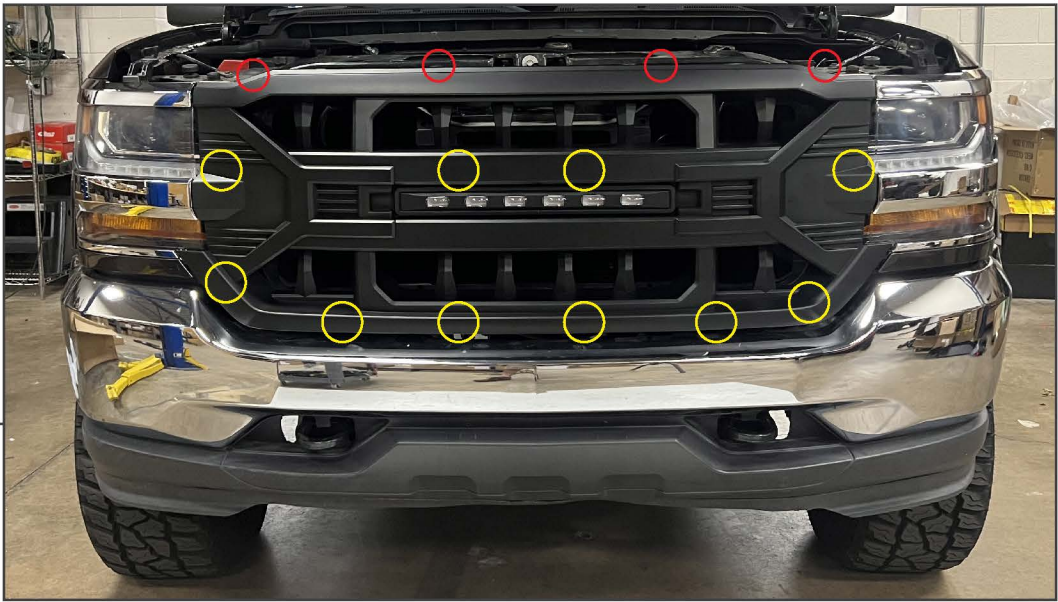

With the offroad light harness wired to the vehicle, install the new grille to the vehicle by evenly pressing into place to secure the metal retaining clips. Then, secure the top of the grille reusing the original (4) 10mm bolts.



STEP 5

Re-install the vehicle radiator cover reusing the original (12) plastic push clips.

Installation is now complete.