



# POWERED HEATED TOWING MIRRORS WITH LED TURN SIGNAL

(2007-2013 SILVERADO / SIERRA)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Mirror Assembly
- (1) RH Mirror Assembly
- (2) Red/Black Harness [Turn Signal]
- (2) Purple Harness [Backup Lamp]
- (6) Plastic Clips
- (6) Cable Ties
- (1) Scotchlok Connector
- (1) Fuse Tap

### TOOLS REQUIRED

---

- Small Pry Tool
- 10mm Socket
- Ratchet w/ Extension
- Flexible Wire Guide

SKU # S192266 /  
S192267



---

**STEP 1**

It is recommended to lower the vehicle window before disassembly. Open the vehicle door.

Use a small pry tool to remove the door lock plastic lock. Then, lift the door lock trim upwards and away from the door. Set the trim and lock aside.



---

**STEP 2**

Remove the trim panel under the grab handle behind the window switch. Remove (2) 10mm bolts.



**STEP 3**

Use a small pry tool to remove the cover around the front grab handle. Then, remove (2) 10mm bolts from the grab handle. Set the grab handle aside.

**STEP 4**

Use a small pry tool to remove the cover behind the door release handle. Remove (1) 10mm bolt from the door panel.

**STEP 5**

Use a pry tool around the trim along the top of the door panel. Set the trim panel aside.

**STEP 6**

Use a small pry tool around the outer perimeter of the door panel to release the door panel plastic retaining clips. Lift the door panel away from the door lock and window channel.

Disconnect the door release cable from the door release handle and unplug the window switch and lock connectors, or carefully hang the door panel.



## STEP 7



Locate and unplug the mirror harness from the vehicle door harness. Remove any mirror harness retainers from the door.

## STEP 8



While supporting the mirror, remove (3) 10mm nuts from the mirror assembly. Remove the mirror assembly and set aside.

## STEP 9



Identify the mirror wiring harness connectors. Depending on vehicle OE equipment, splicing the lighting into the vehicle may be required.

**Red & Black = Turn Signals:** If the vehicle is wired for mirror turn signals, simply plug the red & black connectors on the mirror harness together. Vehicles without power mirrors, use the red & black harness to add the turn signal function on each side. See step 11 for wiring routing.

**Purple = Backup Lamp:** See step 11.

## STEP 10




Fit the new mirror wiring harness through the door. Fit the new mirror to the vehicle, and secure evenly into place using (3) M6 flange nuts.

Plug the new mirror harness into the vehicle mirror harness. If necessary, use (3) plastic clips and (3) cable ties to secure the mirror harness to the door.




## STEP 11

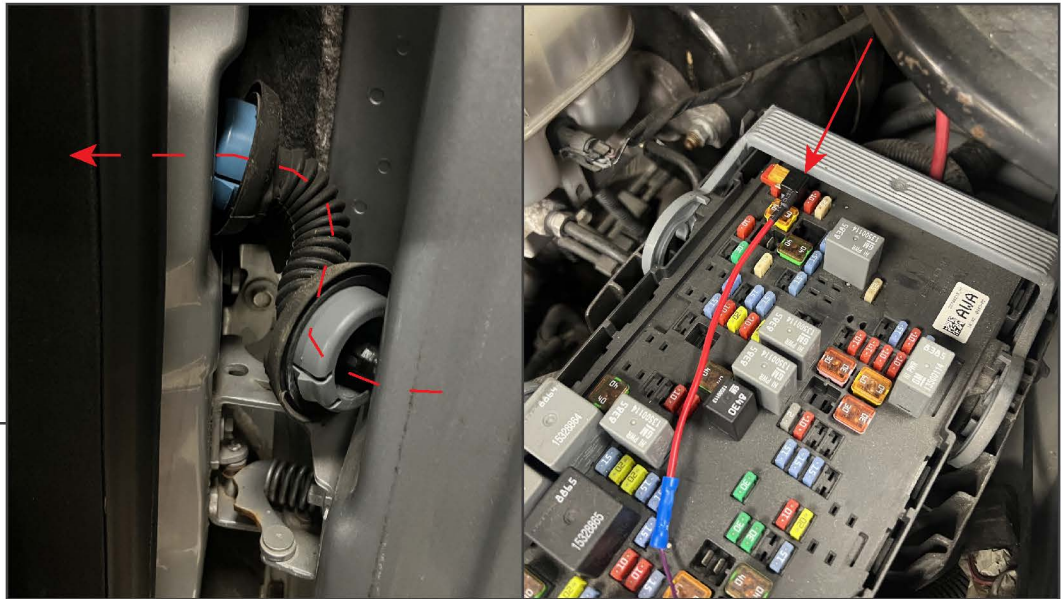

Disconnect the door wiring loom from the chassis and door. Then, use a small flexible wire guide to guide the wire lead into the vehicle cabin.

- Route the passenger side lead towards the driver side.
  - Route the driver side lead only into the engine bay through a suitable firewall grommet.
  - Add the included fuse tap to the driver side lead, and add to **fuse # 10**. Install fuse box cover.
- With the driver side lead neatly routed, use the included scotchlok connector to tap into the driver side lead. The backup lamps will power on with the vehicle running and in reverse gear.

## STEP 12

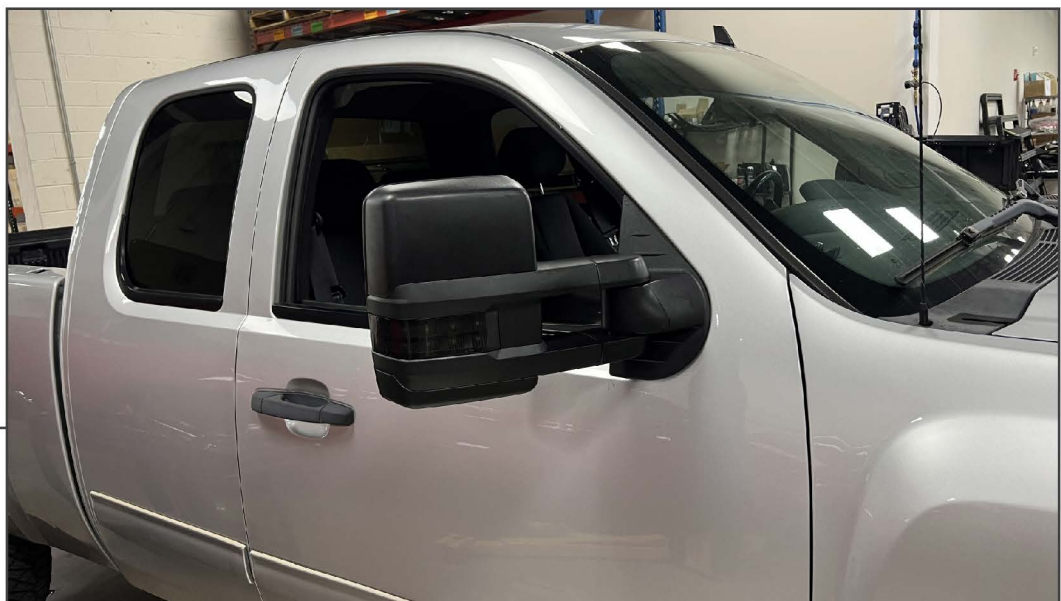

Installation is now complete.