

FRONT BUMPER MOUNTED 20-INCH LED LIGHT BAR AND BRACKET

(2007-2013 SILVERADO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) 20" LED Light Bar
- (1) Mounting Bracket
- (2) M8x1.25 x 25mm Allen Bolts
- (2) M8x1.25 x 20mm Hex Bolts
- (2) M8 Lock Washers
- (2) M8 Flat Washers
- (2) M8 Spacers
- (1) 6mm Allen Key

TOOLS REQUIRED


- 10mm Socket/Wrench
- Ratchet
- 6mm Allen Key

STEP 1



Remove the (3) 10mm bolts from the front bumper slot.

STEP 2

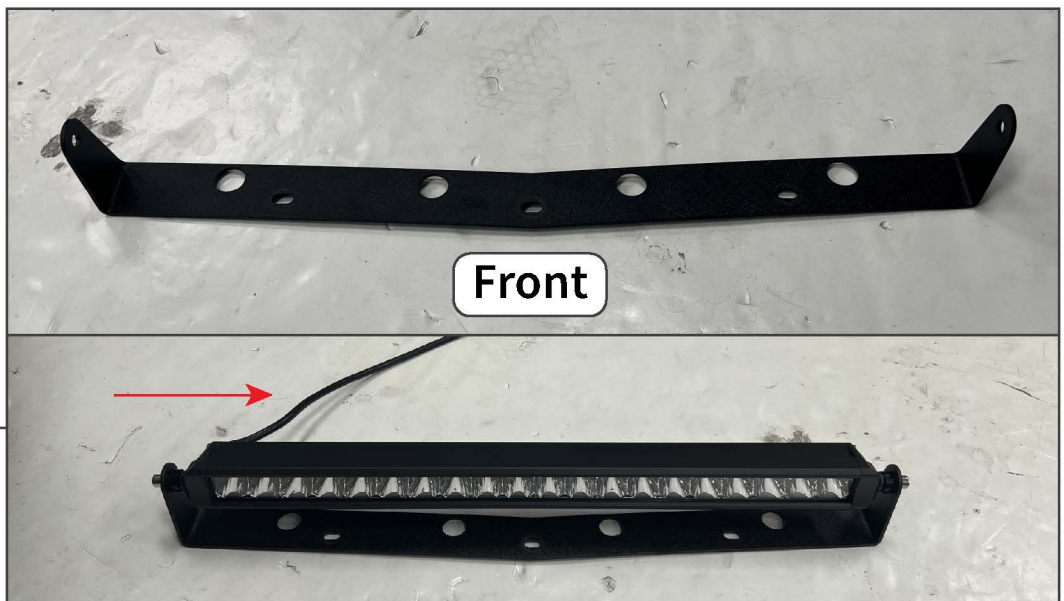

Identify the front/rear of the mounting bracket. Then, place the light bar onto the mounting bracket, ensuring the wiring harness lead is on the passenger's side of the vehicle when mounted.

STEP 3



Use the included (2) M8 Allen bolts, (2) M8 lock washers, (2) M8 flat washers, and (2) M8 spacers to loosely secure the light bar to the bracket. The spacers will fit between the light bar and the bracket.


If necessary depending on application, the included (2) M8 hex bolts can be used in place of the Allen bolts.

STEP 4



Fit the light bar and bracket through the rear of the bumper into the bumper slot. Secure the light bar assembly into place using the original (3) 10mm bolts. Tighten the hardware evenly until secure.

STEP 5

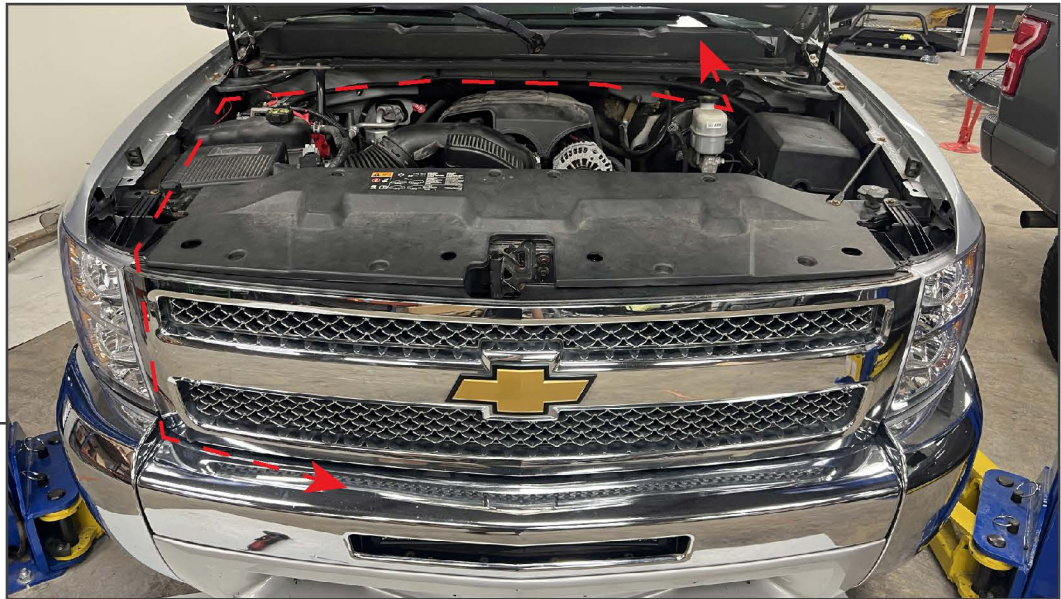

Carefully route the wiring harness across the vehicle.

- Plug the light bar into the harness connector.
- Route switch into vehicle through suitable firewall grommet. Secure switch to dashboard.
- Connect Red ring terminal to battery +.
- Connect Black ring terminal to battery -.
- Mount relay to a secure location.

STEP 6



Test the light bar, and adjust the light bar for best lighting output. Tighten the light bar adjusting hardware once properly adjusted.

Installation is now complete.