




# Installation Guide

Armor Grille  
For 2019-2021 Chevy Silverado 1500  
SKU # AMCHCA00124 & AMCHCA00125 & AMCHCA00126

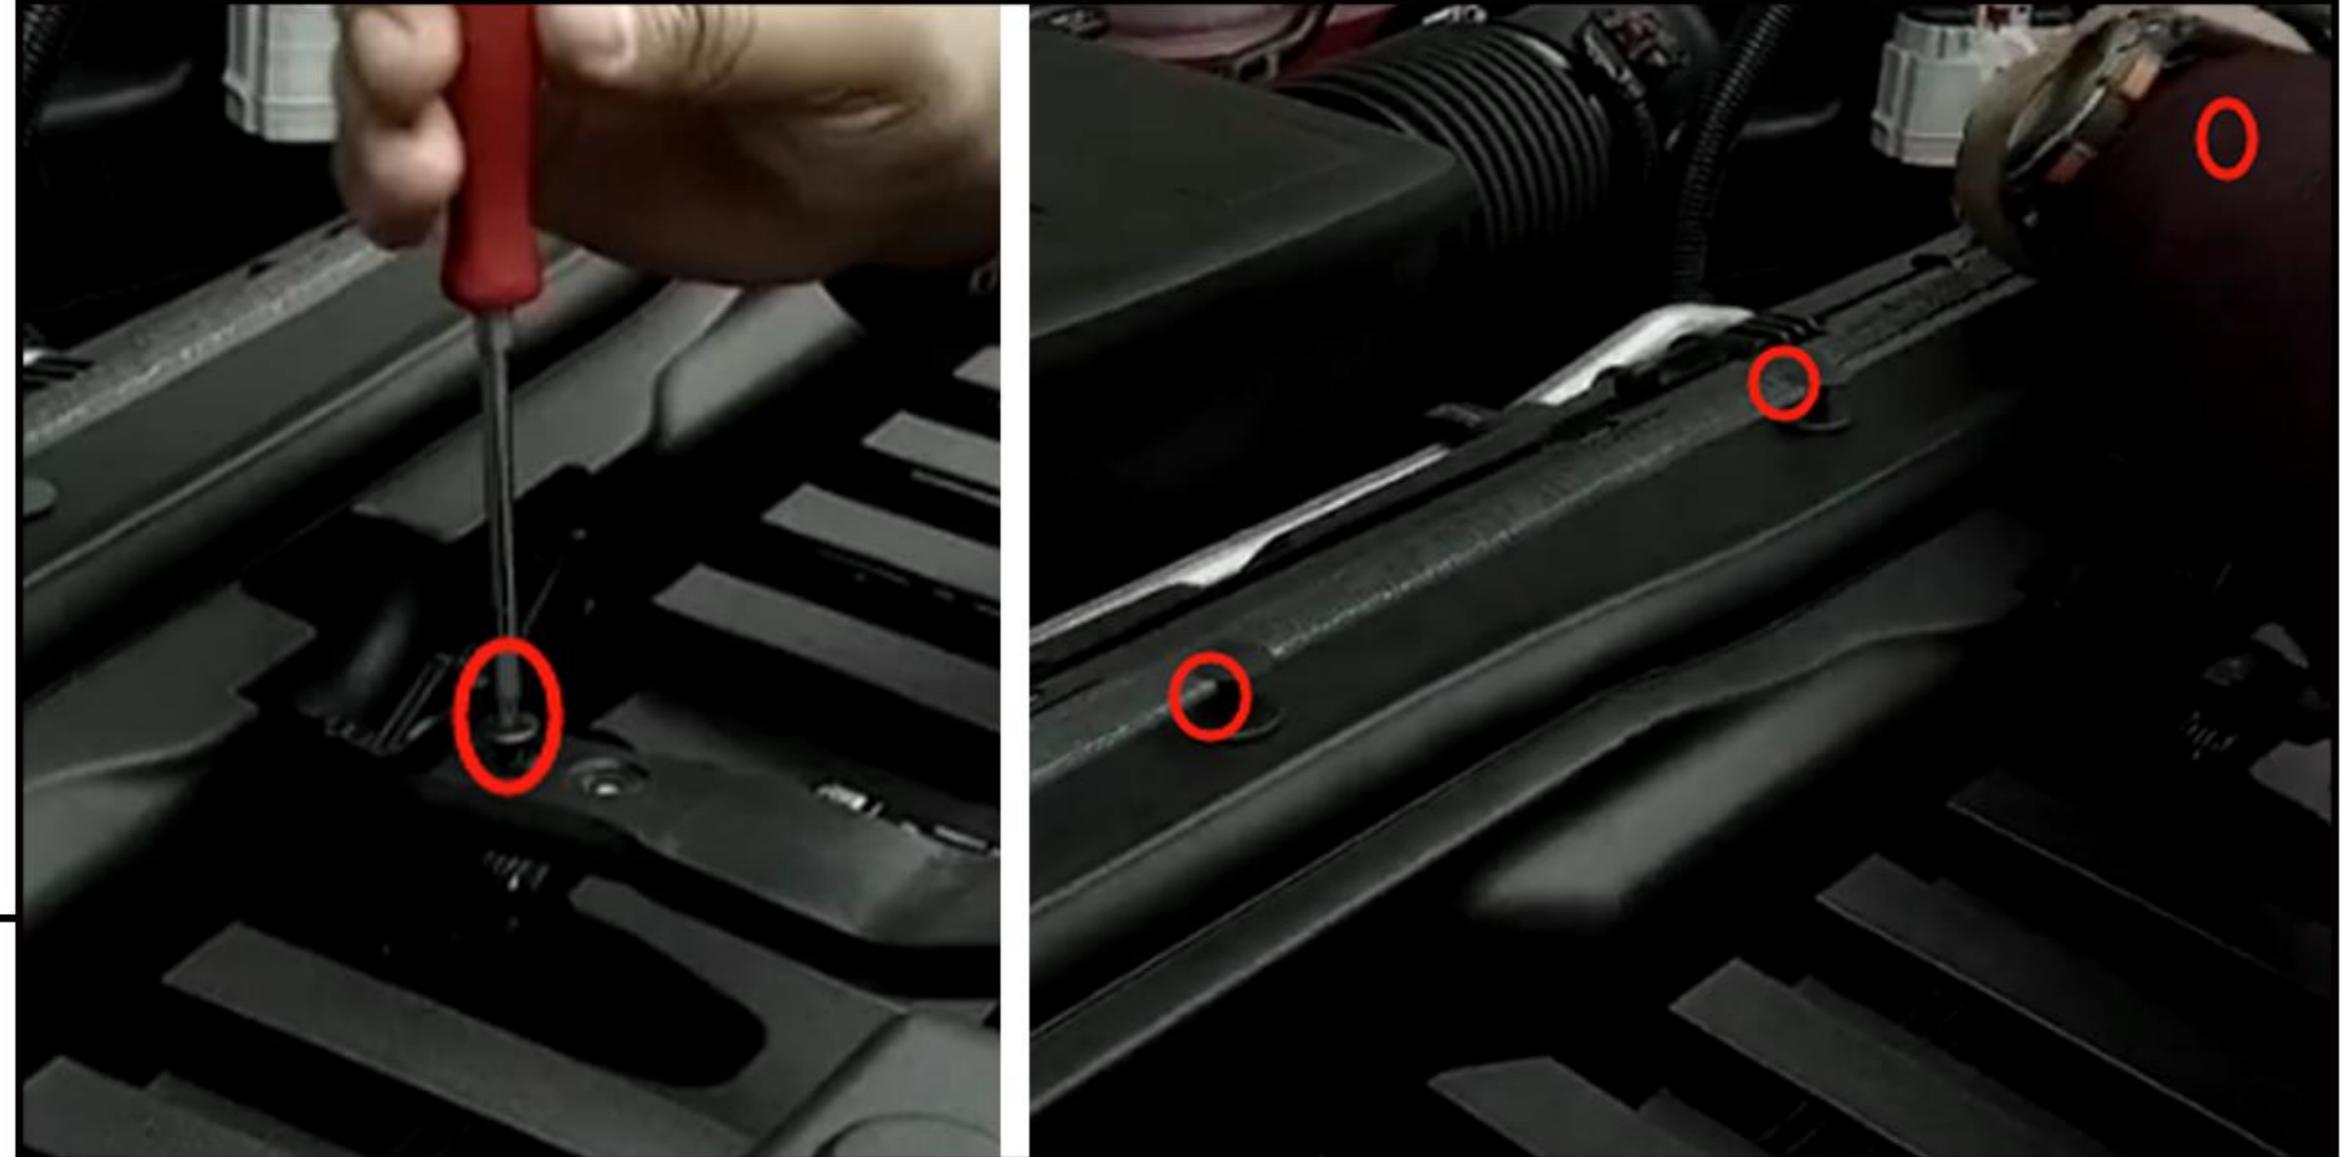


STEP 1

Open the hood, remove the 2 Torx screws attaching it to the hood latch to remove the hood latch handle. Remove the radiator cover by removing the plastic retaining clips.



STEP 2

Remove the 4 bolts that hold the factory grille to the frame. Unfasten the remaining clips holding it to the truck: Start with the center bar corners over the headlights, each corner is fastened to the truck with 4 white plastic clips. Release these clips (will be reused) with flat-head screwdriver. Finally pry off the remaining metal clips that run along the edge of the center portion of the factory grille. With all clips unfastened from the truck, remove the grille and place it facedown.

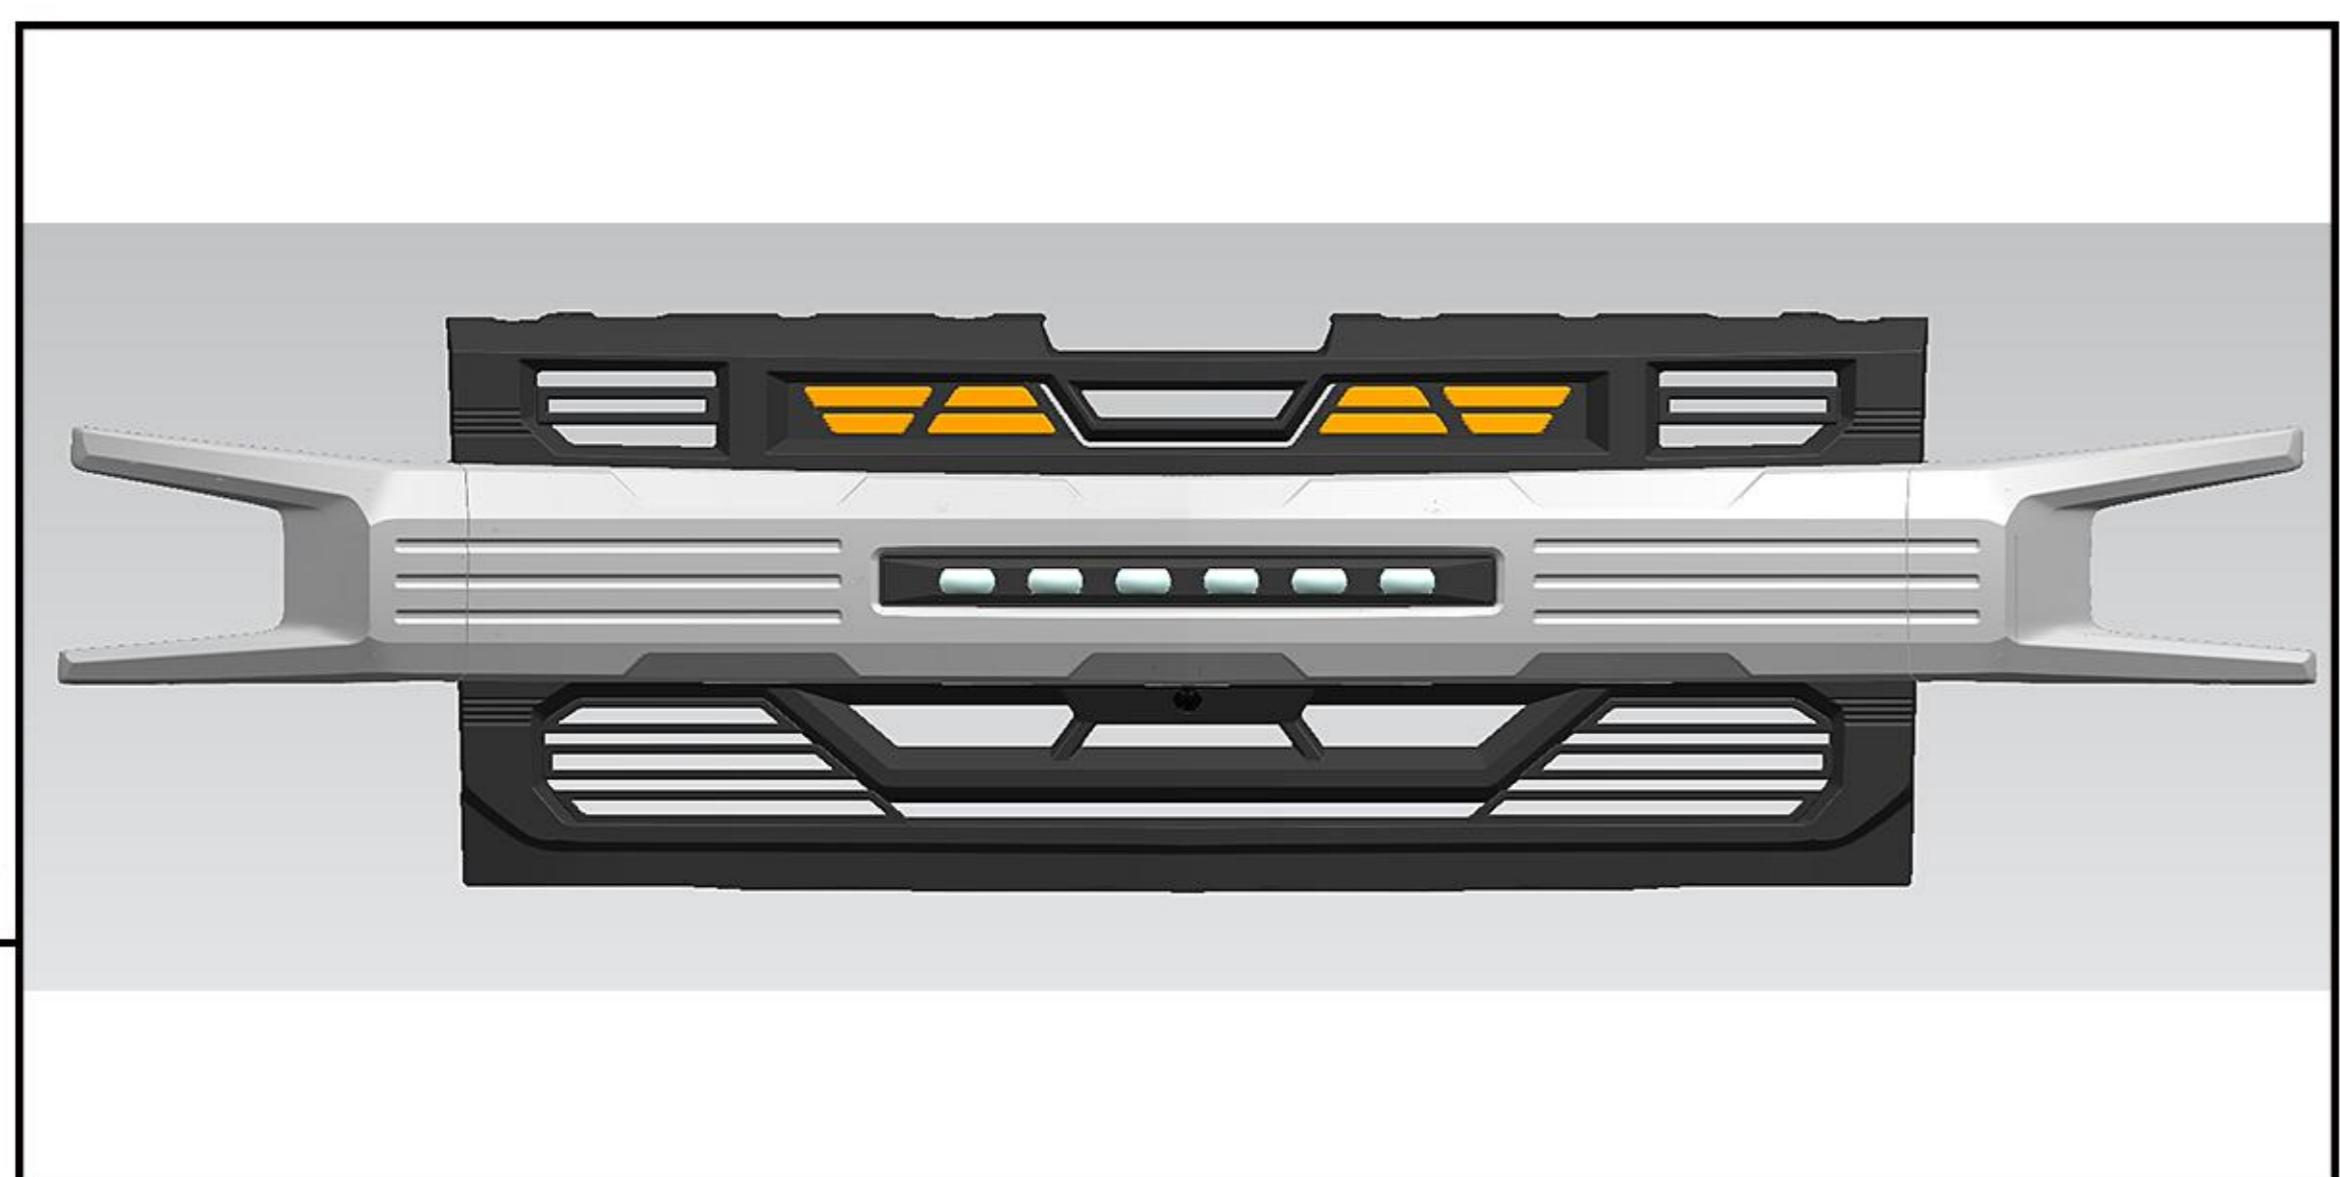

STEP 3

About Wiring:  
The red wire connects to the ACC,  
the black wire connects to the negative of battery,  
the yellow wire connects to the turn signal.



STEP 4

Follow the step 1-2 in reverse order to install the grille to complete the installation.