




Installation Guide

Armor Grille
For 2019-2021 Chevy Silverado 1500 LT version

SKU # AMCHCA00130 & AMCHCA00131 & AMCHCA00132

STEP 1

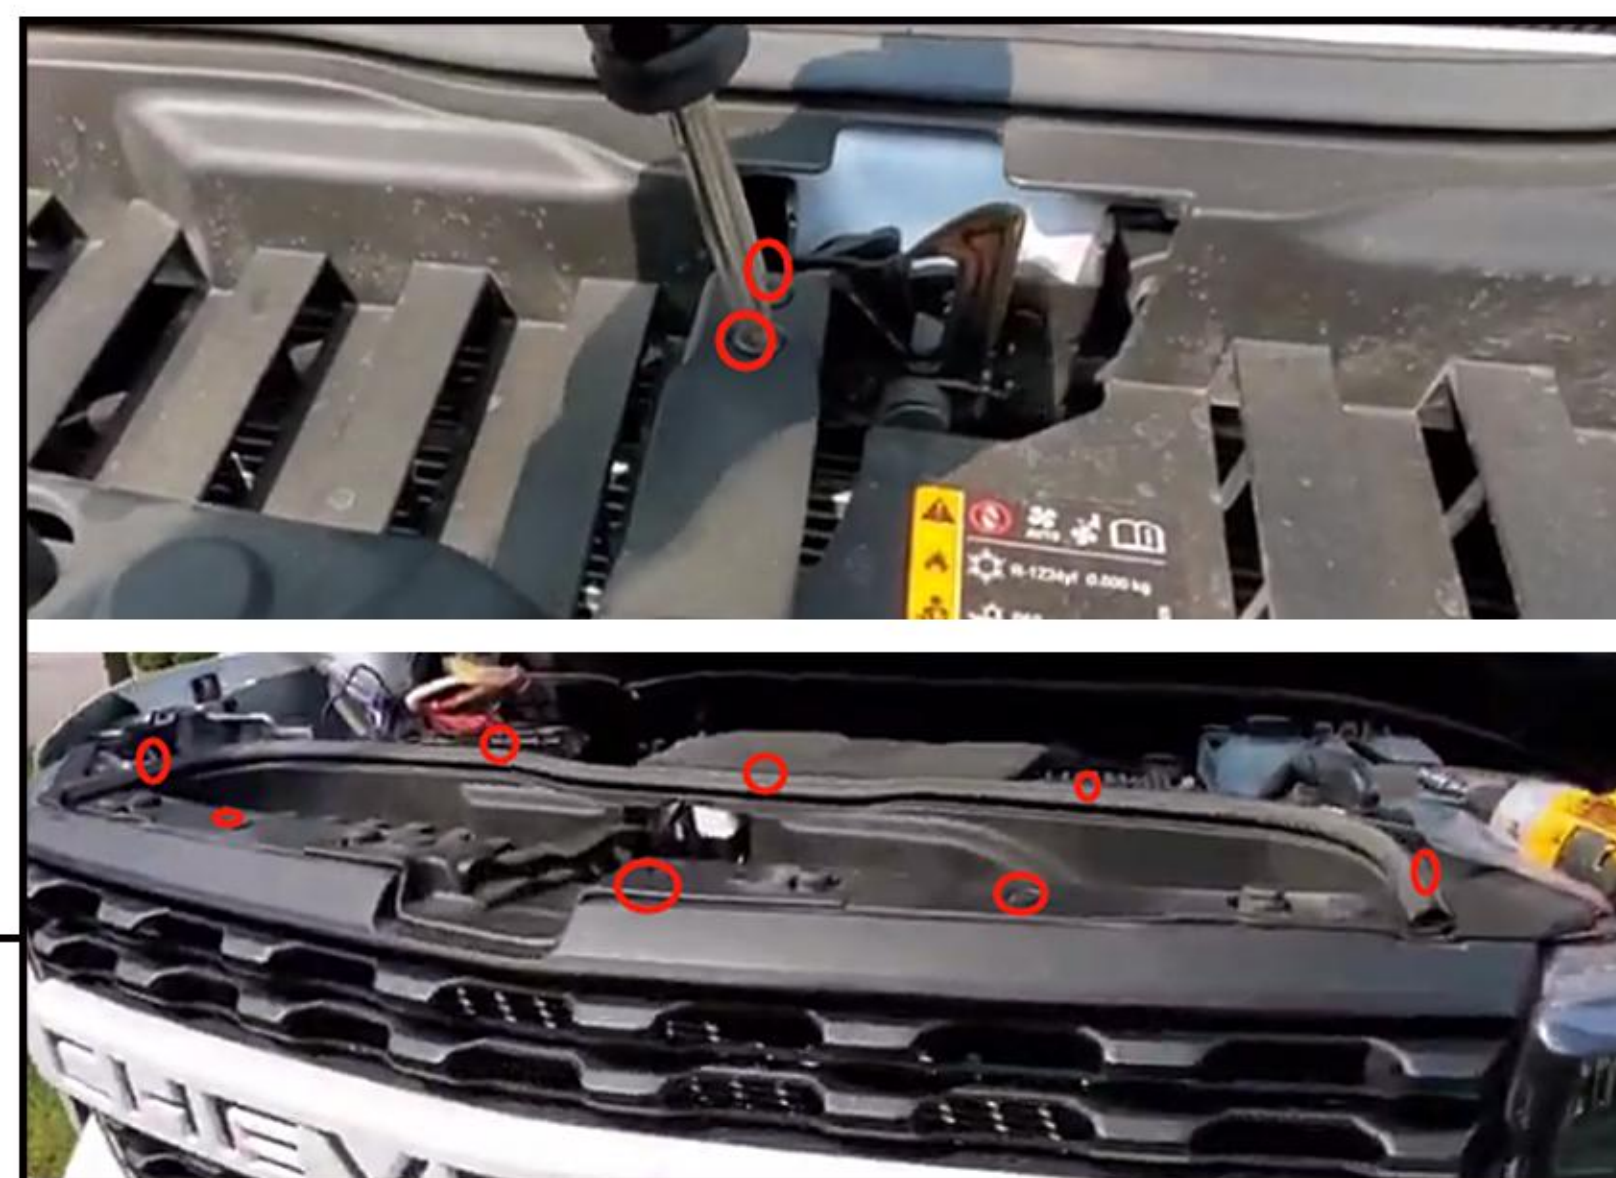


Open the hood, remove the 2 Torx screws attaching it to the hood latch to remove the hood latch handle. Remove the 8 plastic retaining clips to take the radiator cover out of the car.

STEP 2




Remove the four 10 millimeter, then gently pull the grille outward to remove the old grille.

STEP 3

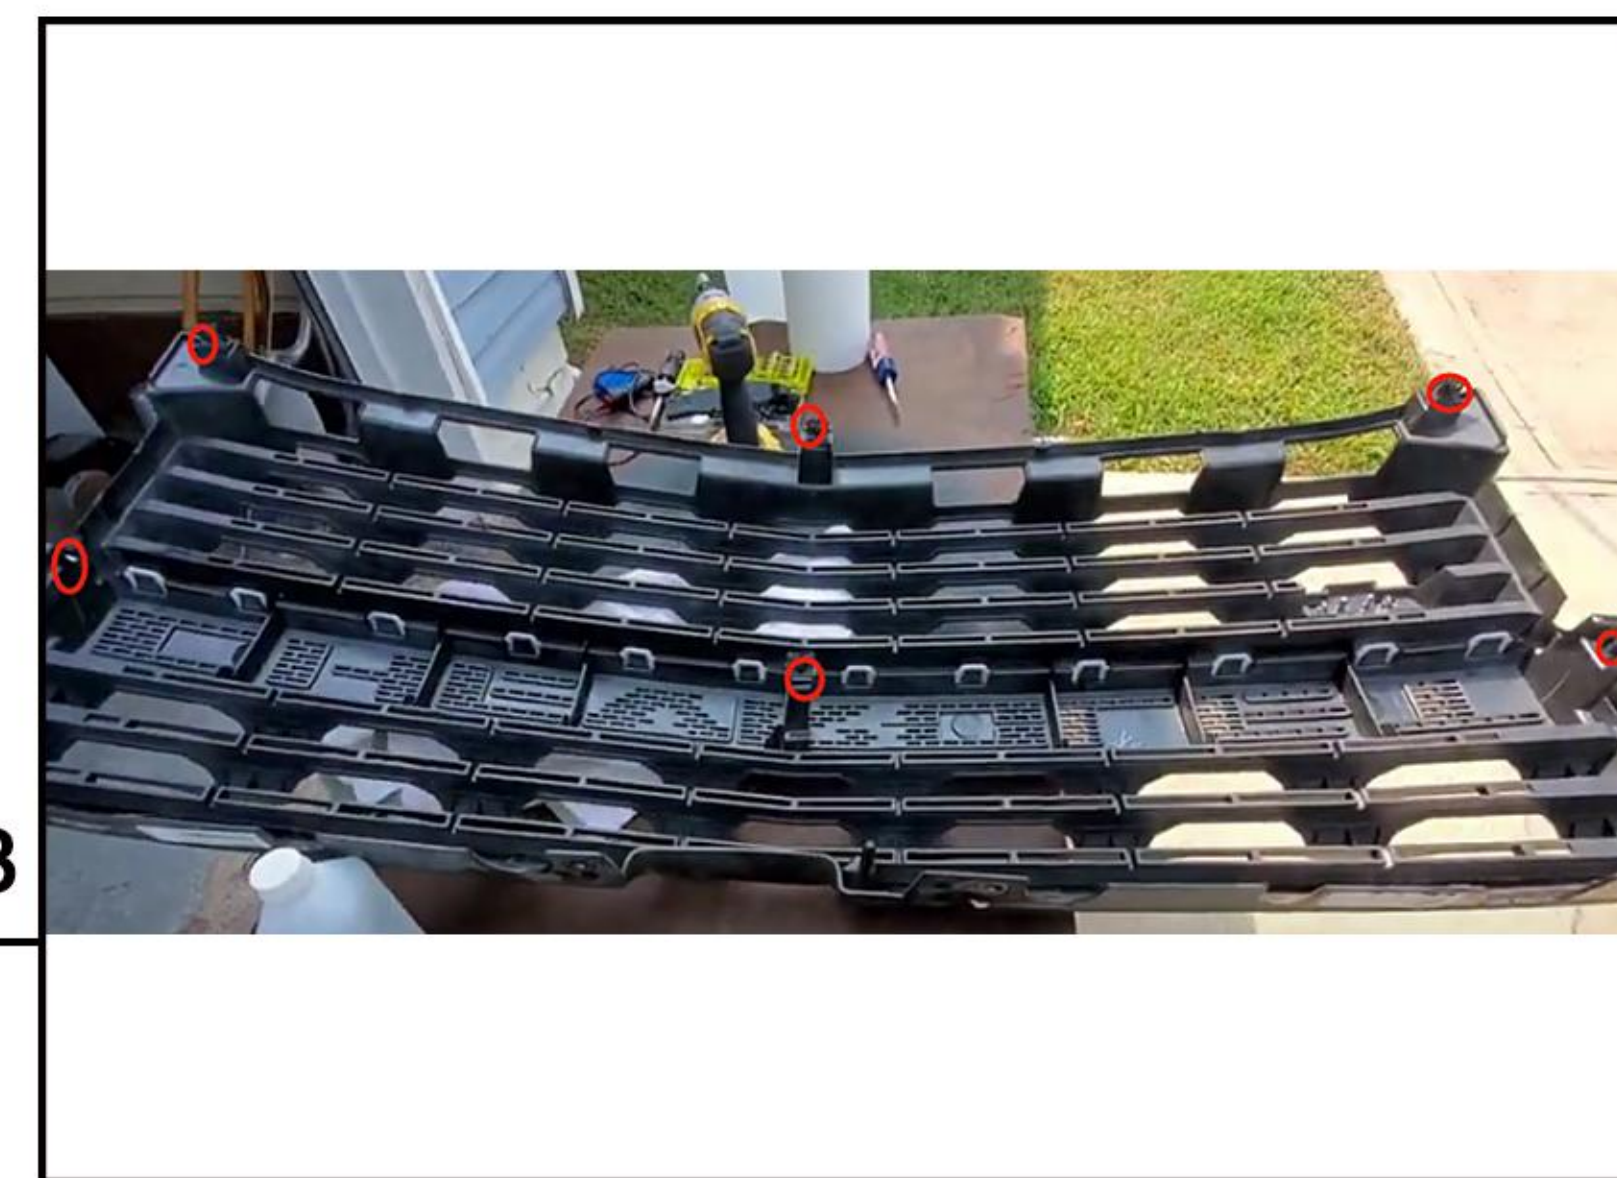

Remove the 6 metal clips and install them on the new grille. (or just use the new clips that come with the new grille)

STEP 4

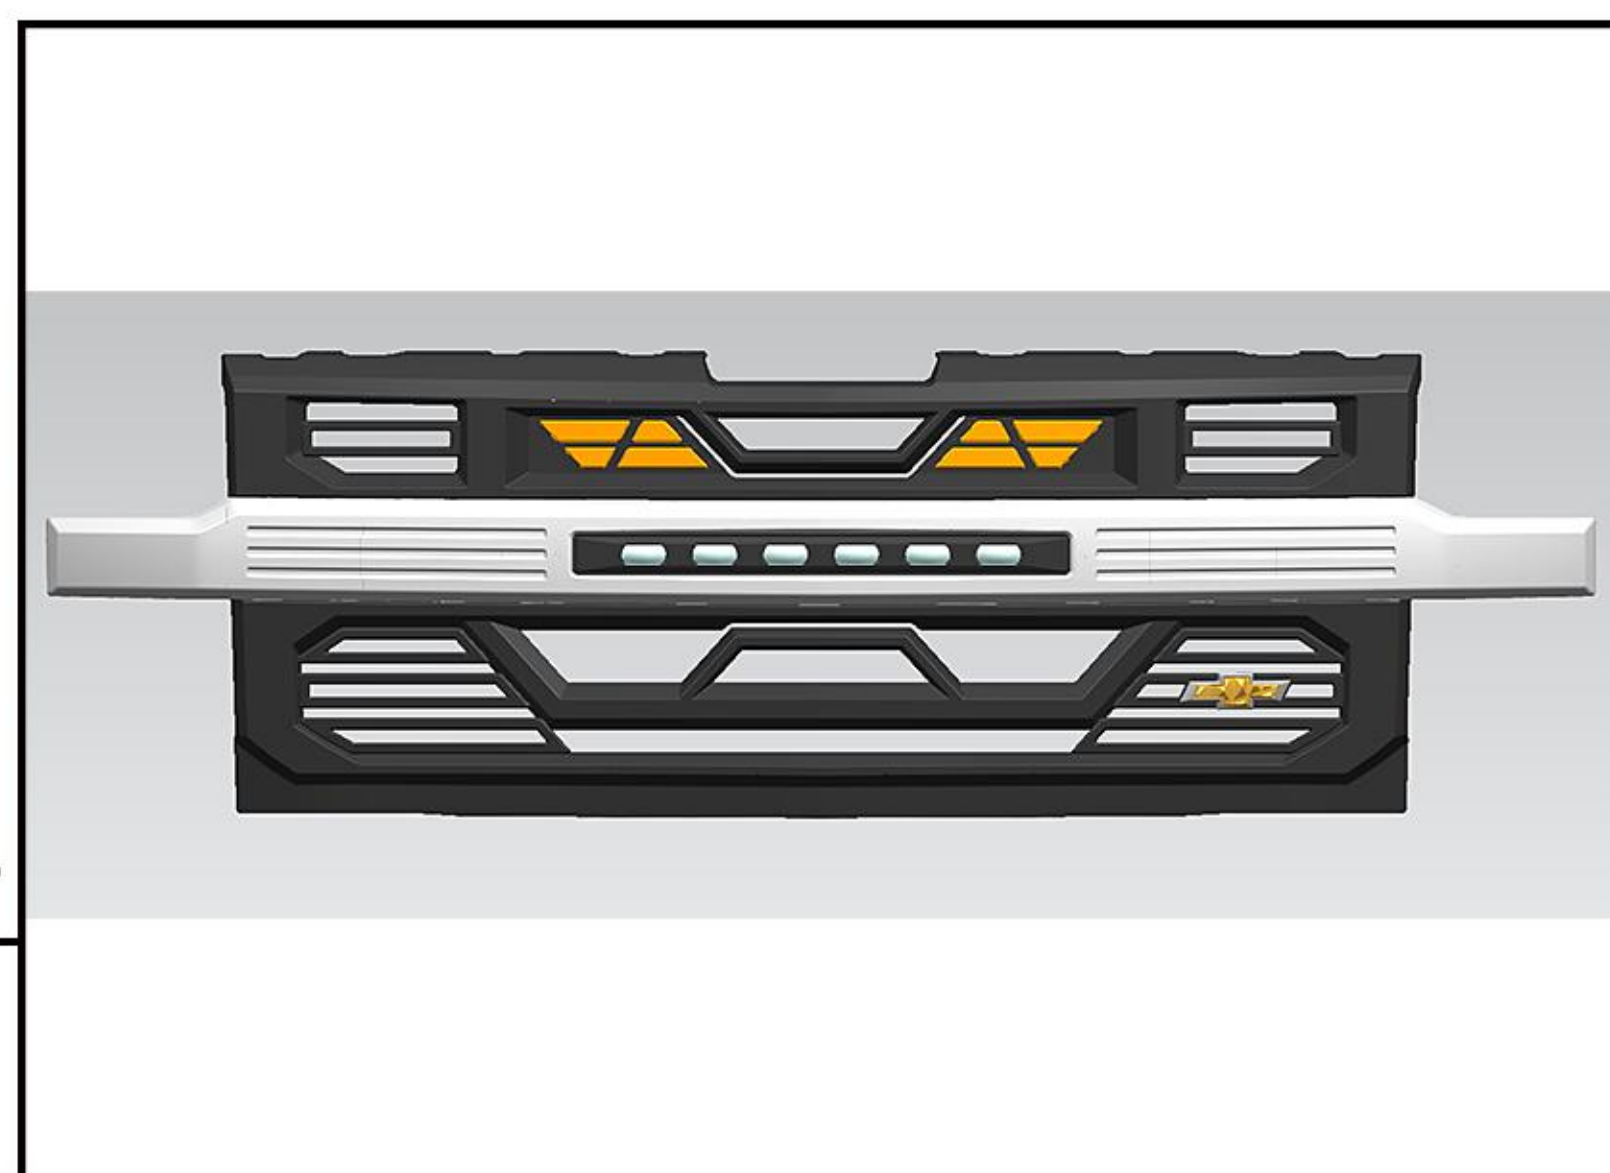

About Wiring:
The red wire connects to the ACC,
the black wire connects to the negative of the battery,
the yellow wire connects to the turn signal.

STEP 5



Follow the step 1-2 in reverse order to install the new grille to complete the installation.