


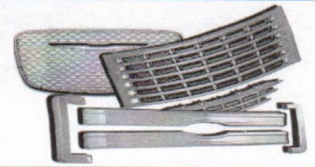

## CCI® GRILLE OVERLAYS



FELT RAG OR BRUSH FOR PRIMER  
ADHESION PROMOTOR SUPPLIED.




REMOVE CONTENTS FROM BOX.  
VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY  
BEFORE INSTALLATION. PICTURES ARE  
FOR DEMONSTRATION ONLY.

### INSTALLATION PROCEDURE

1. Open the box and thoroughly inspect all pieces of your CCI® Grille Overlay for any shipping damage or manufacturer defects before product installation or removal of 3M protective adhesive film strips. If damage or defects are found, place product back into its box with all its original packaging and contact your distributor for credit or replacement. Any 3M protective adhesive film removed, or product installed may void product warranty for shipment damage or manufacturer's defects.
2. Hold your CCI® Grille Overlay up to the OEM grille without installing or removing the protective film from the tape (if applicable). Verify your CCI® Grille Overlay matches the physical design of the OEM grille. If the design does not match, contact your distributor before attempting installation.
3. Wipe clean all areas that your CCI® Grille Overlay will cover. Remove any dust or dirt that may otherwise hinder installation.
4. If your grille doesn't have 3M tape skip to step 6. Use alcohol wipes to clean the area that 3M tape will adhere to on the OEM grille. Then Apply the adhesion promoter to a dry cloth or brush, applying only to the areas of the OEM grille which the 3M tape will make contact. Do not apply to areas of the OEM grille that will be visible after CCI® Grille Overlay installation.
5. Remove protective film from 3M double-sided tape, line up and push into place. Apply firm pressure from the center of the overlay then outwards to areas where 3M tape adheres to OEM grille for a minimum of 30 seconds. The 3M tape needs to bond with the mounting surface and it needs pressure to do this. The CCI® Grille Overlay will seem like it is stuck on when first attaching but keep firm pressure for at least 30 seconds.
6. Line up CCI® Grille Overlay properly and push into place, applying firm pressure from the center of the overlay then outwards to areas where clips are located until it snaps into place.
7. Repeat steps 2-5 if more than one piece.
8. Wipe down installed chrome with a soft dry cloth to give your new CCI® Body Side Molding a showroom shine! Do not use the same towel that you applied promoter to in step four. If applied to the chrome, adhesion promoter may tarnish its finish.

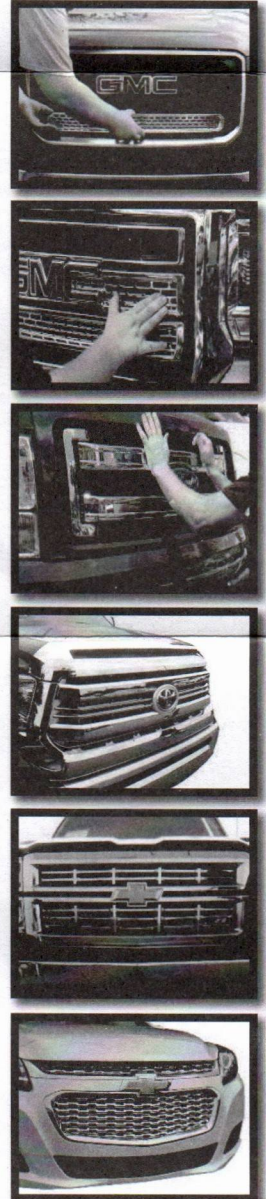

### PRODUCT CARE

- Regular vehicle cleaning of dirt, grime or salt twice a month, year round.
- Applying a high-quality wax to help protect and maintain the finish of the product is recommended.
- **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and can scratch the finish leading to corrosion.
- Don't use harsh cleaners or chemicals that could damage the finish.
- Failure to keep your product clean may result in pitting and or peeling.

#### DISCLAIMER:

CCI® guarantees our chrome products against material and workmanship defects for as long as you own your vehicle. Any defects resulting from faulty materials, finish or workmanship will be warranted by CCI® and repaired, replaced, or credited at our discretion. CCI® assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, normal wear and tear or neglect will not be warranted by CCI®.