



ZR2 STYLE GRILLE WITH AMBER LED LIGHTS

(2022-2024 SILVERADO 1500)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Grille Assembly
- (1) Emblem Base
- (1) Fuse Tap
- (1) Ring Terminal


TOOLS REQUIRED

- T-15 Torx Socket
- Ratchet
- Panel Removal Tool




STEP 1

Remove (2) T-15 Torx bolts from the hood release latch.

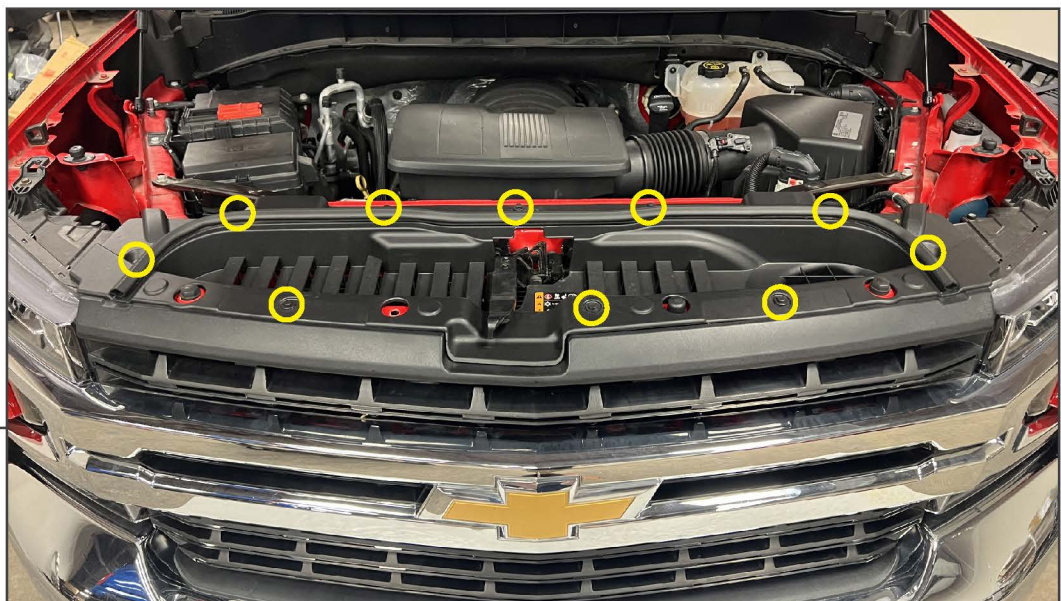

STEP 2

Remove (10) plastic push clips from radiator cover. Remove the cover from the vehicle.

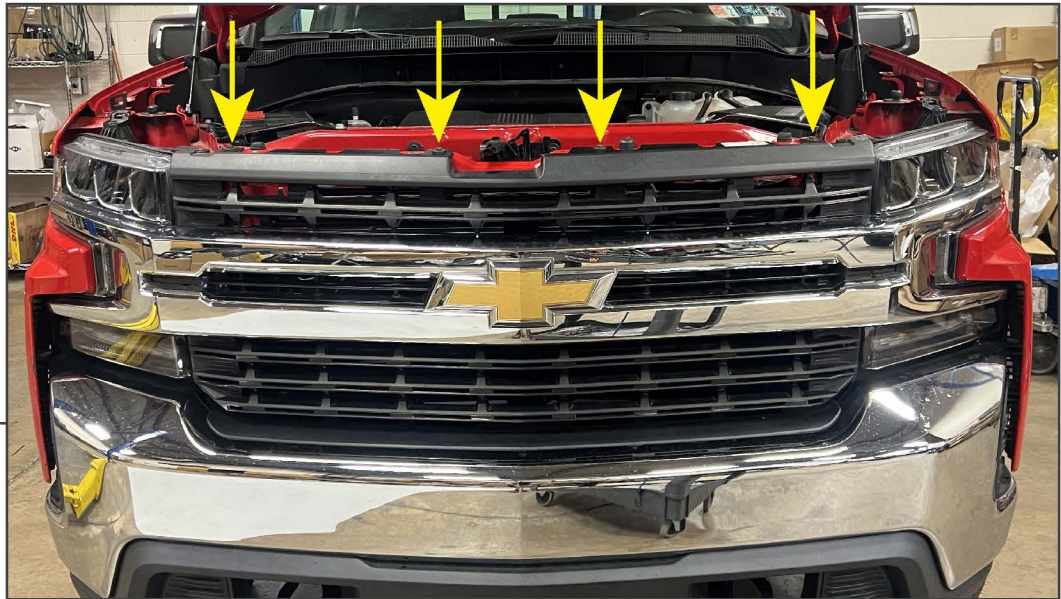


STEP 3

Remove (4) 10mm bolts from the top of the grille.



STEP 4

Remove (4) T-15 Torx bolts on each side of the vehicle securing the inner fender liner to the front painted trim panel. Three bolts are on the edge and one bolt is on top.

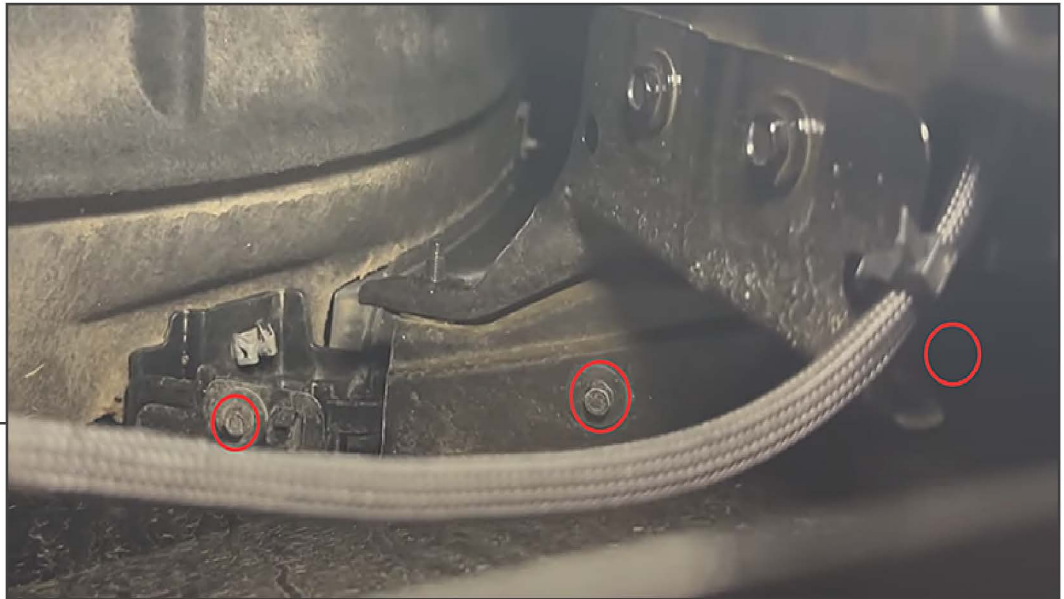
STEP 5

Locate and remove the (3) bolts on each side of the vehicle securing the painted trim to the vehicle.

STEP 6

Firmly pull the painted trim panel away from the vehicle to dislodge the retainers. Then, pull the entire painted panel away from the vehicle and place on a soft surface.

STEP 7

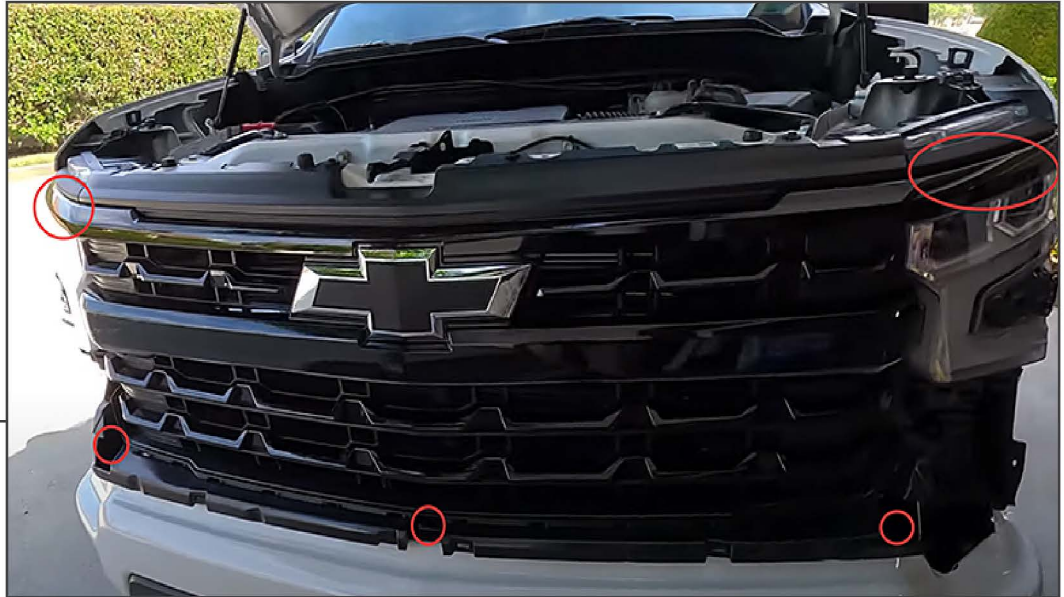


Remove (3) 10mm bolts along the bottom of the grille.

Use a pry tool to dislodge the upper corners, and then lift the grille away from the vehicle and set on a soft surface.

Remove the emblem from the original grille and install into the new grille.

STEP 8

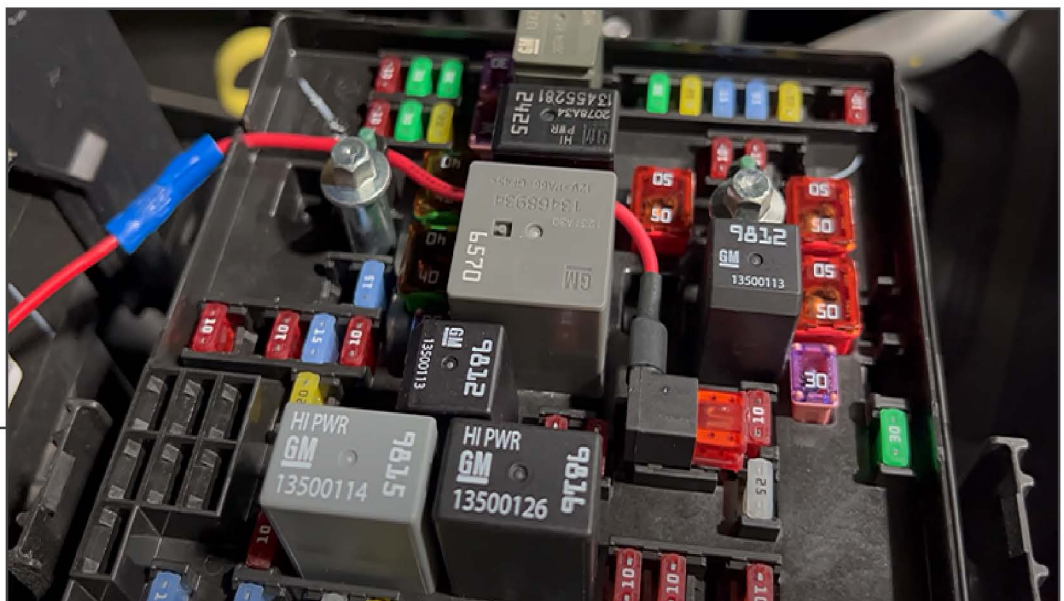

Install the included (1) fuse tap to the Positive (Red +) wire on the amber LED light harness. Install the (1) Ring terminal to the Ground (Black -) wire on the amber LED harness.

Fit the new grille to the vehicle, and route the LED harness to the vehicle fuse box. Fit the fuse tap into the fuse shown above, notch the fuse box lid as necessary for adequate harness routing. Connect the ground ring terminal to a suitable chassis ground.



STEP 9

Install the grille to the vehicle using OEM hardware. Re-install the OEM panels using OEM hardware following Steps 1-7 in reverse order.

Installation is now complete.