

## LED BED LIGHTS

(2019+ SILVERADO/SIERRA 1500)  
(2020+ SILVERADO/SIERRA 2500HD & 3500HD)

### INSTALLATION INSTRUCTIONS


#### CONTENTS

(2) LED Bed Lights

#### TOOLS REQUIRED


T-15 Torx Bit & Driver  
Pry Tool

SKU #S211876

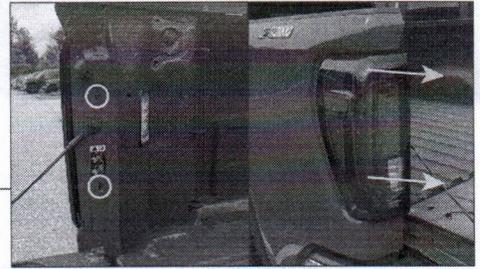

STEP 1

Remove (2) T-15 Torx bolts from the vehicle tail light assembly. Then, firmly pull the tail light straight back from the vehicle bed to dislodge the alignment retainers.

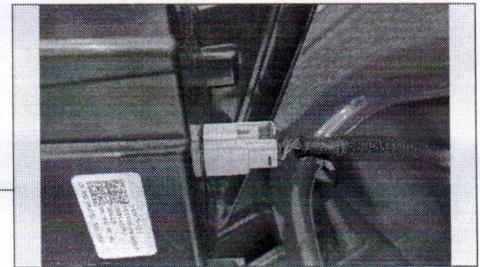


STEP 2

Locate the tail light electrical connector. Slide the red connector lock back, then press the center tab inwards to unplug the connector from the tail light. Set the tail light aside.



STEP 3


Locate the bed light electrical connector. Slide the red connector lock back, then press the center tab inwards to unplug the connector from the bed light.

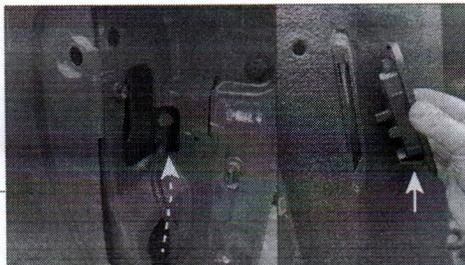

STEP 4

Using a pry tool, press the lower bed light retaining tab, while pushing the bed light out of the vehicle bed.

Note: If the vehicle has a spray-in bedliner, the bedliner may prevent the light from moving. It is recommended to clean the bedliner from the perimeter of the bed light before attempting to remove the bed light, if applicable.

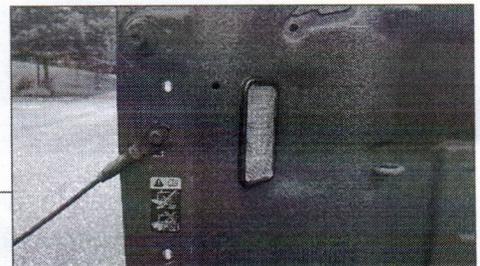

STEP 5

Ensure the bed hole is clean of any bedliner or debris. Then, fit the top of the new light into the bed, and hinge the bottom into place. Press the bottom of the light until fully seated, this may take moderate pressure.



STEP 6

Plug in the bed light, then re-install the vehicle tail light.

Repeat Steps 1-6 for the remaining bed light. Installation is now complete.