

OE STYLE TAIL LIGHT

(2019-2023 SILVERADO / SIERRA WITH OE LED TAIL LIGHTS)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Tail Light Assembly
(1) Wiring Harness

TOOLS REQUIRED

T-15 Torx Bit / Driver
Panel Pry Tool
90 Degree Pick


STEP 1




From under the vehicle, locate the tail light wiring harness connector behind the rear bumper. The harness is located on the spare tire crossmember.

Use a 90 degree pick to slide the red lock back on the connector, and then push the connector tab and separate the connectors. Then, use a pry tool to separate the harness from the vehicle bed.

STEP 2

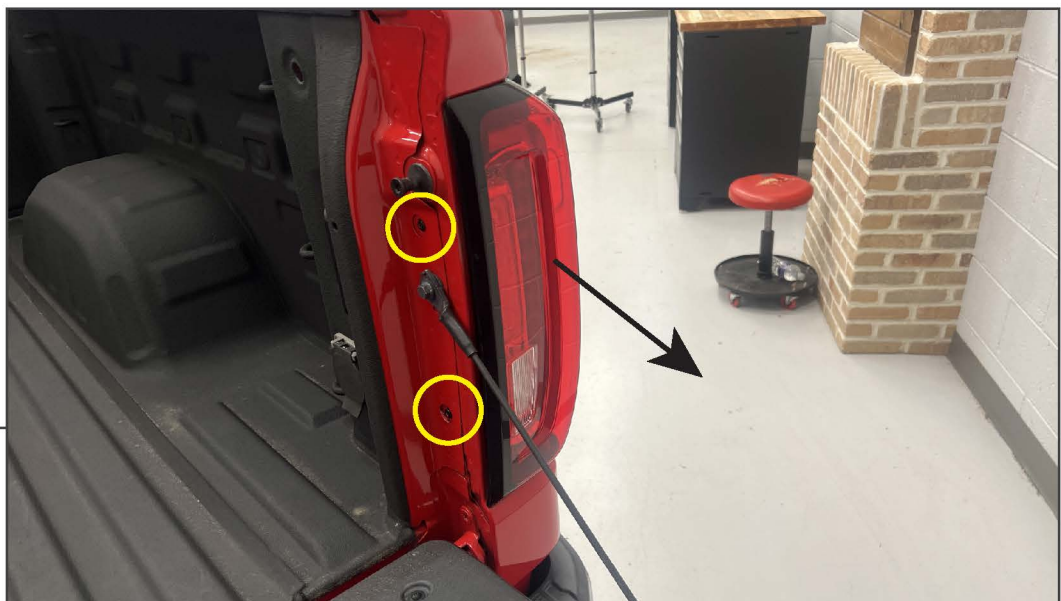

Lower the vehicle tailgate. Remove (2) T-15 Torx screws from the tail light. Then, firmly pull the tail light rear-ward away from the vehicle.

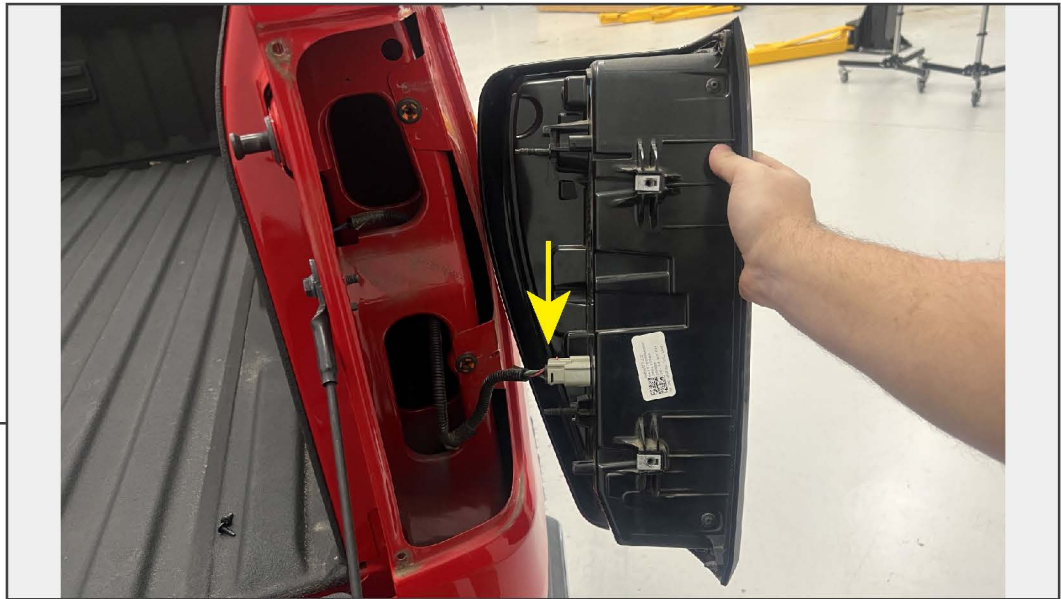

STEP 3

Use a 90 degree pick to slide the red lock back on the connector, and then push the connector tab and separate the connectors. Set the tail light aside.



STEP 4

Locate the bed light electrical connector. Slide the red connector lock back, then press the center tab inwards to unplug the connector from the bed light.

See Step 5 for light removal, if necessary.

STEP 5



If necessary to unplug the light, use a pry tool to press the lower bed light retaining tab, while pushing the bed light out of the vehicle bed.

Note: If the vehicle has a spray-in bedliner, the bedliner may prevent the light from moving. It is recommended to clean the bedliner from the perimeter of the bed light before attempting to remove the bed light, if applicable.

STEP 6



Transfer the OEM wiring harness retainers to the new harness. Route the new harness to the vehicle following the OEM harness route. Plug in all connectors and test lighting.

Once lighting functionality has been confirmed, re-install the LED lights following Steps 1-5 in reverse order.

Installation is now complete.