OE STYLE FRONT OUTER BUMPER FILLER PANEL

(2019-2021 SILVERADO 1500)
(2022 SILVERADO 1500 LD)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Bumper Panel
(3) Screw Clips
(4) Plastic Retainer Clips

TOOLS REQUIRED

T-15 Torx Socket/Driver
Ratchet
Pry Tool/Panel Removal Tool

SKU # S228318


STEP 1



From within the wheel arch, locate and remove the front (3) T-15 Torx screws securing the bumper filler panel to the inner fender liner.

LH Side of vehicle shown above.

STEP 2

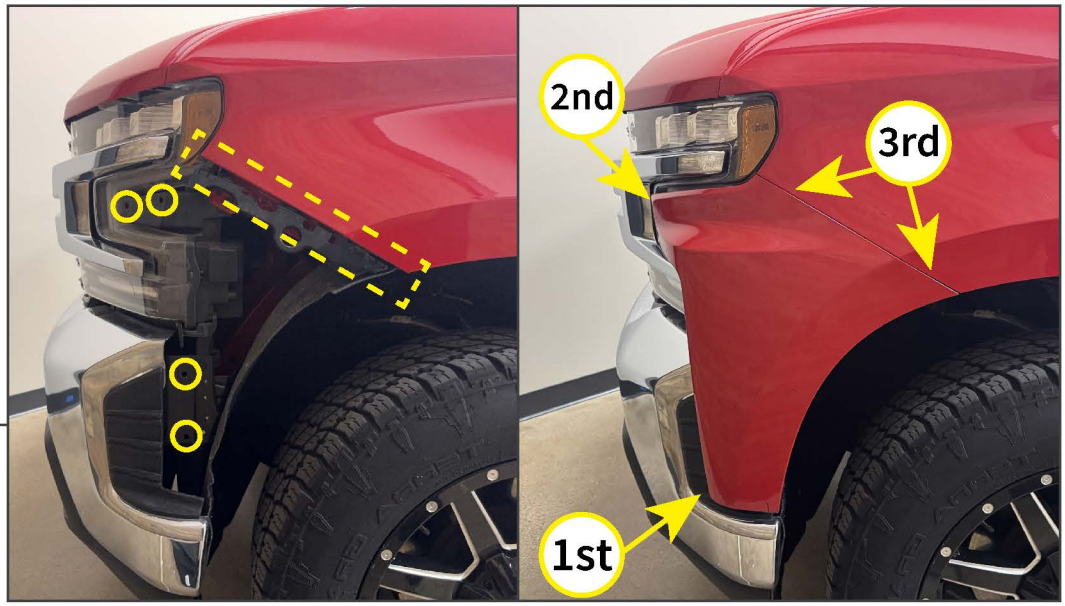

Begin to remove the bumper filler panel by pulling firmly at the bottom of the panel to dislodge (2) retaining clips. Then, pull the bumper filler panel between the grille/headlight to dislodge (1) retaining clip. Firmly pull the bumper filler panel from the friction retainer securing the panel to the fender.


If the OEM retainers remain in the vehicle mounting holes, remove each retainer using a pry tool.

STEP 3



Place the new bumper filler panel on a workable surface. Install the (4) new plastic retainer clips to the designated mounting points on the panel.

STEP 4

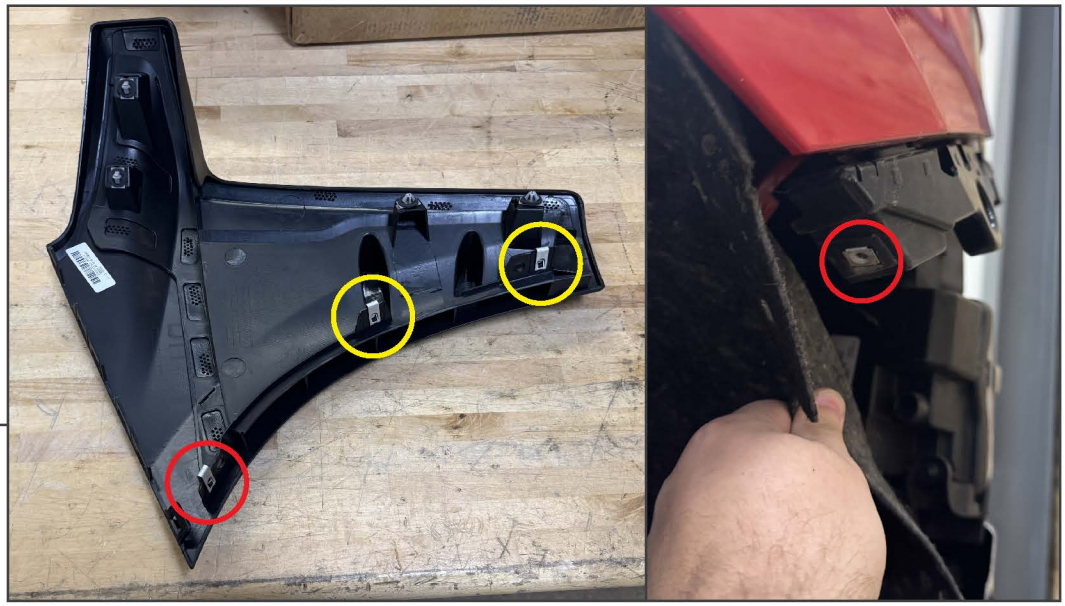

Install the (2-3) new screw clips to the new bumper filler panel.

Take note to the upper most screw clip, some vehicles utilize a screw clip within the fender mount and do not need a clip in the location indicated in RED. Reference the OEM panel or the vehicle fender mount to determine if the screw clip is necessary.

STEP 5



Fit the new bumper filler panel to the vehicle until the fender retainer is secure and all (4) push clips are engaged to the vehicle. Then, secure the inner fender liner to the panel using the OEM (3) T-15 Torx screws.

Installation is now complete.