

INSTRUCCIONES DE INSTALACIÓN

4035 (B - PS) SIDE BAR

99 – 13 Silverado 1500 / 2500, Cheyenne Reg. Cab.

01 – 13 Silverado 2500HD,3500/Sierra Reg. Cab.

Lista de Partes:

Cantidad

P01 (1) Juego de estribos

P02 (2) Brackets delanteros

P03 (2) Brackets traseros

(1) Kit de tornillos que incluye:

T01 (4) Tornillos cab. Hex 1/2 x 1 1/2"

T02 (4) Tornillos cab. hex M12 x 120mm

T03 (8) Rondanas planas 1/2"

T04 (8) Rondanas de presión 1/2"

Herramienta Requerida:

Dado 3/4"

Dado 19mm

Matraca

Dado 18mm


Dado 9/16"

Instrucciones:

Tiempo aprox. de instalación: 30 min.

1. Lea y comprenda perfectamente las instrucciones antes de comenzar la instalación.
2. El juego de estribo consta en lado del conductor y lado de pasajero. Asegúrese de determinar el lado correcto antes de instalar.
3. Localice y remueva los tornillos de montaje de la cabina, conserve las almohadillas de goma y las rondanas de acero.
4. Coloque el bracket delantero y trasero **Nota: En modelos 99 - 04 sustituya los tornillos del vehículo por los tornillos incluidos M12 x 120 mm, rondanas planas 1/2" y de presión de 1/2", en modelos 05 - 06 utilice los del vehículo.** Coloque las almohadillas de goma y las rondanas de acero, en la misma posición que se encontraban antes de removerlas.
5. Monte el estribo sobre los brackets delantero y trasero y sujete utilizando tornillos cab. Hex 1/2 x 1 1/2", rondanas planas y de presión.
6. Haga cualquier ajuste final a la alineación del estribo en el vehículo y apriete toda la tornillería. Repita para el lado contrario.
7. Recuerde revisar y reapretar la tornillería periódicamente.

Diagrama de Ensamble:

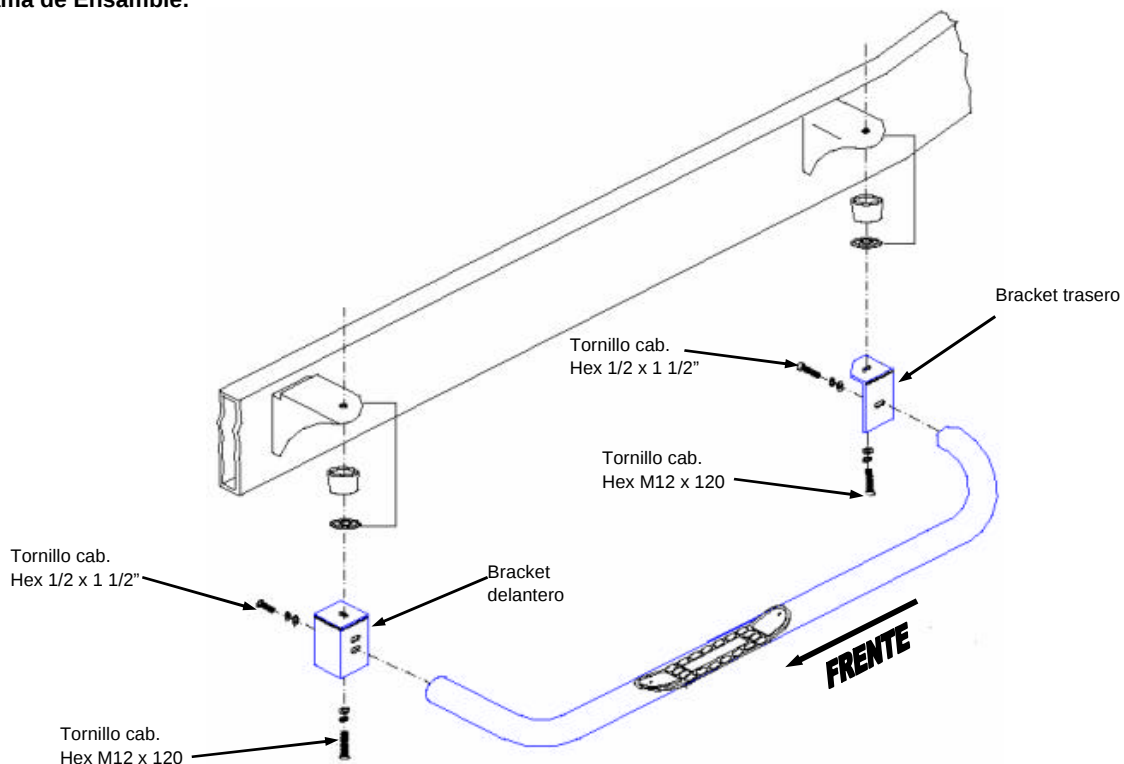

Recomendaciones de cuidado y mantenimiento:

Diseño:

Calidad:

Para proteger el acabado de este producto, mantengalo limpio para evitar la corrosión y no utilice ceras abrasivas.

Revisado 09/03/09

G:\Usuarios\Diseno\Instructivos PDF\37s\37074-E.Pdf

INSTALLATION INSTRUCTIONS

PART#4035(B-C-PS)

99-13 CHEVY / GMC SILVERADO 1500, 2500 / CHEYENNE REGULAR CAB

01-13 CHEVY / GMC SILVERADO 2500HD, 3500 / SIERRA REGULAR CAB

Parts List:

QTY

P01 (1) Sidebar set
(Driver & Passenger)

P02 (2) Front mounting brackets

P03 (2) Rear mounting brackets

(1) Hardware kit including:

T01 (4) 1/2 x 1 1/2" Hex head bolt
T02 (4) M12 x 120mm Hex head bolt
T03 (8) 1/2" Flat washer
T04 (8) 1/2" Lock washer

Tools required:


3/4" Socket Ratchet
18mm Socket 19mm Socket

Instructions:

Aproximated installation time: 30 min.

1. Read and understand instructions completely before beginning installation.
2. Sidebar set consist of a driver and passenger side. Be sure to determinate the correct side before installation.
3. Remove the four applicable body mounting bolts from the vehicle. These bolts are not reused in this installation. The body steel washer plates and rubber cushions are reused between the body mount and the sidebar mounting brackets.
4. Position de mounting brackets up under the body mounts. With the original washer and rubber part (as in the original position), **Note:On models 99 - 04 change the original body mount bolt for the M12 x 120 mm Hex Head Bolt provided and 1/2" Flat and lock washers, on 05-06 models use the original bolts to attach the brackets.**
5. Place the sidebar up to the front and rear mounting brackets and bolt using the 1/2 x 1 1/2" hex head bolt, flat and lock washer.
6. Make any final adjustments to the alignment of the sidebar and tighten all bolts. Repeat for the opposite side.
7. You may need to periodically re-tighten the bolts.

Assembly Diagram:

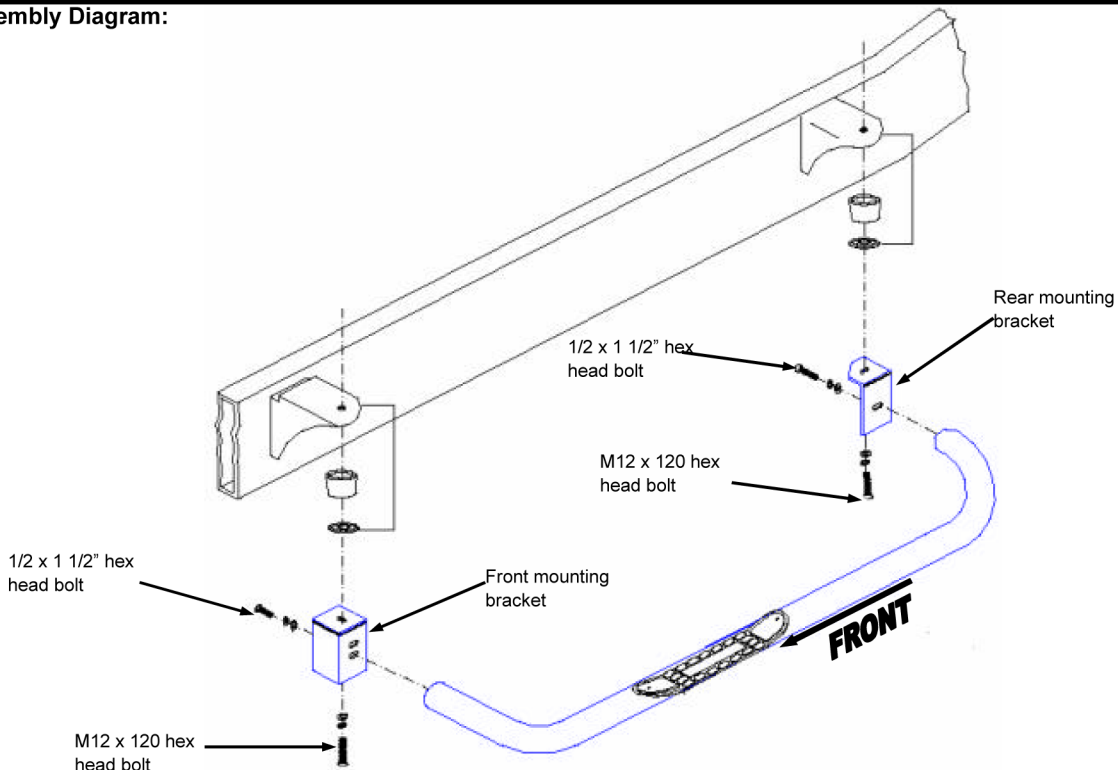

Cleaning and care instructions:

Diseño:

Calidad:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Revised 09/03/09

G:\Usuarios\Diseño\Instructivos PDF\37s\37074-I.Pdf