



THROTTLE BODY SPACER

(2014-2025+ SILVERADO - V8)

(2014-2025+ SIERRA - V8)

INSTALLATION INSTRUCTIONS

CONTENTS


- (1) Throttle Body Spacer
- (1) Gasket
- (4) M6x1.00 50mm Hex Head Bolts
- (4) Flat Washers

TOOLS REQUIRED

- Flat Blade Screwdriver
- 10mm Socket
- Socket Wrench

SKU # S115556 / S511962

STEP 1

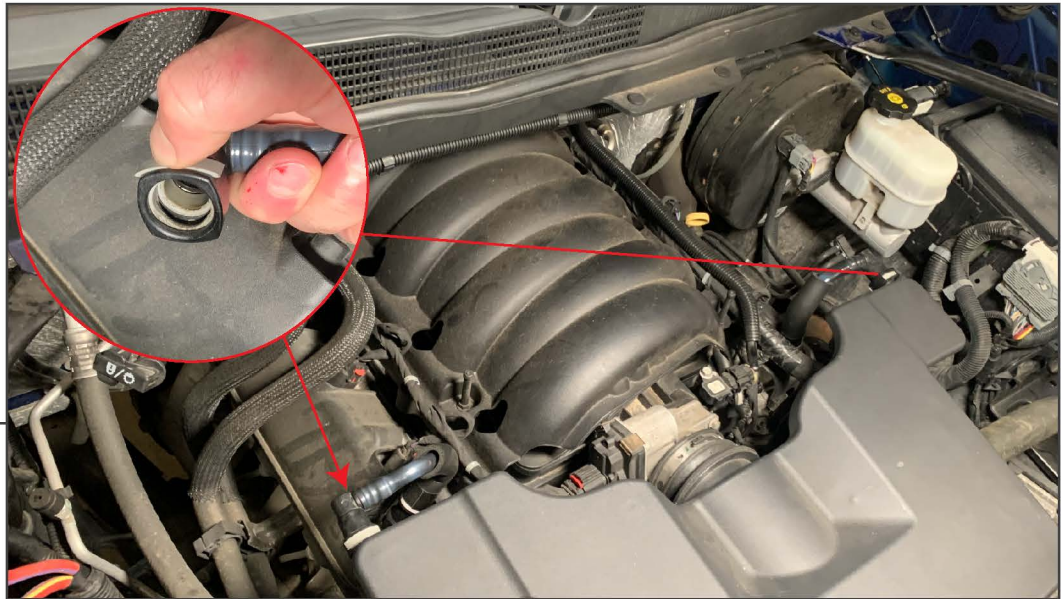


Locate the vacuum fittings on the back of the air inlet housing. Disconnect the vacuum fitting by pressing on the gray portion of the fitting while pulling the fitting away from the housing.

STEP 2



Locate and loosen the hose clamps securing the inlet housing to the air box and the throttle body. Disconnect the inlet housing from the vehicle to gain access to the throttle body.

STEP 3

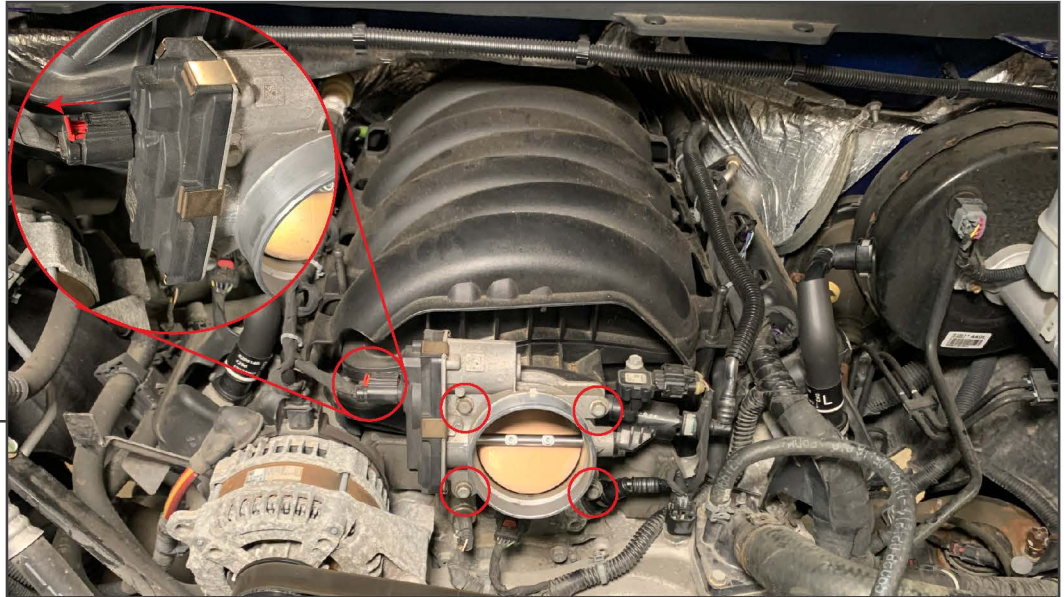

Slide back the red locking tab on the throttle body electrical connection. Depress the tab and pull it away from the throttle body. Using a 10mm socket and socket wrench, loosen and remove the (4) throttle body bolts.

STEP 4



Place the supplied gasket onto the throttle body.




STEP 5



Place the throttle body spacer on the throttle body so that the lip is facing the intake manifold.

STEP 6

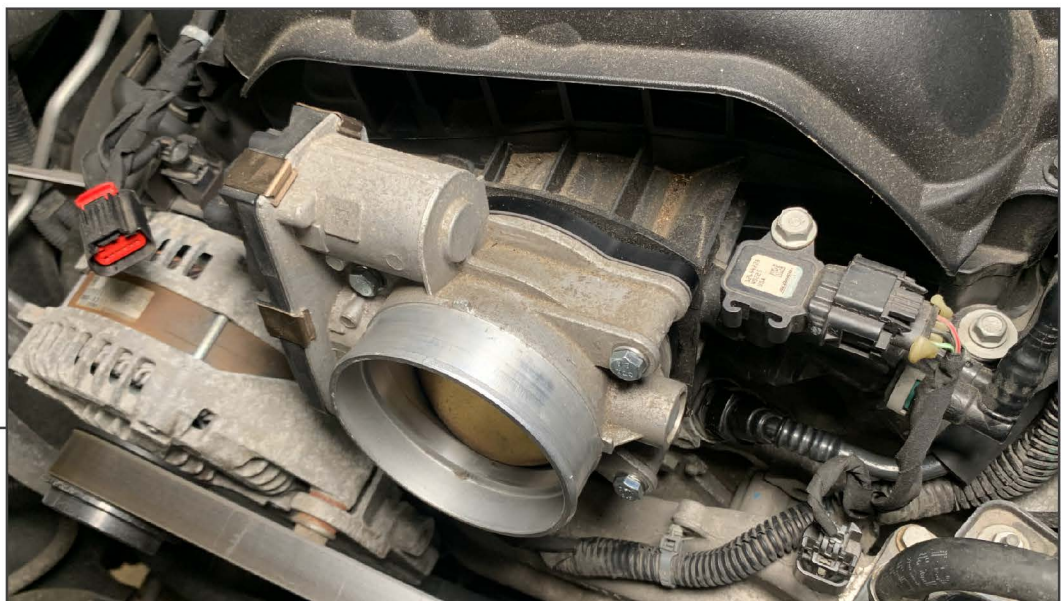

Reinstall the throttle body/throttle body spacer assembly using the provided hex head bolts and washers. Torque to 7.5 ft-lbs.

Repeat steps 1-3 in reverse order to complete the installation.