



# Silver Bullet®

Throttle Body Spacer

PN 46-34016

## INSTALLATION INSTRUCTIONS

### Important!


Please verify the Parts List and read all instruction steps before you begin installation.

| Make      | Model                      | Year      | Engine  |
|-----------|----------------------------|-----------|---------|
| Cadillac  | Escalade / Escalade ESV    | 2015-2024 | V8-6.2L |
| Chevrolet | Silverado 1500             | 2014-2024 | V8-6.2L |
| Chevrolet | Tahoe                      | 2018-2024 | V8-6.2L |
| Chevrolet | Suburban                   | 2019-2024 | V8-6.2L |
| GMC       | Sierra 1500                | 2014-2024 | V8-6.2L |
| GMC       | Yukon / Yukon Denali       | 2014-2024 | V8-6.2L |
| GMC       | Yukon XL / Yukon Denali XL | 2014-2024 | V8-6.2L |


**Note:** For the most up-to-date make, model, year for this part number, please visit our website.

- Step 1.** For 2019 models, disconnect the crankcase hose (2 hoses for 2014-2018 models) from the air intake tube. Using an 8mm nut driver, loosen the two hose clamps on the intake tube. On 2019 models, rotate the intake tube counterclockwise. For 2014-2018 models, remove the intake tube from the vehicle.
- Step 2.** Disconnect the wiring harness at the throttle body. Using a 10mm socket and driver, remove the four (4) screws securing the throttle body. Set the throttle body and the four (4) screws aside and leave the factory sealing O-ring in place.
- Step 3.** Slide the **aFe Silver Bullet** throttle body spacer and orient it with the word "TOP" facing out and up. Place the gasket in-between the **aFe Silver Bullet** throttle body spacer and the throttle body.
- Step 4.** Use the four (4) factory screws previously removed to secure the throttle body to the intake manifold. Torque the screws to 88 in/lb. **DO NOT OVERTIGHTEN THE BOLTS!**
- Step 5.** Reinstall the intake tube, tighten the two clamps, and reconnect the crankcase hose(s).


**Your install is now complete!** Make sure to retighten all screws and clamps after 100 miles of driving.

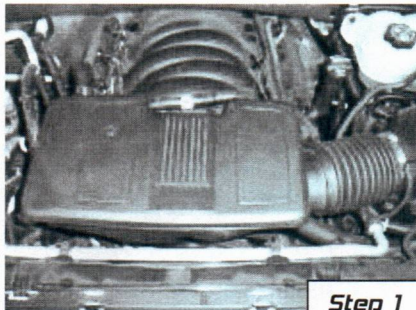


Step 1

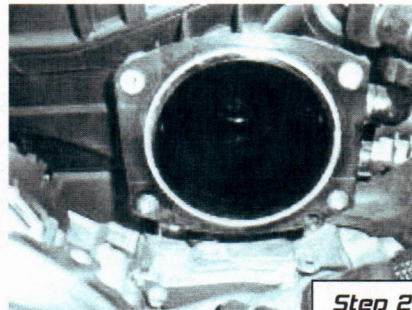


Step 2

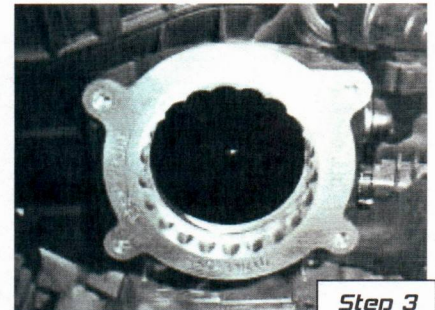

Step 3

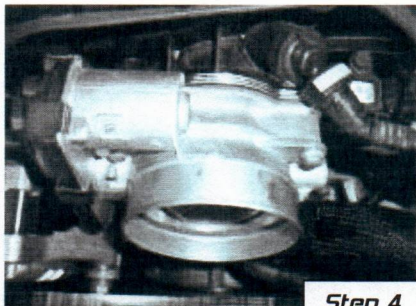

Step 4

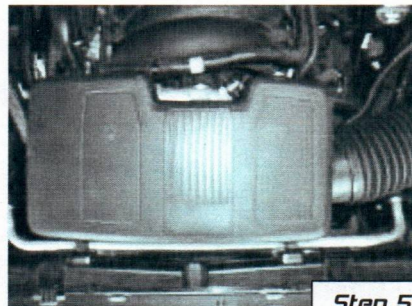

Step 5

### Parts List

- 1 **aFe Silver Bullet** spacer
- 1 gasket

### Tools Needed

- 8mm nut driver
- 10mm socket & driver

**advanced FLOW engineering, Inc.**

Corona, CA  
[www.aFepower.com](http://www.aFepower.com)