

21200

03-06 GMC

SIERRA



21200

03-06 GMC

SIERRA

03-06 GMC SIERRA (ALL)

Billet Overlay (with logo cut-out)

Tools Required:

Phillip Screw Driver
5/16" Socket/Wrench, or just Pliers

Hardware Included:

- 1 Billet Insert (19 bars)
- 4 6-32 x 2" Machine Screws
- 4 6-32 Nylon Lock Nuts
- 4 #6 Flat Washers
- 4 1.5" "J" Hook Brackets



Read and understand instructions before attempting installation

Step 1.

Remove grille shell from vehicle.

Step2

Set the billet over the factory grille opening. From the back engage the Hook side of "L" Brackets on the outer edge of the factory grill and line it up with the mounting holes on the billet. Insert the long machine screws (from the front) through the tabs welded to the rear of the insert. From the back install the "J" brackets and attach the nuts and tighten. Make sure the insert is centered as you tighten the hardware.

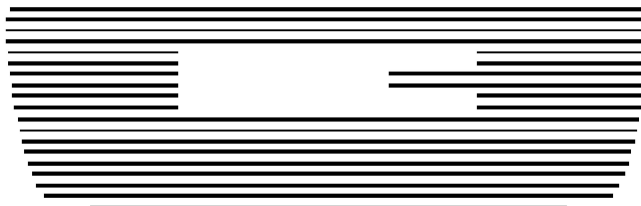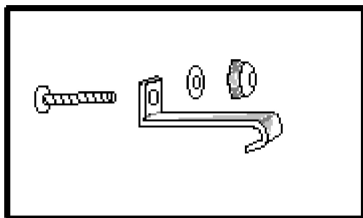

Step3

Re-install the complete grille assembly back on the vehicle. Re-install the radiator cover.

Thank you for purchasing your T-Rex billet grille. 5/9/07