



MUFFLER DELETE

(2014-2026+ SILVERADO 1500 - 5.3L)

(2014-2026+ SIERRA 1500 - 5.3L)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Muffler Delete Pipe
- (2) Exhaust Clamps

TOOLS REQUIRED

- 15mm Socket
- Ratchet
- Reciprocating Saw
- Safety Glasses
- Work Gloves
- Marker
- Floor Jack
- Jack Stands

SKU # S183552 / S566579

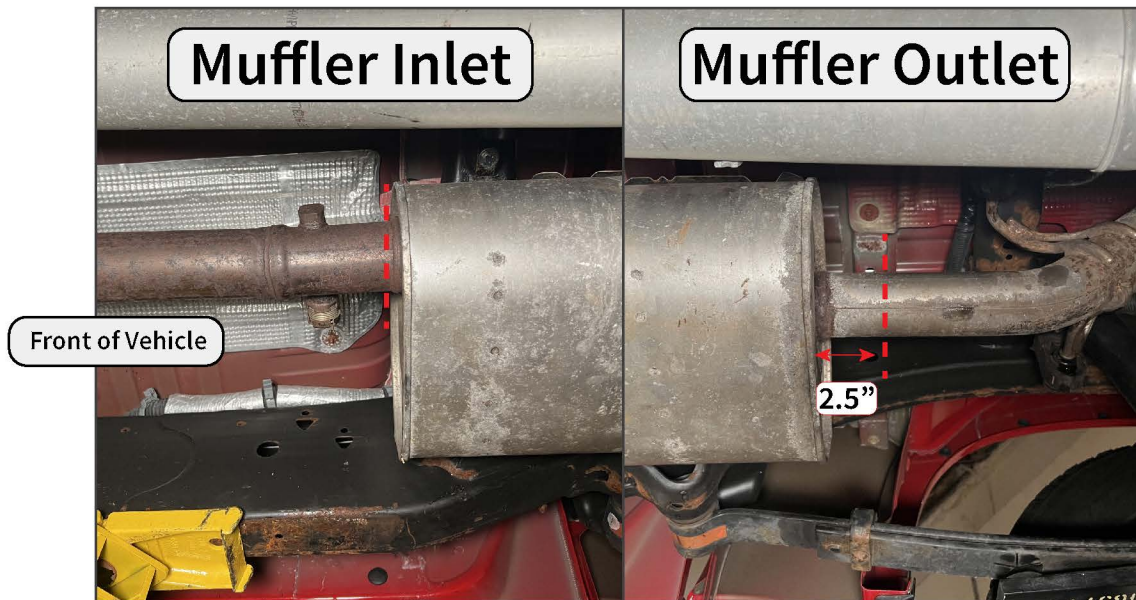

1. Safely lift and support the rear of the vehicle using a floor jack and jack stands. Locate the vehicle muffler.
2. Hold the replacement pipe under the muffler to familiarize yourself with how the pipe will fit after removing the muffler.
3. Using a reciprocating saw, cut the inlet of the muffler from the exhaust pipe directly before the welded seam.
4. Using a reciprocating saw, cut the outlet of the muffler from the exhaust tailpipe approximately 2.5" from the muffler housing.
5. Remove the muffler from the vehicle, and fit (1) exhaust clamp onto the vehicle tail pipe and front exhaust pipe. Fit the muffler delete pipe to the vehicle exhaust pipes, lubricate the exhaust hangers to allow the exhaust pipes to move, if necessary.
6. With the muffler delete pipe in place, tighten each exhaust clamp to 45 ft. lbs.

Installation is now complete.