



MOLDED FLOOR LINERS

(1999-2006 SILVERADO)

INSTALLATION INSTRUCTIONS


CONTENTS

(1) LH Front Floor Liner
(1) RH Front Floor Liner
(1) Rear Floor Liner

TOOLS REQUIRED

Vacuum Cleaner

SKU # S217241

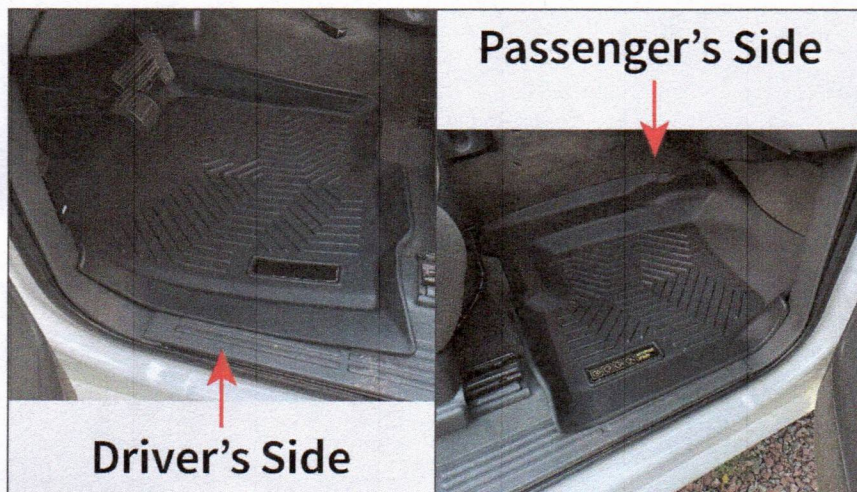

1. Remove any current floor liner/mat from the vehicle.
2. Clean the vehicle floor using a vacuum cleaner.
3. Place the appropriate floor liner to the vehicle floor. Ensure the contours of the liner meet the vehicle floor.
-Driver Side Front: Ensure proper clearance between the liner and the throttle pedal.
4. Repeat Steps 1-3 for all remaining floor liners. The liners will lay flat over time after experiencing heat and use.

Installation is now complete.