

REDROCK

Installation Instruction
Packaged Grille
PART NUMBER SD3828
Fits Ford SuperDuty 2011-2016

TOOLS NEEDED FOR INSTALLATION

Ratchet
10mm Socket
Plastic Clip Remover

KIT INCLUDES:
Packaged Grille



Removal of OEM Grille

Step 1. Removal of OEM grille

- Pop hood and remove four 10mm bolts from top of grille. **Fig 1**
- Using a plastic clip remover remove the plastic clip located on the driver's side of the top of the grille. **Fig 2**
- Gently pull the top of the grille away from the frame to access the 5 clips at the bottom of the grille. Using a flathead screwdriver push the clips down to unclip them and remove the grille from the vehicle. **Fig 3**

Continued on Page 2

Fig 1



Fig 2



Fig 3



Removal of OEM Grille Continued.....

Step 2. Removal and Reuse of Factory Bracket

- Take the grille to your workbench and remove the five plastic clips and one 10mm bolt from the top bracket. **Fig 6**
- Once the clips and bolt has been removed lift the bracket off the OEM grille. **Fig 7**
- Place the bracket onto the new grille and using OEM hardware mount the bracket to the grille.

Fig 6


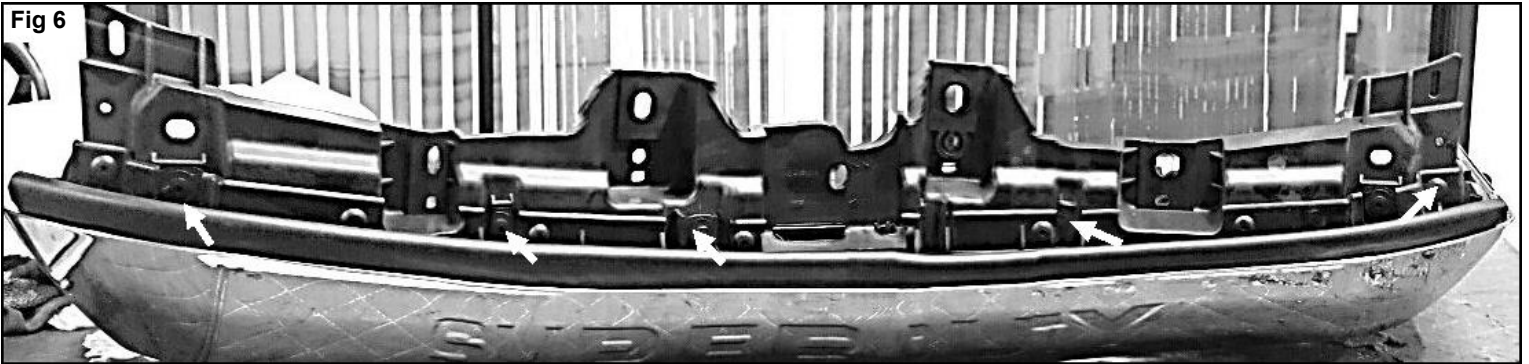


Fig 7

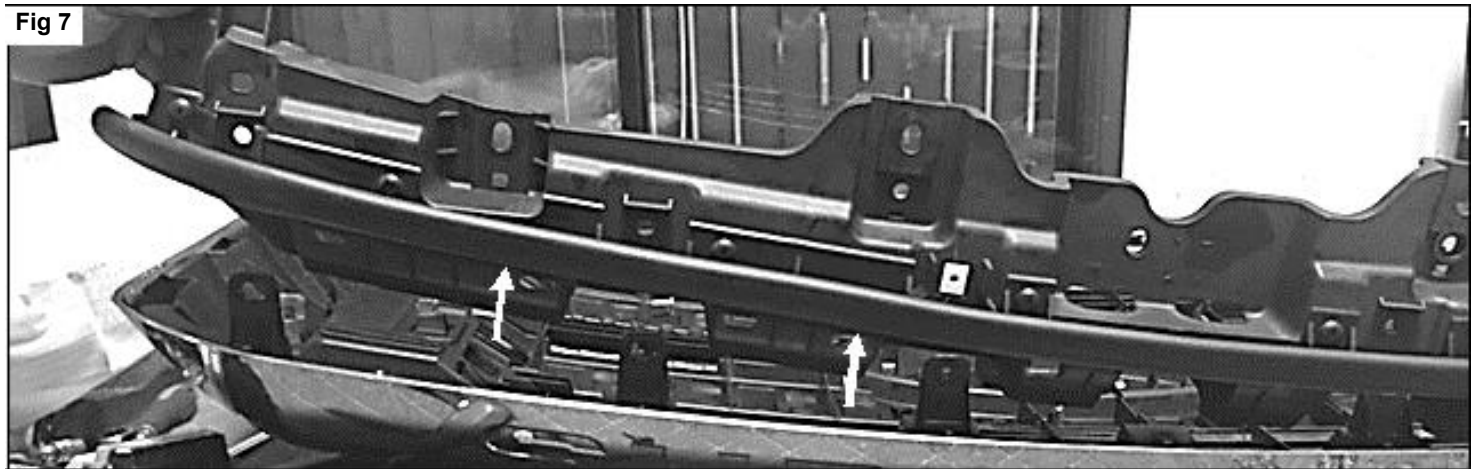

Installation of New Grille

Step 1. Installation of New Grille

- Place the bottom of the grille to the vehicle and snap in the clips. **Fig 8**
- Using the OEM hardware from the removal process bolt the top of the grille to the vehicle.
- This completes the installation process.

