

LED HEADLIGHTS

(2011-2016 F-250 / F-350)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Headlight Assembly
- (1) RH Headlight Assembly
- (1) DRL Harness
- (1) Dielectric Grease Packet


TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Flathead Screwdriver

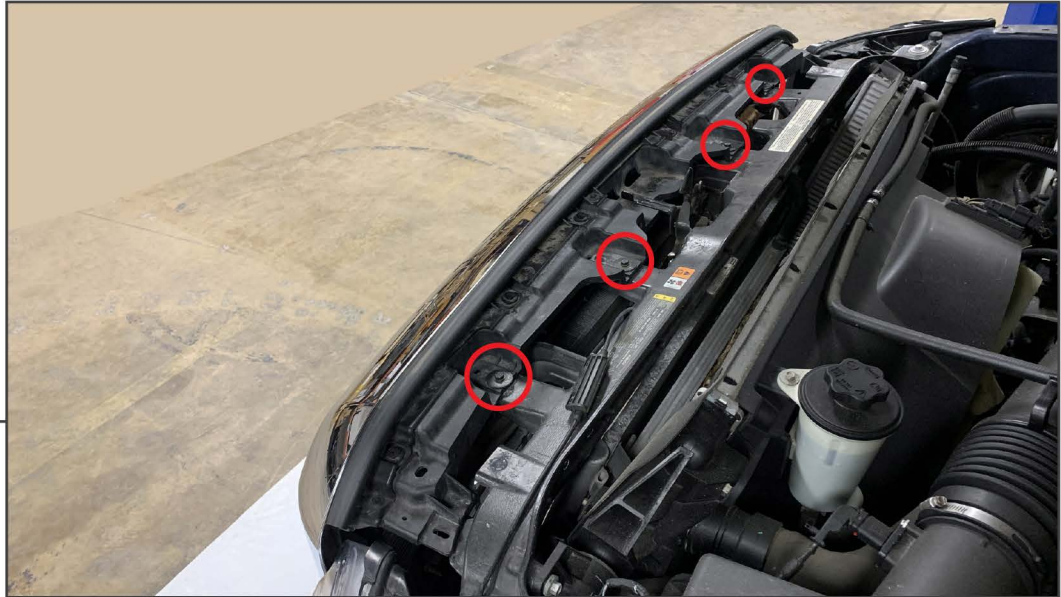


STEP 1

Open the vehicle hood. Locate the (4) 10mm bolts securing the top of the grille to the radiator support. Remove the (4) 10mm bolts.

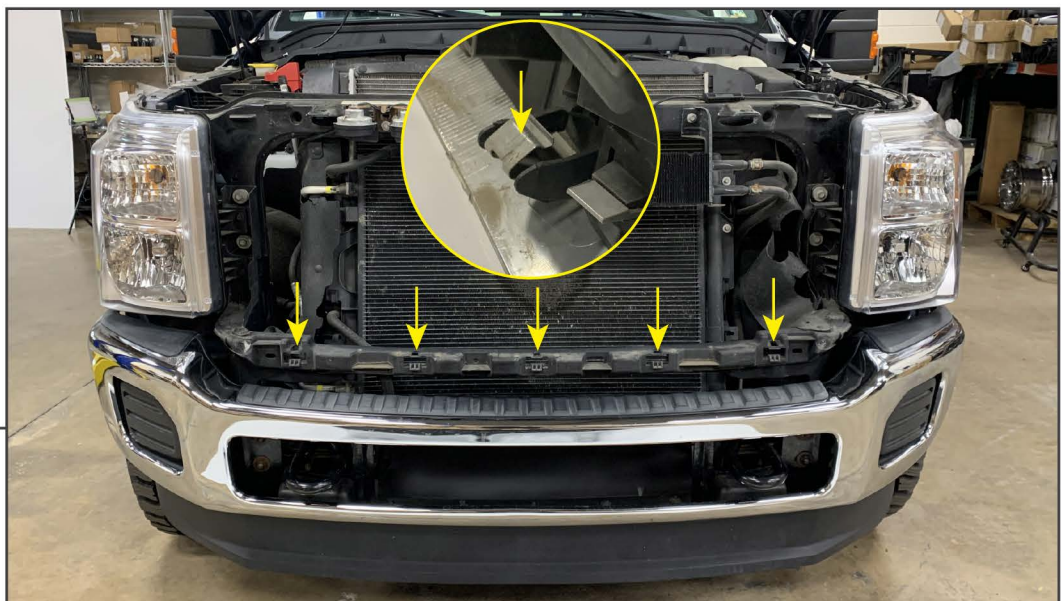


STEP 2

Gently pull the top of the grille away from the radiator support to gain access to the lower grille clips. Using a flathead screwdriver, press the top of the (5) mounting clips to dislodge the clips from the vehicle retainer panel. Once the (5) clips are depressed, remove the grille from the vehicle.

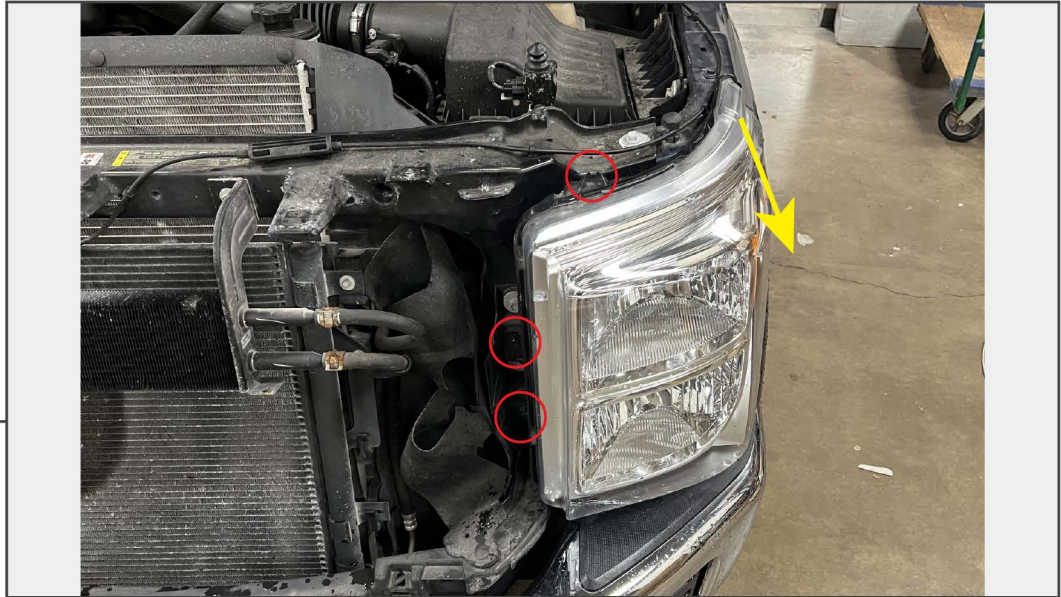


STEP 3

Remove (3) 10mm bolts from the headlight assembly. With the bolts removed, firmly pull the headlight assembly away from the vehicle to dislodge the retaining pin.

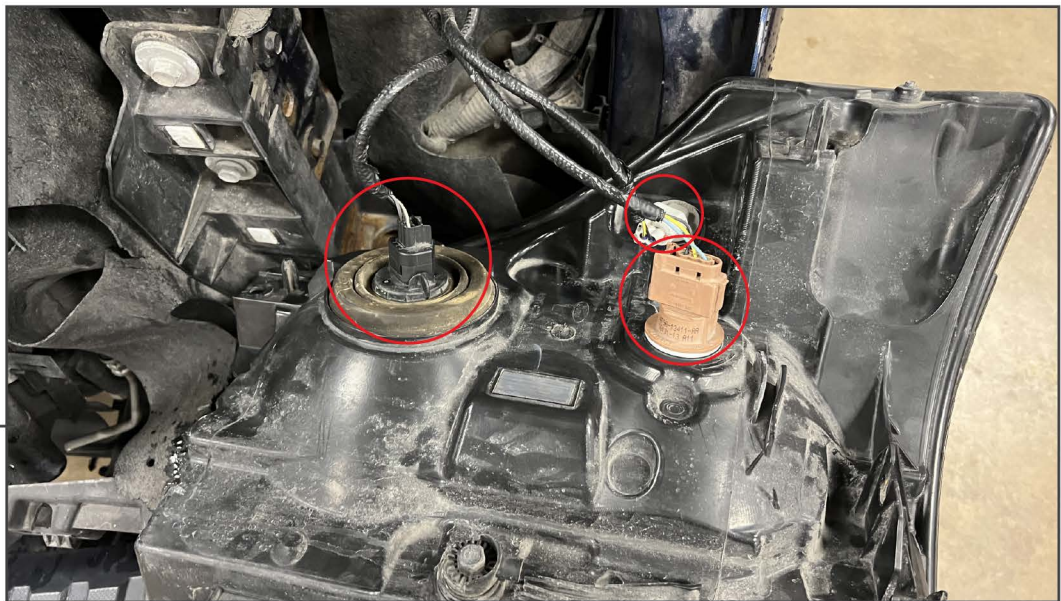


STEP 4

Unplug the (3) electrical connectors from the back of the headlight assembly. Set the headlight assembly aside.

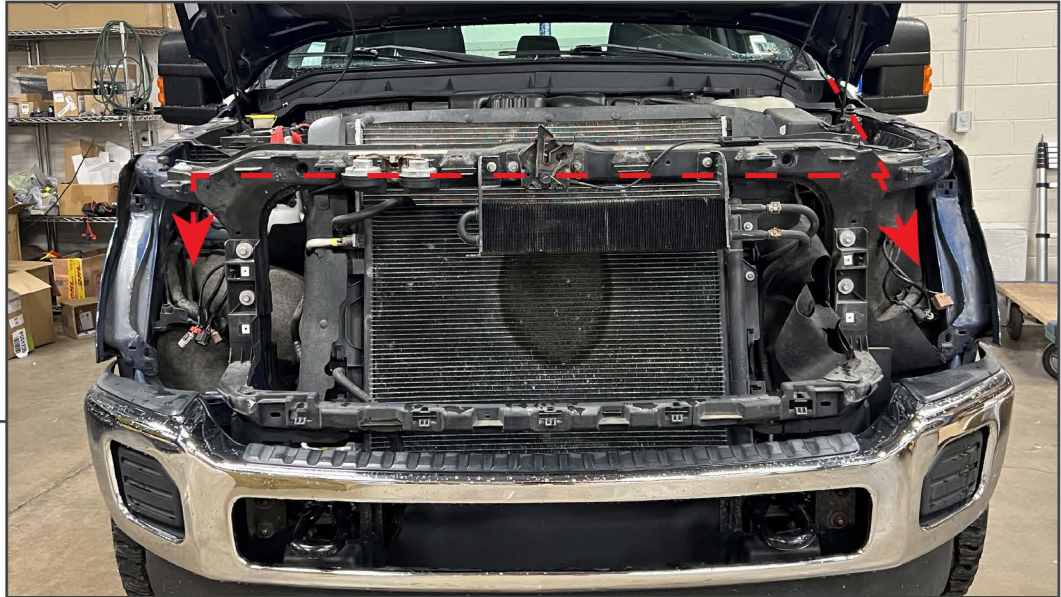

STEP 5

Route the included DRL harness from the vehicle fuse box to each headlight mounting point. Ensure to route the harness away from any hot/moving components.

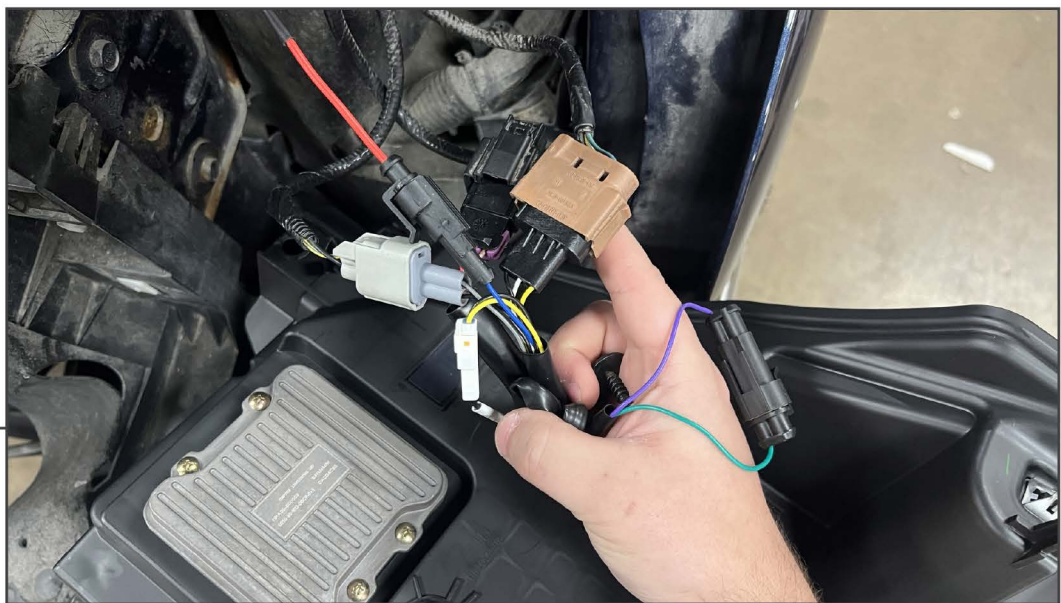

STEP 6

Plug the new headlight connectors into the corresponding vehicle harness connector. Plug the DRL harness into the single wire connector.



STEP 7

Turn Signal Sequence On/Off: Plug in/Unplug the designated connector to toggle turn signal sequence feature.



STEP 8

Fit the fuse tap end of the DRL harness into **fuse # 50**. Then, neatly route the harness outside of the fuse box. Carefully notching the fuse box lid to allow proper harness routing may be necessary.



STEP 9

Secure the new headlights into the vehicle reusing the original (3) 10mm bolts. Then, install the grille to the vehicle reusing the original (4) 10mm bolts.



STEP 10

Installation is now complete.