



# ARMOR GRILLE WITH LED OFF-ROAD LIGHTING

(2017-2019 F-250 / F-350)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---


- (1) Replacement Grille
- (2) Scotchlok Connectors

### TOOLS REQUIRED

---


- 10mm Socket
- Ratchet
- Panel Removal Tool
- Pliers

## STEP 1

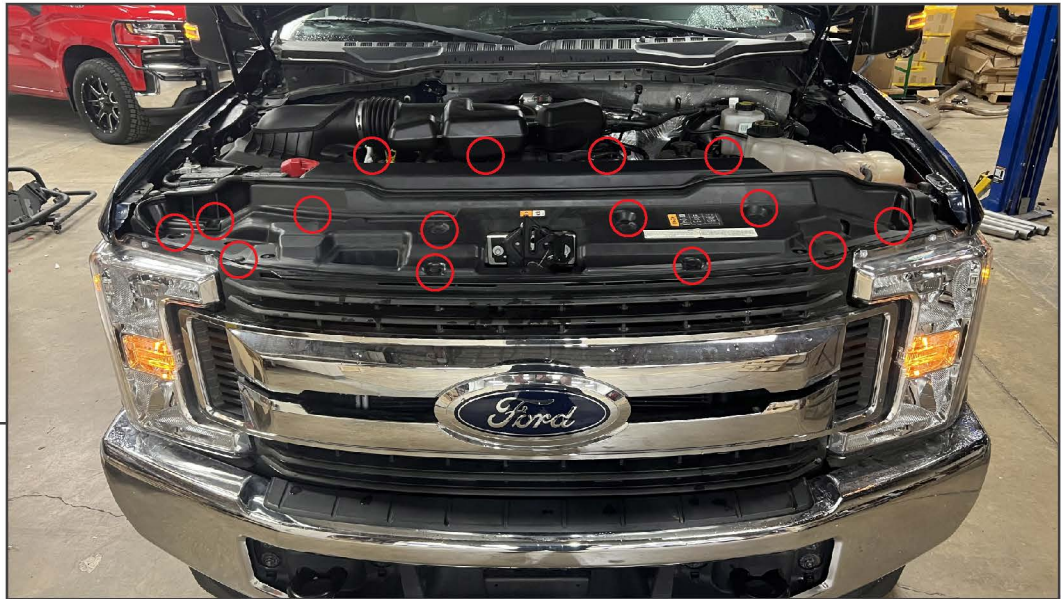


Open the vehicle hood. Remove (15) plastic push clips from the radiator cover. Remove the radiator cover from the vehicle.

## STEP 2

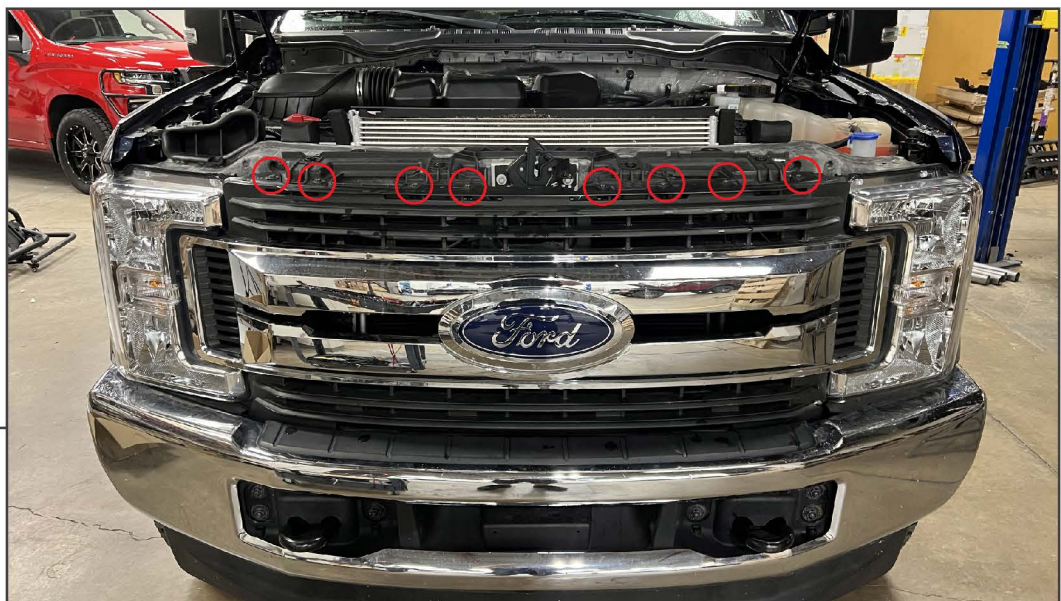

Remove (8) 10mm bolts from the top of the grille.

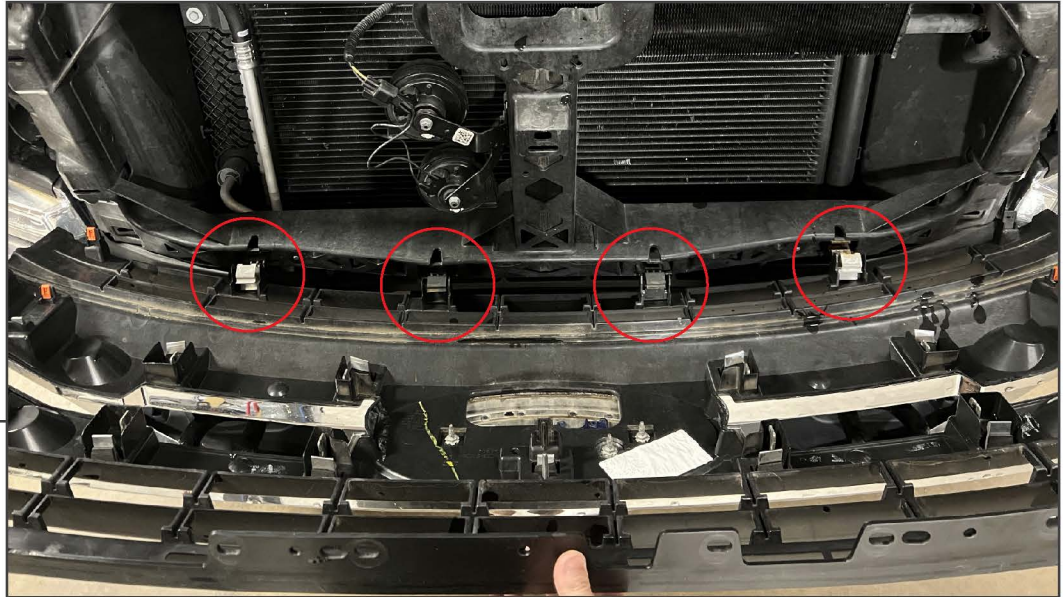

**STEP 3**

Begin pulling the top and sides of the grille away from the vehicle. Using a long flathead screwdriver, press the (4) lower metal retaining clips while pulling the grille away from the vehicle to dislodge the bottom of the grille.

Set the grille on a soft workable surface for disassembly.


**STEP 4**

Transfer the OEM clips from the original grille to the new grille in the original mounting locations.



## STEP 5

While holding the grille to the vehicle, route the LED lighting harness towards the driver's side headlight.

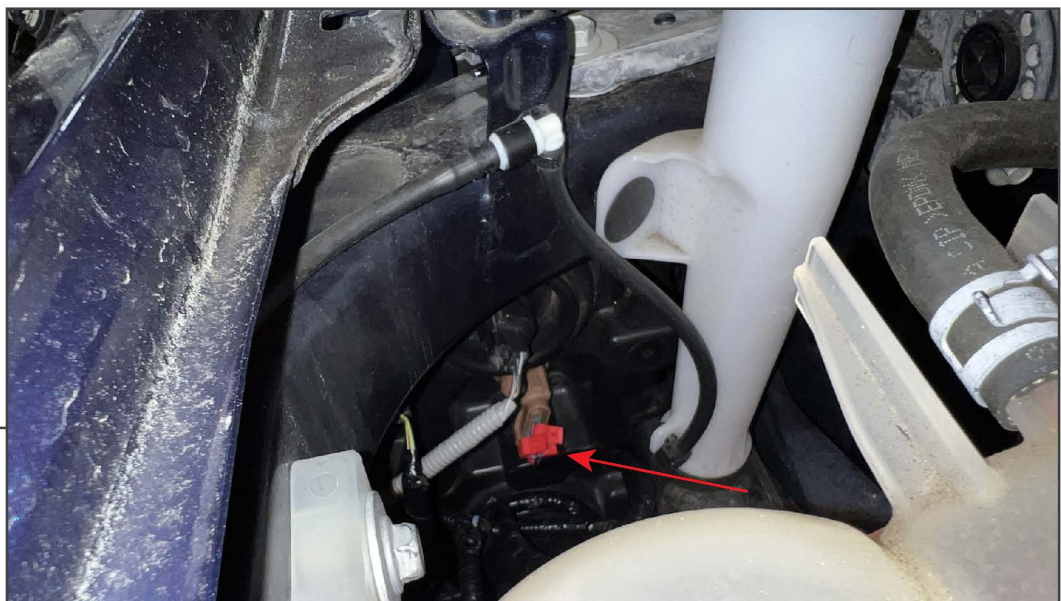

## STEP 6

Press the grille into the vehicle to engage the surrounding retaining clips. Once the clips are engaged, secure the top of the grille to the vehicle using the original (8) 10mm bolts. Splice the LED lighting into the vehicle parking light using the diagram below.

<u>Vehicle Harness</u>	-	<u>Off-Road Lighting</u>
Blue/Gray (Parking +)	-	Red (+)
Black/Yellow (Parking -)	-	Black (-)





## STEP 7

Re-install the radiator cover to the vehicle reusing the original plastic clips.

Installation is now complete.