



LED THIRD BRAKE LIGHT

(1999-2016 F-250 / F-350)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Third Brake Light


TOOLS REQUIRED

Phillips Screwdriver
Plastic Pry Tool



STEP 1

Remove (2) Phillips screws from the third brake light assembly.

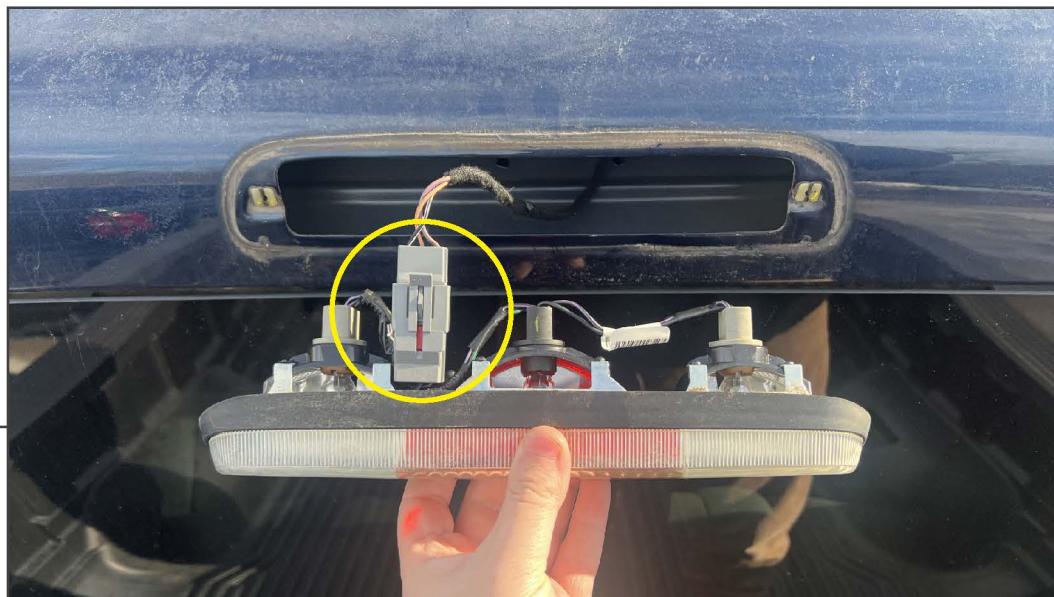

STEP 2

Remove the brake light from the vehicle using a plastic pry tool. Lift the electrical connector tab, and unplug the brake light from the vehicle harness.

STEP 3



Plug in the brake light electrical connector into the vehicle's wiring harness. Toggle the switch to enable 5x strobe feature.

STEP 4



Re-assemble the vehicle using the original hardware. Tighten until secure.

Installation is now complete.