

LED THIRD BRAKE LIGHT

(1999-2016 F-250 / F-350)

INSTALLATION INSTRUCTIONS


CONTENTS

(1) Third Brake Light

TOOLS REQUIRED


Phillips Screwdriver
Plastic Pry Tool

SKU # SD63612 / SD63613 / SD63614

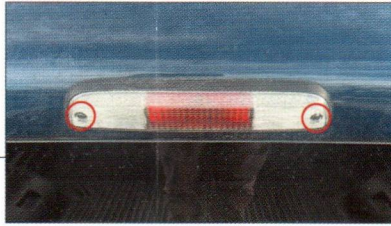

STEP 1

Remove (2) Phillips screws from the third brake light assembly.

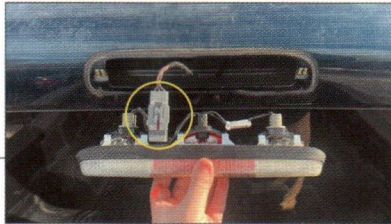

STEP 2

Remove the brake light from the vehicle using a plastic pry tool. Lift the electrical connector tab, and unplug the brake light from the vehicle harness.



STEP 3

Plug in the brake light electrical connector into the vehicle's wiring harness. Toggle the switch to enable 5x strobe feature.



STEP 4

Re-assemble the vehicle using the original hardware. Tighten until secure.

Installation is now complete.