



# INSTALLATION MANUAL

## Level of Difficulty

### Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

## Parts List

Qty	Description
1	Driver / left running board
1	Passenger / right running board
12	Bolt, M8
12	Flat washer, M8
6	Clip nut, M8
6	Flange nut, M8
6	Lock washer, M8

## Tools Required

Wrench / socket, 1/2" --

## Torque Specifications


M8 bolt 17 - 20 ft-lbs.

Use above torque setting unless otherwise noted


## Product Registration and Warranty

Ranch Hand stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: [warranty.curtgroup.com/surveys](http://warranty.curtgroup.com/surveys)

## Product Photo

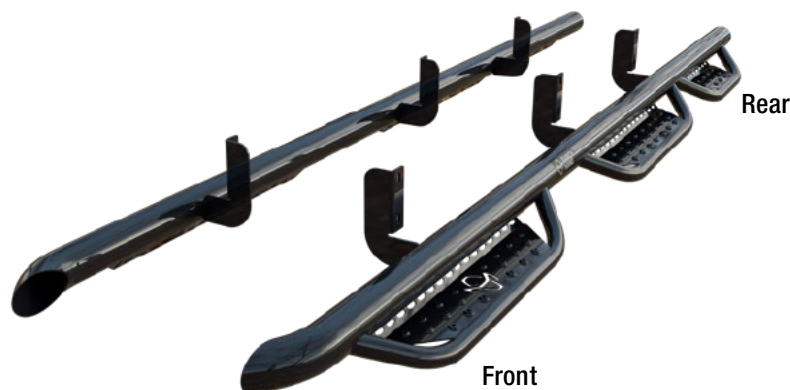

## Product Photo

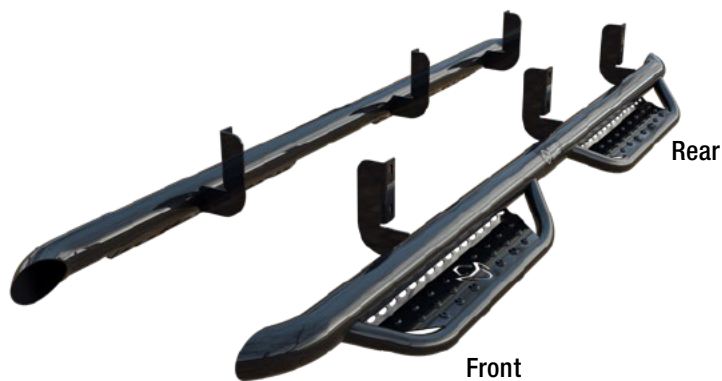

## NOTICE

Visit [www.ranchhand.com](http://www.ranchhand.com) for a full-color copy of this instruction manual, as well as helpful videos, guides and much more!

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

Periodic inspection of your product should be performed to ensure all hardware and / or components remain secure.

These running steps are engineered and manufactured specifically for driver and passenger sides of your vehicle. The short, 45° bend and the largest step (18") is installed towards the front of the vehicle. For straight cut bed access step models, the straight cut is installed to the rear of the vehicle.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.


## Maintenance

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

### Step 1


Starting on the driver side, locate the holes for the upper mounts (x3) and install the supplied M8 clips in each position.

**Note:** There will be four attachment points for the quad cab and five for the crew cab. Only three will be used for the installation.

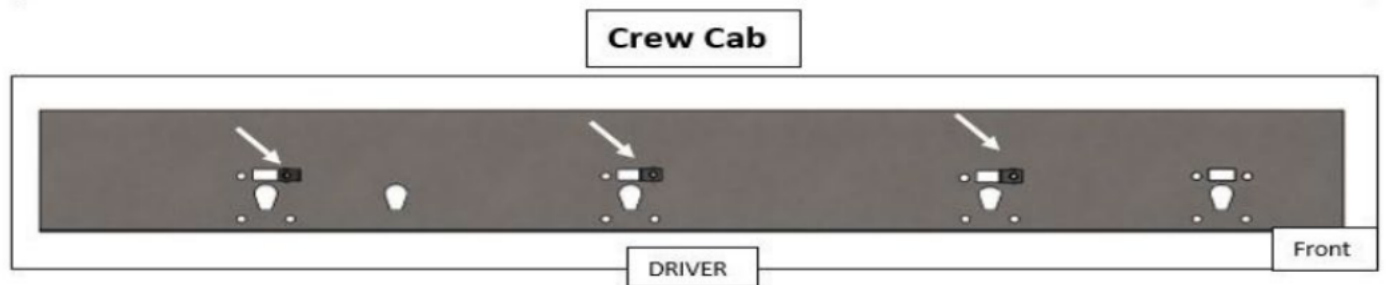

### Step 2

Install the step, aligning the brackets to the upper clips using an M8 bolt, lock washer and flat washer for the upper attachment. Use an M8 bolt, flat washer and M8 nut for the lower attachment. Leave the hardware loose at this time

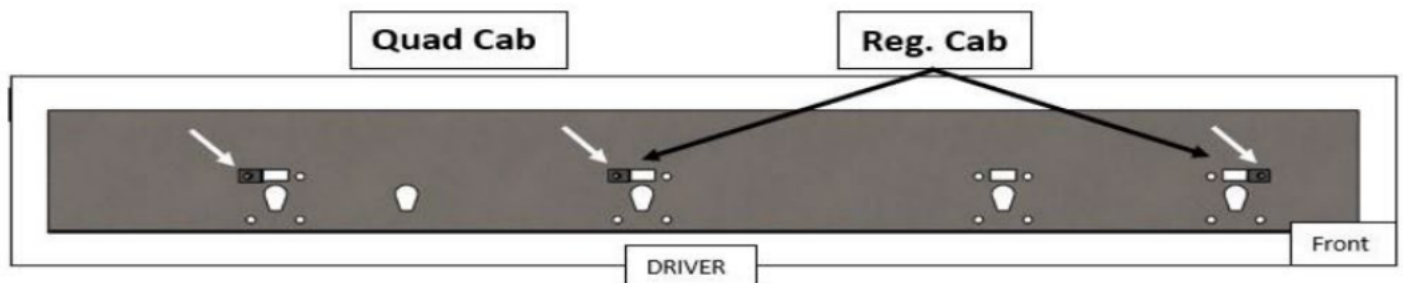

### Step 3

After final adjustment, tighten all hardware to 17-20 ft-lbs. of torque.

### Step 4

Repeat steps 1 through 3 on the passenger side of the vehicle.

To protect your investment, see the 'Notes and Maintenance' section on page one.

Congratulations on the installation of your new Ranch Hand™ running steps.