

# SKYJACKER

## SUSPENSIONS

SKYJACKER.COM

### Universal Remote Reservoir Mount 2005 > Ford F250 Super Duty 4WD For Curved Surface Installation Instructions

#### Required Tools List:

- SAE Sockets \ Wrenches (5/16" & 1/2")
- Impact Wrench
- Standard Screwdriver
- Power Drill
- Center Punch
- Safety Glasses
- Torque Wrench
- Drill Bit (1/8" & 9/32")
- Ball Peen Hammer
- Paint Marker



Before beginning installation, read these instructions completely. Please refer to Parts List to insure that all parts & hardware are received prior to disassembly of vehicle. If any parts are found to be missing, contact SKYJACKER® Customer Service at 318-388-0816 to obtain needed items. If you have any questions or reservations about installing this product, contact SKYJACKER® Technical Assistance at 318-388-0816.

#### Important Notes:

- This is a Universal Mount for a Remote Reservoir canister. It can be mounted on curved metal surface with remote canister up, down or at an angle. Choosing the proper angle is at your discretion, but one key to mounting properly is that the reservoir hose makes a smooth loop and is not crimped, nor rubbing or chaffing any surface.

**CAUTION:** Make Sure ADX Shock Reservoir Hose Does Not & Will Not Make Contact with Anything Throughout the Full Travel Cycle of the Suspension. (Tire \ wheel, frame, sway bar, springs, brake lines, ABS lines, exhaust, etc.)

#### Hardware Box Breakdown:

##### Part # UN2RR

Item #	Description	Qty
UN2RR-S	UNIV REMOTE RESERVOIR BRKT	2
HB-UN1RR	HDWR BAG: UN2RR	1

#### Hardware Bag Breakdown:

##### Part # HB-UN1RR

Item #	Description	Qty
HC40	HOSE CLAMP # 40	4
516X34TCFB	5/16X3/4 THRD CUTTER FLG BOLT	4

**Note:** The following sample installation is on a 2023 Ford F250 4WD front mount application. (Photo # 1)

It will guide you through key steps of the installation process.

Photo # 1





## **Installation:**

1. Install Skyjacker ADX 2.0 shock into OEM mounting position.

Place Skyjacker remote reservoir into cradle of reservoir bracket. Hold Skyjacker bracket & reservoir together to find your desired position. (Photo # 1)

2. Use Skyjacker bracket as a guide to mark \ scribe two (2) mounting holes on OEM upper coil spring mount. (Photo # 2) Center punch marks with a punch. (Photo # 3)
3. Using your punched marks as a guide, first drill out punch marks using a 1/8" drill bit for a more precise pilot hole. (Photo # 4) **Note:** Prior to drilling, check behind surface area being worked on for any wires, brake lines, fuel lines, hoses, etc that could be damaged.

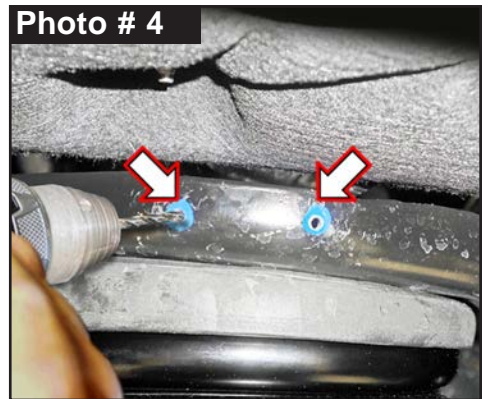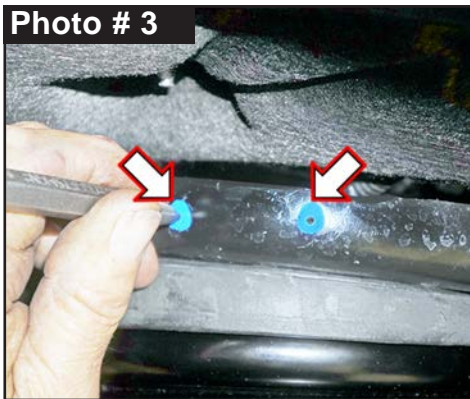


4. Drill out pilot holes using a 9/32" drill bit. (Photo # 5)
5. Attach bracket with supplied 5/16" x 3/4" Thread Cutter Flange Bolts using an impact wrench & 1/2" socket \ wrench. (Photo # 6) Torque 180 in-lbs.
6. Place ADX remote reservoir into cradle of Skyjacker reservoir bracket.

Attach reservoir to bracket with supplied # 40 Hose Clamps. **Note:** Route each clamp through bracket cut-out & over top of bracket. Slide reservoir from side into each clamp.

Attach using a standard screwdriver or 5/16" socket \ wrench. (Photo # 7) Torque 180 in-lbs.

**Tech Note:** You can position or roll hose clamp rearward to hide bolts from view. Trim excess length of screw clamp strap using tin snips or similar tool.

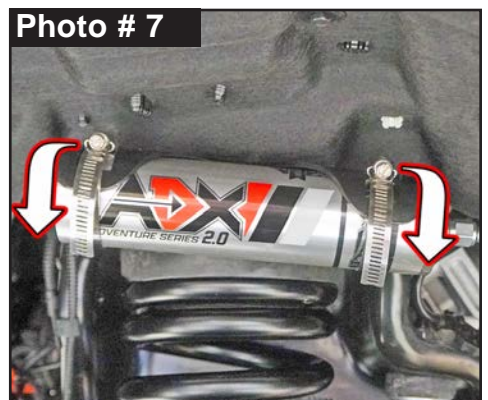

## **Final Notes:**

- After installation is complete, double check that all nuts & bolts are tight.
- With vehicle placed on ground, cycle steering lock-to-lock & check all components for proper operation & clearances. Pay special attention to clearance between tires \ wheels, ADX Shocks & Reservoirs, brake hoses, ABS wiring, etc.