

Intake Manifold and Turbo Inlet Kit


2015-2025 Ford Super Duty 6.7L Power Stroke

(315054000, 315054010, 315054030)

Installation Guide



Intake Manifold and Turbo Inlet Kit

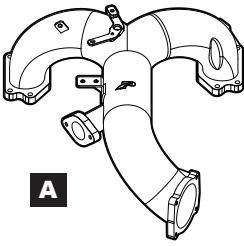

A



E




I



M



Q

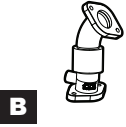

B



F




J



N



R

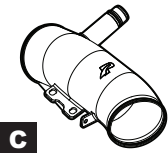

C



G



K



O



S



D



H



L



P



T

CONTENTS:

- | | | | | | |
|----|-----|--------------------------------|----|-----|--------------------------------|
| A. | (1) | Intake Manifold | M. | (1) | M8 x 80mm Hex Head Flange Bolt |
| B. | (1) | EGR Pipe | N. | (2) | M8 x 25mm Hex Head Flange Bolt |
| C. | (1) | Turbo Inlet | O. | (3) | M6 x 12mm Hex Head Flange Bolt |
| D. | (1) | Carbon Fiber Airbox Duct | P. | (1) | M6 x 60mm Threaded Stud |
| E. | (1) | Straight Silicone Coupler | Q. | (1) | M5 x 12mm Flange Bolt |
| F. | (1) | Elbow Silicone Coupler | R. | (2) | M6 Flange Nut |
| G. | (2) | Manifold Gasket | S. | (2) | M6 Hex Nut |
| H. | (2) | EGR Pipe Gasket | T. | (4) | Tree Mount Zip Ties |
| I. | (4) | T-bolt Clamps | | | |
| J. | (1) | Manifold Support Spacer | | | |
| K. | (1) | Dipstick Support Spacer | | | |
| L. | (6) | M6 x 30mm Hex Head Flange Bolt | | | |



INSTALLATION NOTES:

1. *Some steps are only applicable to the 500 HP High-Output Version. Such steps are notated with a *.
2. For HO applications, drain coolant from both radiators.
3. For non-HO applications, drain coolant only from the primary radiator.
4. Turbo Coolant Lines Relocation Kit (SKU 319010000) is required for HO applications. This kit is not included within the Intake Manifold Kit and is available for purchase separately.

DISASSEMBLY:

1. Vehicle off and cool.
Disconnect both battery negative terminals. **(Fig. 1)**
2. Drain coolant from the primary radiator via the drain valve on the driver side of the radiator, **(Fig. 2)** the blue drain hose shown was used in our installation to avoid spillage.
3. *Drain coolant from the secondary radiator via the drain valve on the passenger side of the radiator.
4. Remove airbox outlet duct by loosening two clamps. **(Fig. 3)**



Fig. 1

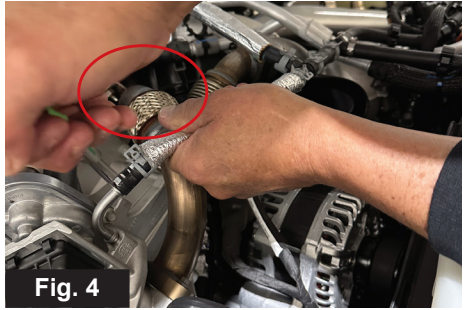


Fig. 2



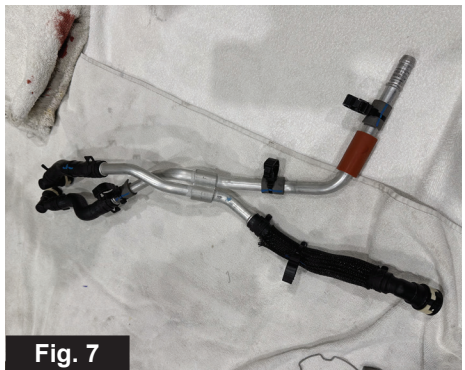


Fig. 3

5. Remove the EGR coolant 4-way hose. (**Fig. 4**)

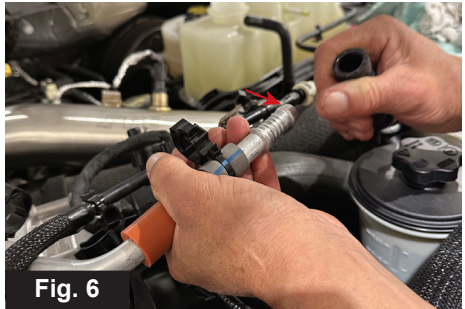

6. *Remove the turbo coolant inlet and outlet lines. See Fig. 7 for the removed piece. (**Fig. 5, Fig. 6, Fig. 7**)

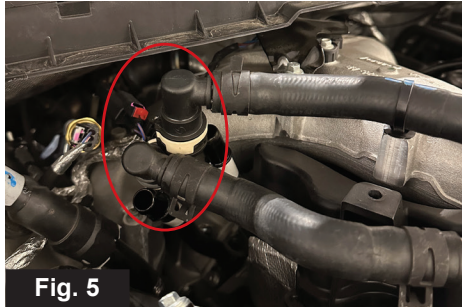

7. Remove the EGR temp sensor on the EGR tube located in between the EGR valve and the intake manifold. Remove EGR tube. (**Fig. 8, Fig 9**)




8. Remove MAP sensor shield on top of stock manifold. (**Fig. 10**)



9. Pull out MAP sensor and set it aside. Disengage the push mount clip securing the MAP sensor harness to the stock manifold (**Fig. 11**)



10. Disconnect the IAT sensor on top of the cold charge pipe connector. Disengage the connection between the cold charge pipe connector and the throttle housing (**Fig. 12**) (No need to remove the cold pipe). Remove the hot charge pipe. (**Fig. 13**) The PPE Hot Charge Pipe is shown here instead of the OEM Pipe.

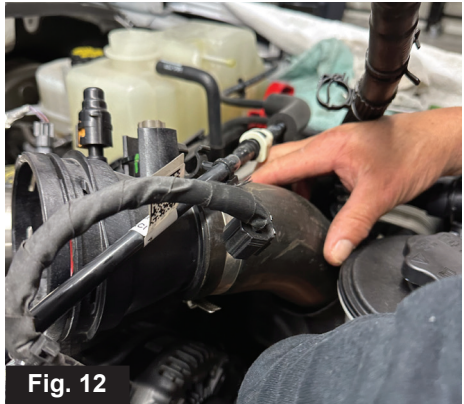

11. Remove the throttle plate housing. (**Fig. 14**)



12. Unmount the dipstick brackets from the factory manifold. There are two brackets. (Fig. 15)



13. Remove upper radiator hose, then remove the plastic thermostat cover. (Fig. 16, Fig. 17)



14. Remove the one long bolt securing the manifold to the thermostat bridge, then the eight bolts securing the manifold to both valve covers. (Fig. 18)



15. Disconnect the CCV hose from the factory turbo inlet. If equipped with the twist lock type connector, twist and pull to disengage the CCV hose. If equipped with a connector with internal clips, pry on the outer lip of the connector and pull out to disengage. (**Fig. 19**)



16. Remove the two bolts securing the turbo inlet, then loosen the clamp that connects the turbo inlet to the compressor housing.
17. Lift the stock aluminum manifold up and remove the stock turbo inlet, then remove the manifold.

INSTALLATION:

1. Install the Elbow Silicone Coupler (**F**) onto compressor housing with two clamps (**G**), install the Turbo Inlet Tube (**C**) to thermostat bridge using two M8 bolts (**N**). Tighten M8 bolts to 16 lb-ft first, adjust elbow coupler to proper orientation, then tighten both clamps to 80 lb-in. (**Fig. 20**, **Fig. 21**)



- Clip the EGT sensor module to the welded bracket at the bottom of the Turbo Inlet as shown in. (Fig. 22)

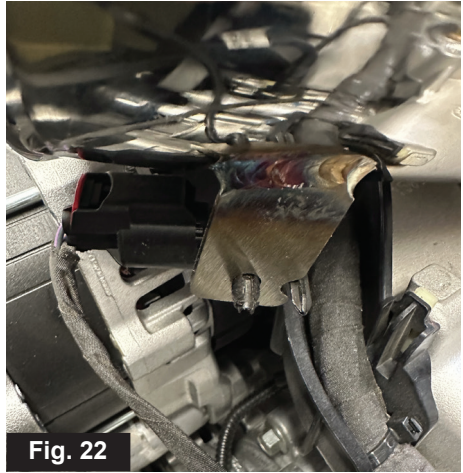


Fig. 22

- Connect the Carbon Fiber Airbox Duct (D) to the accordion coupler, install the Straight Coupler (E) after the Airbox Duct with two clamps. (Fig. 23, Fig. 24)

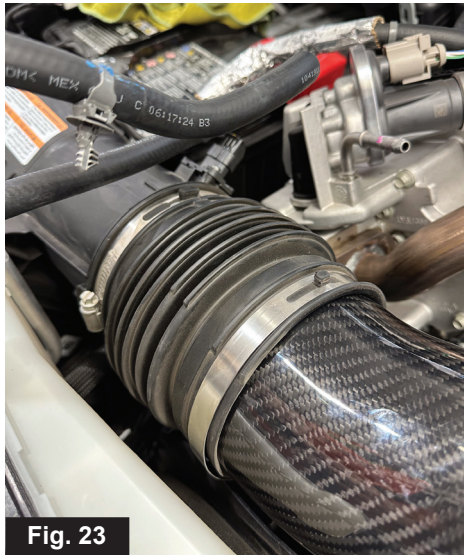


Fig. 23



Fig. 24

4. Prepare the Intake Manifold (**A**) by putting the two Manifold Gaskets (**G**) in place. (**Fig. 25**)



Fig. 25

5. Install the Intake Manifold. Place Spacer (**J**) below the Manifold Support Bracket and start threading the long M8 bolt (**M**). Do not tighten yet. (**Fig. 26**).

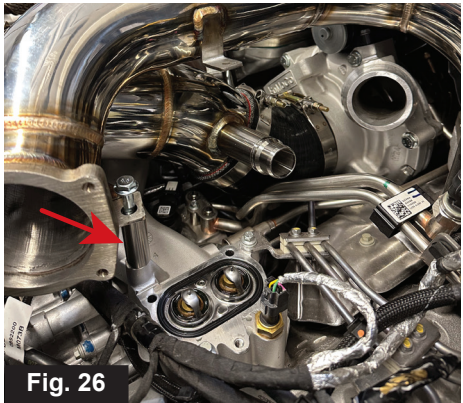


Fig. 26

6. Install Spacer (**K**) and factory double-end stud-bolt to the Manifold (**Fig. 27**). Install M6 Stud (**P**) and Flange Nut (**R**) to the manifold (**Fig. 28**). Install six bolts (**L**) to the remaining bolt holes. See (**Fig. 29**) for hardware placement. Tighten all M6 fasteners to 10 lb-ft and the M8 Bolt from step 5 to 18 lb-ft.









Fig. 29

7. Position the dipstick back in place. Secure the rear dipstick bracket to the welded tab on the Manifold using one Bolt (O) and one Nut (S) (Fig. 30). Install the front dipstick bracket on top of the factory stud-bolt with spacer (K), secure with Nut (R). (Fig. 31)

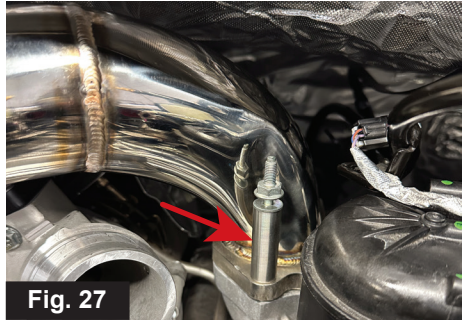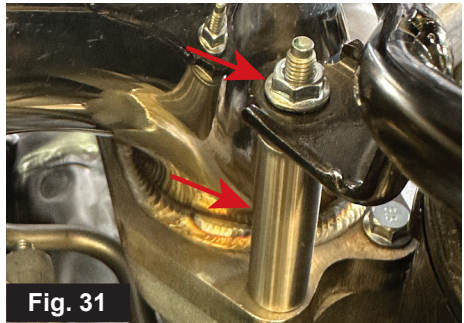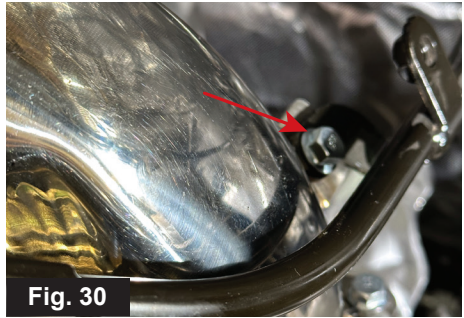

8. Push the harness socket clip back onto the M6 stud (P). Attach a Tree Mount Zip Tie (T) to the MAP harness and clip to the welded bracket on the Manifold. Trim off excessive strap of the tie. (Fig. 32, Fig. 33)

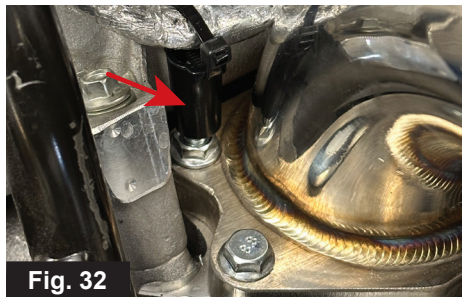

9. Reinstall MAP sensor back to the Manifold with Bolt (Q). Reinstall sensor shield onto the Manifold using two bolts (O) and one nut (S). (Fig. 34)



Fig. 34

10. Attach one EGR Gasket (H) to each end of EGR Pipe (B). Reinstall the four factory EGR pipe bolts. (Fig. 35)



Fig. 35

11. Install the EGR temp sensor back to the EGR Pipe, clip sensor harness to the welded tab of the Turbo Inlet. (Fig. 36)

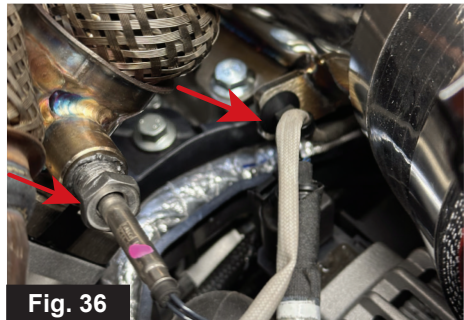



Fig. 36

12. Reconnect factory CCV hose to PPE Turbo Inlet. (Fig. 37)
13. Reinstall throttle plate housing and thermostat cover. Reinstall upper radiator hose, hot and cold charge air pipes. Reinstall IAT sensor to cold charge pipe connector.





Fig. 37


14. Reconnect the EGR coolant 4-way hose. Clip to the L-shape bracket of the PPE Manifold and support the hose with the built-in Rest on the Carbon Fiber Duct. (Fig. 38, Fig. 39)

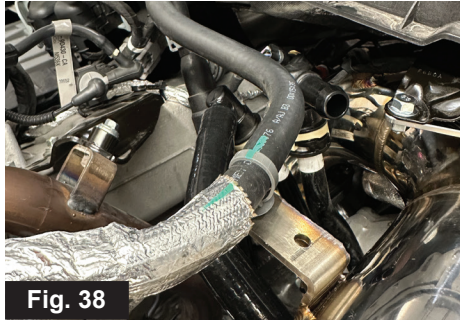


15. *Disconnect the quick connect fittings from the turbo coolant lines removed in Disassembly Step 7. Install the fittings to the turbo coolant tubes. (Fig. 40, Fig. 41)

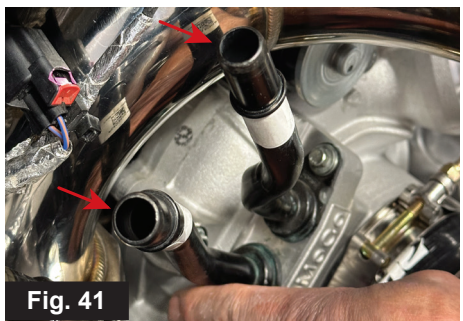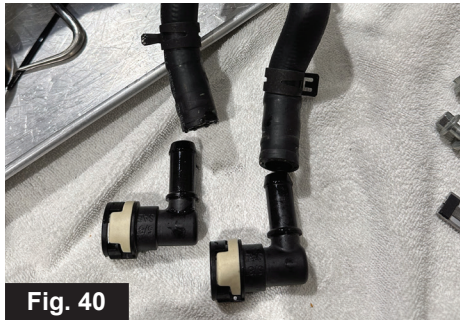

16. *Connect the Double-End Barbed Fitting to the factory coolant hose, then install the Turbo Coolant Return Hose. (Fig. 42) Use a Tree Mount Zip Tie to secure the return hose to the welded tab on the Manifold. (Fig. 43)

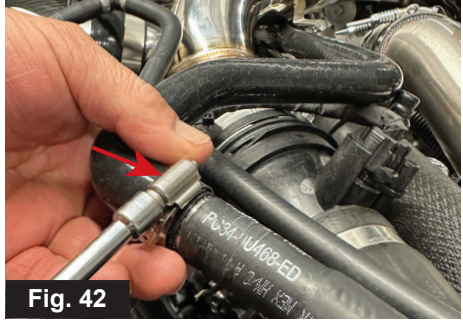

17. *Connect the Turbo Coolant Feed Hose to the coolant tube and to the radiator hose connector. The routing of the turbo coolant feed and return hoses is shown in (Fig. 44). Blue for feed, red for return.

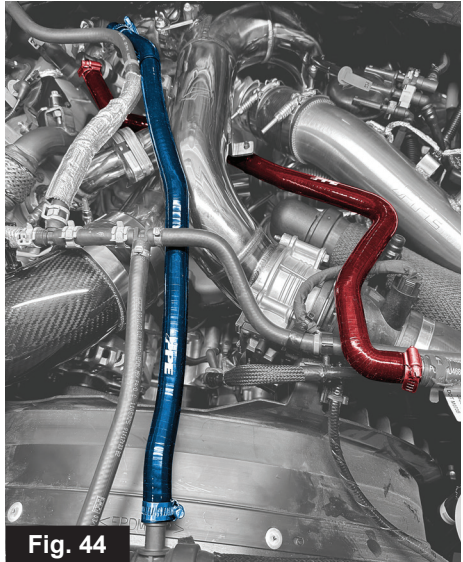

18. Reinstall battery negative cables. Refill coolant.

Installation Complete



DISCLAIMER OF LIABILITY

Performance products can increase horsepower above and beyond factory specifications. Additional horsepower creates more stress on the drive-train components, which could result in drive-train failure.

Note regarding emissions-related, non-E.O.-legal products: THESE PRODUCTS ARE LEGAL IN CALIFORNIA ONLY FOR RACING VEHICLES THAT MAY NEVER BE USED, OR REGISTERED OR LICENSED FOR HIGHWAY OR OFF-ROAD USE.

This agreement sets forth the terms and conditions for the use of PPE products. The installation of this product indicates that the Buyer has read and understands this agreement and accepts the terms and conditions. PPE (Pacific Performance Engineering) Inc., its distributors, employees, and dealers (the "Seller") shall not be responsible for the product's proper use and service. The buyer hereby waives all liability claims. The Buyer hereby acknowledges no reliance on the Seller's skill or judgment to select or furnish goods suitable for any particular purpose and that there are no liabilities which extend beyond the description on the face hereof, and the Buyer hereby waives all remedies or liabilities expressed or implied, arising by law or otherwise (including without any obligation of the Seller with respect to fitness, merchantability and consequential damages), or whether or not occasioned by the Seller's negligence. The Seller disclaims any warranty and expressly disclaims any liability for personal injury or damages. The Buyer acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and the Buyer agrees to indemnify the Seller and to hold the Seller harmless from any claim related to the item of equipment purchased. Under no circumstances will the Seller be liable for any damages or expenses by reason of use or sale of any such equipment. The Seller assumes no liability regarding the improper installation or misapplication of its products. It is the installer's responsibility to check for proper installation and if in doubt, contact the manufacturer. The Buyer is solely responsible for all warranty issues from the manufacturer.


LIMITATION OF WARRANTY

The Seller gives Limited Warranty as to description, quality, merchantability, and fitness for a particular purpose, productiveness, or any other matter of Seller's product sold herewith. The Seller shall not be responsible for the products proper use and service and the Buyer hereby waives all rights other than those expressly written herein. This warranty shall not be extended, altered or varied except by a written instrument signed by Seller and Buyer. The Warranty on PPE Manifolds and Up-Pipes Kits, OEM-Length Up-Pipes is three (3) years, a limited lifetime warranty on PPE cast aluminum pans and covers, and a limited lifetime warranty on PPE Transmission Coolers and one (1) year limited warranty on all other PPE products from the date of sale to original buyer and limited solely to the parts contained within the products kit. All products that are in question of Warranty must be returned prepaid to the Seller and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by Seller. Under no circumstances will the Seller be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or re-installation - of this product or any other contingent expenses. Under no circumstances will the Seller be liable for any damage or expenses incurred by reason of the use or sale of any such equipment. In the event that the buyer does not agree with this agreement: the buyer may promptly return this product, in a new and unused condition in its original packaging, with a dated proof of purchase to the place of purchase within ten (10) days from date of purchase for a full refund. The installation of this product indicates that the buyer has read and understands this agreement and accepts its terms and conditions.

⚠ CA WARNING: Handling passenger or off-highway motor vehicle parts can expose you to chemicals such as phalates and lead, which can cause cancer and reproductive harm. To minimize exposure, service the vehicle in a well-ventilated area, wear gloves, and wash your hands. For more information see www.P65Warnings.ca.gov/motor-vehicle-parts.



PACIFIC PERFORMANCE ENGINEERING



315054000-IG