

REDROCK

IN-CHANNEL WINDOW DEFLECTORS

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Window Deflector Set

TOOLS REQUIRED

Isopropyl Alcohol
Microfiber Cloth


REDROCK

STEP 1



Lower the vehicle window. Clean the top of the inner window seal using isopropyl alcohol and a microfiber cloth.

STEP 2

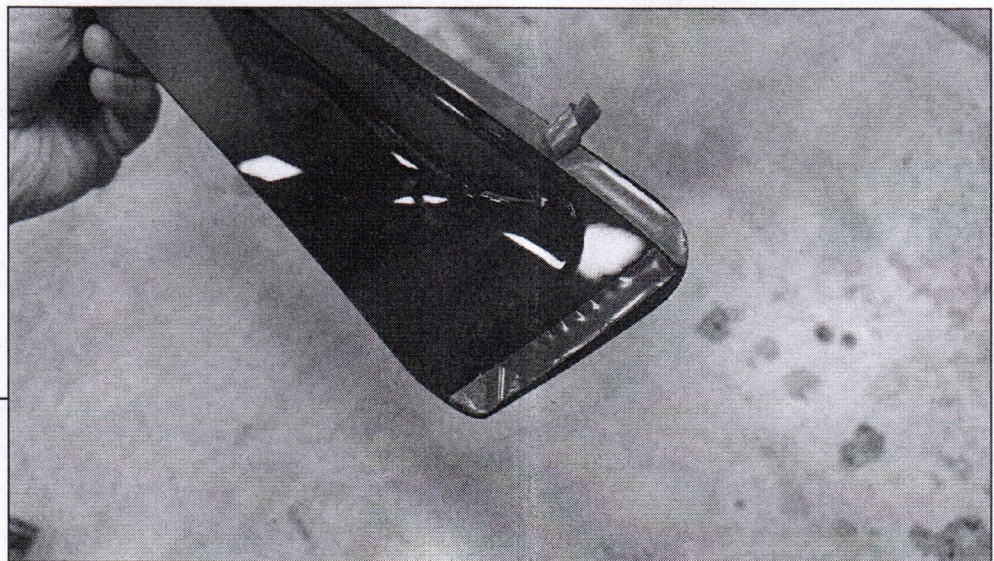

With the window seal cleaned, peel the red tape backing from the appropriate window deflector.

STEP 3



Fit the front portion of the window deflector into the window channel, and then fit the rear portion into the rear of the window channel. The window deflector is flexible and can be manipulated to allow proper fitment.

STEP 4



With the window deflector into place, carefully raise the window fully to fully seat the double sided tape to the window seal. Pulling the deflector outwards may be necessary to allow the window to raise properly initially. It is recommended to allow the deflector tape adhere for 24 hours with the window raised.

Repeat steps 1-4 for all remaining window deflectors. Installation is now complete.