



***baja designs***  
*The Scientists of Lighting*

**44-7853 - GMC,1500 (19-On), 2500 & 3500 (20-23), Reverse Light Kit Instructions**



2950 Norman Strasse Rd • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com



***baja designs***®  
*The Scientists of Lighting*

### **LIMITED LIFETIME WARRANTY**

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture. These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

#### **Exclusions:**

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

#### **Indemnification:**

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies. Buyer is responsible for ensuring that it uses the products (and its vehicle) in accordance with all applicable laws, regulations, guidelines, and standards of care. Buyer acknowledges that some products may only be used when off-roading, and Buyer will comply with all vehicle and road safety guidelines. Buyer is solely responsible for (and will indemnify and hold Bestop harmless for) any claims, losses, damages, fines, fees, costs, or other amounts arising out of Buyer's non-compliance with these provisions.


**\*\*For a color copy of instructions, visit your vehicle specific application on BajaDesigns.com \*\***

### **Tools Required**

- \* T-15, T-40 Torx Bit
- \* 10mm socket
- \* Flush Cuts Or Dikes



**1.** Using a T-15 Torx bit, remove the 2X bolts on the side of the tail light located inside the bed rail.

**2.** Gently pry on the top of the lights towards the back of the vehicle.

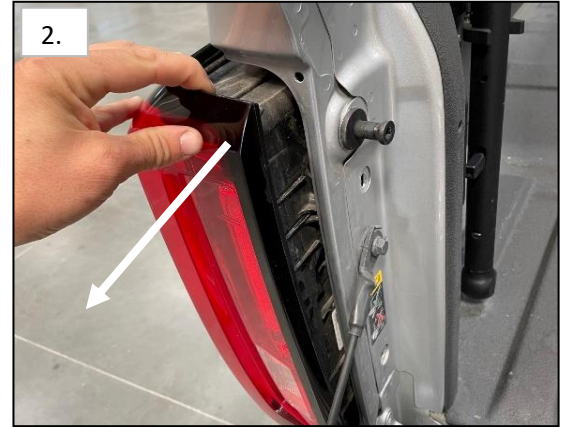


**3.** Pull back on the red tab of the tail light connector and push down on the locking tab to release the plug.

**4.** Locate the reverse light power wire. It will be the light green wire located on the bottom right of the connector.

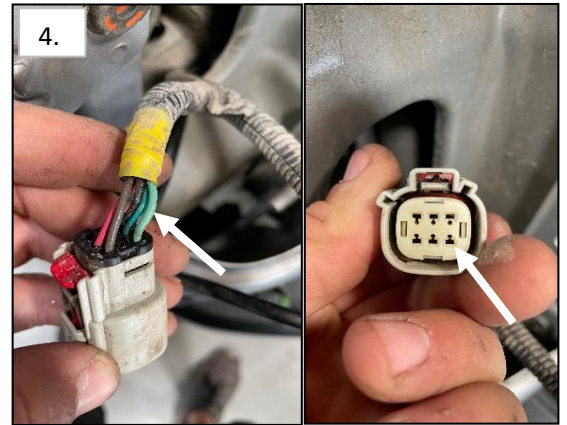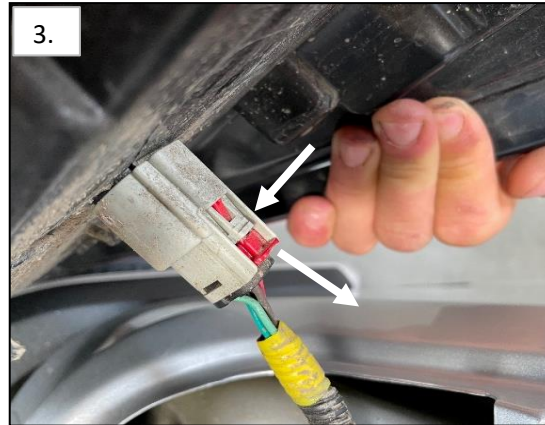

**5.** Use the splice connector on the reverse light harness and clasp the two ends together over the light green power wire.

**6.** Begin routing the wires behind the taillight and down to the bottom of the vehicle.

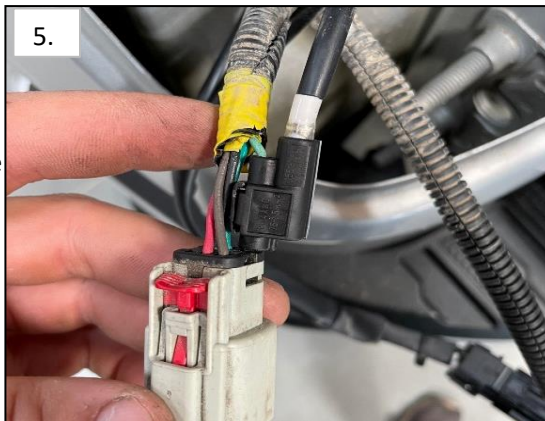



**7.** Located on the bottom side of the vehicle, is the anchor mount for the spare tire. Using a 10mm socket, remove the bolt and place the ring terminal for the ground wire.

**8.** Using a T-40 Torx bit, remove the 2X bumper bolts on the bottom side of the vehicle. (Driver side shown)

**9.** Using the OEM hardware, Place the S2 bracket onto the bumper and tighten down.

**10.** Finish mounting both driver and passenger side lights. Plug the 55" splitter into the reverse harness. Once routed across the vehicle, plug the lights into the 55" splitter.



\*Tie all wires away from sharp, hot, and/or rotating components.

\*Re-torque all the fasteners after 100 miles.

\*Your install is now complete! Thank you for choosing Baja Designs.

