

LED THIRD BRAKE LIGHT

(2014-2018 SILVERADO / SIERRA 1500)

(2015-2019 SILVERADO / SIERRA 2500 & 3500)

INSTALLATION INSTRUCTIONS

CONTENTS


(1) Third Brake Light

TOOLS REQUIRED

T-20 Torx Screwdriver
Plastic Pry Tool


SKU # S202271 / S202272 / S202273

STEP 1

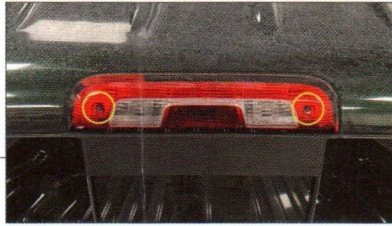

Remove (2) T-20 Torx screws from the third brake light assembly.

STEP 2

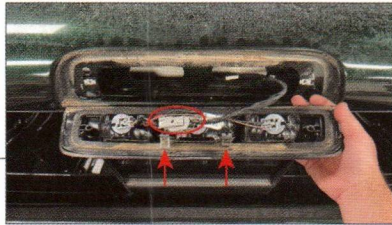

Remove the brake light from the vehicle using a plastic pry tool. Pull the tail light downwards while prying to dislodge the (2) metal retention tabs. Unplug the brake light from the vehicle harness.

STEP 3



Plug in the brake light electrical connector into the vehicle's wiring harness.

STEP 4



Re-assemble the vehicle using the original hardware. Tighten until secure.
Installation is now complete.