

LED THIRD BRAKE LIGHT

(2014-2018 SILVERADO / SIERRA 1500)

(2015-2019 SILVERADO / SIERRA 2500 & 3500)

INSTALLATION INSTRUCTIONS


CONTENTS

(1) Third Brake Light

TOOLS REQUIRED


T-20 Torx Screwdriver
Plastic Pry Tool

SKU # S202271 / S202272 / S202273

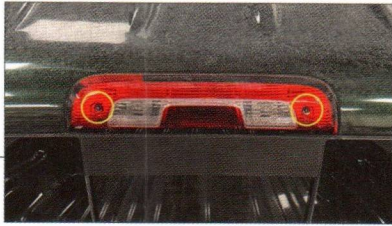

STEP 1

Remove (2) T-20 Torx screws from the third brake light assembly.

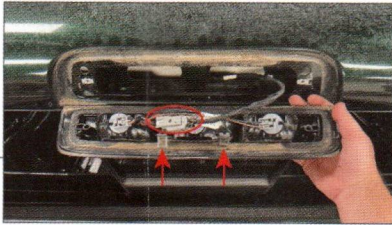

STEP 2

Remove the brake light from the vehicle using a plastic pry tool. Pull the tail light downwards while prying to dislodge the (2) metal retention tabs. Unplug the brake light from the vehicle harness.



STEP 3

Plug in the brake light electrical connector into the vehicle's wiring harness.



STEP 4

Re-assemble the vehicle using the original hardware. Tighten until secure.

Installation is now complete.