



Dodge Ram Fog Pocket Kit

1. Start by unplugging your factory fog lights.
2. Remove (3) 10mm bolts per side. The fog light assembly is now ready for removal. You will no longer need it.



3. Install the Baja Designs Squadrons onto the supplied brackets. **Please make it noted the direction of the Squadron brackets when installing them onto the lights.** We recommend Spot Beam on the inside and Driving/Combo or Wide Cornering on the outside.



4. Install the Baja Designs Brackets and Lights into the OEM location using the factory 10mm bolts.



5. Plug the supplied wiring adapter into the Baja Designs Lights then into your OEM Plug.
6. Your Install is now complete. Thank You for choosing Baja Designs: The Scientists of Lighting.



baja designs®
THE SCIENTISTS OF LIGHTING

**Dodge, Ram 2500/3500 (10-18), 1500 (09-12), Squadron Sport,
SAE Fog Pocket Kit
44-7619 & 44-7719**



2950 Norman Strasse • San Marcos • CA • 92069

Phone 760-560-2252 x3 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com



baja designs®
THE SCIENTISTS OF LIGHTING

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.

Buyer is responsible for ensuring that it uses the products (and its vehicle) in accordance with all applicable laws, regulations, guidelines, and standards of care. Buyer acknowledges that some products may only be used when off-roading, and Buyer will comply with all vehicle and road safety guidelines. Buyer is solely responsible for (and will indemnify and hold Bestop harmless for) any claims, losses, damages, fines, fees, costs, or other amounts arising out of Buyer's non-compliance with these provisions.

Tools Required

*12mm, 10mm, 9/16" socket *3/4" drill bit *Scissors
* 9/16" wrench

To begin, make sure the vehicle is in park, on level ground and the parking brake is engaged.


1. Start by unplugging your factory fog lights.

2. Using a 10mm socket, remove the 3 bolts per side (image 2 is the driver side). Once the bolts are removed you can take the fog light assembly out and place it out of the way. You will no longer need the assembly. Keep the 10mm bolts.



3. Using the provided hardware, attach the silver u-bracket to the lights.

4. Once you have the u-bracket attached to each light you will then attach the lights to the provided vehicle bracket. Using a 9/16 socket and a 9/16 wrench attach the lights to the bracket. Attach the Squadron SAE on the outside and the Squadron Sport on the inside.

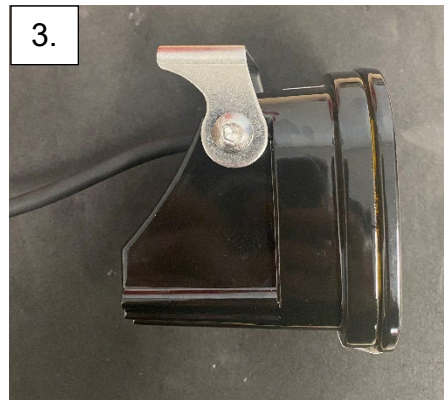

5. Now install the Baja Designs brackets and lights into the OEM location using the factory 10mm bolts (image 5 is the driver side).

6. Using the supplied wiring adapters, plug the Squadron SAE's into the factory OEM plug.



7. Locate the included wiring harness and mount the relay to the common ground using the mounting tab on the relay.

8. Run the switch lead along the firewall and to the wiring passthrough location.

7. & 8.



9. Select a location on the dash for the switch. Check for clearance behind the switch panel and drill a $\frac{3}{4}$ " hole for the switch.

10. Take a reference photo of the switch wiring. Disconnect the spade connectors and run the wires through the firewall and switch hole. Plug the switch back in and install it into the hole.

10.



11. Using a 12mm socket, remove the negative battery cable. Connect the positive ring terminals to the positive battery wire. Repeat for the negative ring terminals to the negative battery wire and reconnect the negative cable.

12. Run the light connectors to both sides and plug in the Squadron Sports.

*Tie all wires away from sharp, hot, and/or rotating components.

* Re-torque all the fasteners after 100 miles.

*Your install is now complete! Thank you for choosing Baja Designs.