


INSTALATION INSTRUCTIONS


UNIVERSAL RUNNING BOARD

| Parts List | | | |
|------------|-------|----------|-------------------|
| Item | QTY | Code | Description |
| 1 | 1 set | | Running Board |
| 2 | 6 pcs | 397872AA | U (clamp) bracket |

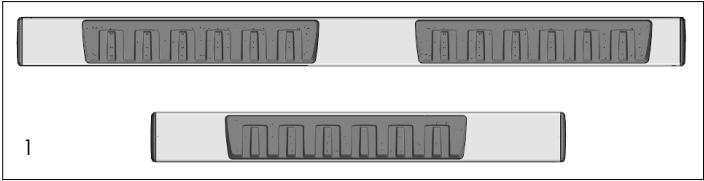

Required Tool:

- A. Ratchet w/5" extension
- B. 15mm wrench
- C. 17mm 12-point socket



1. Before beginning the installation read all instructions thoroughly and verify that all hardware is accounted for. if there are any listed parts missing, please notify your distributor immediately.
2. To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. It is recommended to use only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.
3. Once the main brackets are installed **(sold separately)**, the approximate installation time is **15 min.**
4. Identify the outboard side of the running board prior to install. **See illustration 1.**
5. Place the U brackets inside the Running Board. Move them to align to the main brackets.
6. Place the flat and lock washers with the square head bolts. This hardware kit is included on the main brackets that are **(sold separately)**. **See illustration 2.**
7. Align the Running board and tighten the bolts using the wrench or the socket.
8. **NOTE: For some regular cabs only two U brackets are needed per side.**

Illustration 1


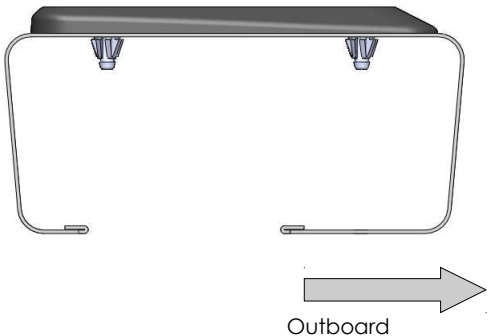



Illustration 2

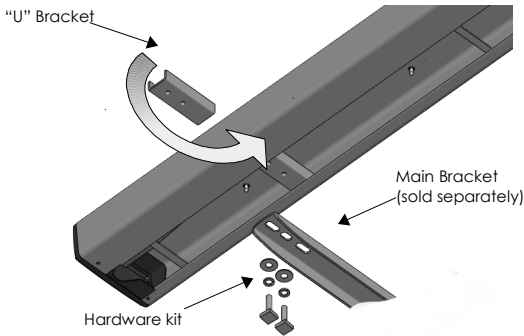

INSTRUCTIVO DE INSTALACIÓN


ESTRIBO UNIVERSAL

| Lista de partes | | | |
|-----------------|--------|----------|-------------|
| ítem | Cant | Código | Descripción |
| 1 | 1 jgo. | | Estribos |
| 2 | 6 pzas | 397872AA | Bracket "U" |

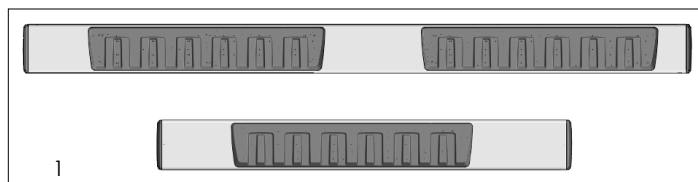

Herramienta Requerida:

- A. Matraca c/ extensión 5"
- B. Llave española 15mm
- C. Dado estriado 17mm



1. Lea y comprenda perfectamente todas las instrucciones antes de comenzar la instalación. Si alguna de las partes listadas no se encuentra, no continúe con la instalación y llame a su distribuidor inmediatamente para obtener los componentes faltantes.

2. Para el cuidado y mantenimiento de este producto se recomienda mantenerlo limpio y no utilizar ceras abrasivas con el fin de proteger el acabado.

3. Una vez instalados los brackets **(se venden por separado)**, el tiempo de instalación de este producto es de **15 min.**

4. Identifique la cara exterior del estribo, ésta es la que tiene la ceja más grande por la parte de abajo. Ver ilustración 1.

5. Coloque los brackets U dentro del Running board y desplácelos para alinearlos con el bracket principal. Ver ilustración 2.

6. Coloque rondanas planas y de presión con los tornillos cabeza cuadrada. Esta tornillería va incluida dentro de los brackets **(que se venden por separado)**. Ver ilustración 2.

7. Alineé el Running board y apriete la tornillería, usando la llave española ó el dado estriado.

NOTA: En algunos casos para cabinas regulares (estribos con una huella por lado), sólo se utilizan dos brackets U por lado.

Ilustración 1


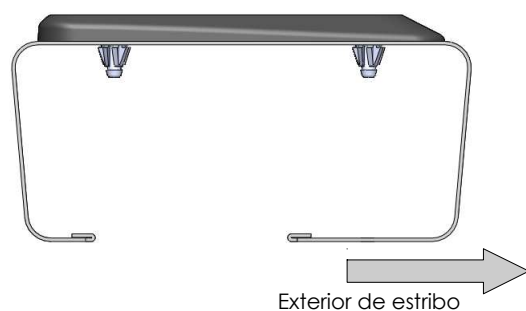


Ilustración 2





INSTALLATION INSTRUCTIONS

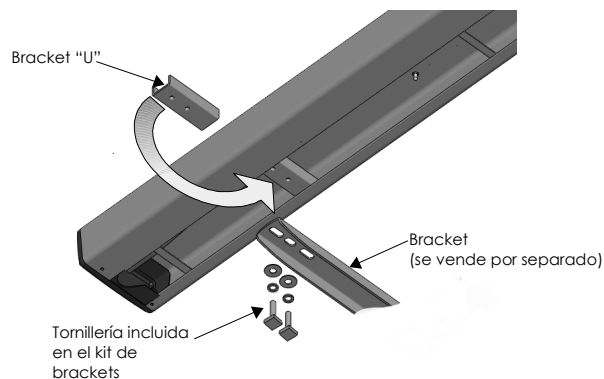

PART NO.

- 6840435

PRODUCT DESCRIPTION:

- OE Xtreme Brackets

VEHICLE APPLICATION

- Chevy Silverado
- GMC Sierra

PRODUCT SAFETY & LEGAL DISCLAIMER

- **IMPORTANT READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING, FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY.**
- **Review the product package and contents prior to beginning the installation.** Take care when opening the packaging and removing items. If a return is needed you will want to return the product in its original packaging if possible.
- This instruction guide is provided as a GENERAL installation guide, some vehicles vary dimensionally and may require additional steps.
- Test fit the product on the vehicle prior to any third party modifications and or finishing. The manufacturer and/or distributors do not accept responsibility for third party charges, labor and or third part replacement modifications. Some modifications may void the factory warranty.
- Exercise due-diligence when installing this product. The manufacturer and distributors of this product do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product. Careless installation and operation can result in serious injury or equipment damage.
- This product is for general off-road use. All liability for installation and use rests with the owner/operator.
- **INSTALLER:** Once installation is complete, please return this guide along with other documentation included in this product back to the consumer for future reference. The manufacturer/distributors of this product do not guarantee this particular version will be available at a later date.

© 2016 Go Rhino Products. All rights reserved

www.gorhino.com

589 W. Apollo St., Brea, CA 92821

P: 888 427 4466



INSTALLATION INSTRUCTIONS

INJURY HAZARD

Please complete a shop and tool inspection prior to beginning the installation.

- Always make sure you have a clean, dry and well lit work area.
- Always remove jewelry, loose fitting clothing and wear protective gloves and eye protection.
- Always use extreme caution when jacking or raising a vehicle for work. Set the emergency brake and use tire/wheel blocks and jack stands. Refer to the vehicle manufacturer hand book. Utilize the vehicle manufacturers designated lifting points.
- Always use appropriate and adequate care in lifting parts during disassembly and installation. Seek help in lifting heavy or large items into place. Utilize jacks and or lifting devices when available.
- Always insure products are secure during disassembly and installation.
- Always wear eye protection and take steps to protect any exposed skin during the installations. Drilling, cutting and grinding plastic and metal may create flying particles that can cause injury.
- Always use extreme caution when drilling, cutting and or grinding on a vehicle. Thoroughly inspect the area to be drilled, on both sides of material, prior to modification and relocate any objects that may become damaged.
- Always assemble and tighten all fasteners per the installation instructions.
- Always route electrical cables carefully. Avoid moving parts, parts that may become hot and rough or sharp edges.
- Always insulate and protect all exposed wiring and electrical connections.

MAINTENANCE AND CARE

- Always perform regular inspections and maintenance on mounts and related fasteners.
- Periodically check and tighten all fasteners.
- Stripped, fractured, or bent fasteners must be replaced.
- After washing the vehicle make sure to fully dry all surfaces.
- In areas with cold temperatures make sure to wash the product often to remove harmful materials used on road ways.
- Never use abrasive cleaners or polish compounds. Clean with a gentle soap and water. If you use wax use a non-abrasive automotive wax such as pure carnauba wax.

WARNING


Some products have been designed to work together with factory rear sensor systems, factory forward facing sensor systems and factory air bags.

- Installation of some of these products may alter the factory sensor system performance.
- Factory sensors may read shackles or hooks protruding from the fairlead and or tow hooks.
- All sensor testing is completed by Go Rhino Products and or third party testing labs on modified vehicles.
- Sensor sensitivity, factory sensor housing, orientation, and operating conditions are all variables that will influence functionality of the sensors.
- Installation of some product may effect the factory air bag systems.
- Some products allow the use of third party products such as winches, shackles, hooks, etc. Follow the respective manufacturers operating instructions for use with our products.
- Make sure to fully understand the product, it's intended use and operation prior to use.
- Above all... be safe!



INSTALLATION INSTRUCTIONS

PARTS INCLUDED IN THIS LIST:

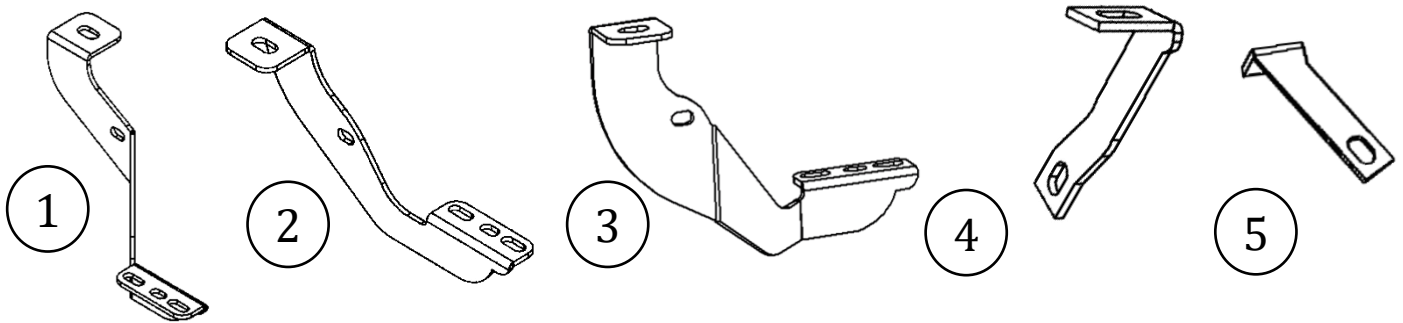

| Item | QTY | DESCRIPTION | TORQUE MAX. |
|------|-----|--|-------------|
| 1 | 1 | Front mounting bracket set | - |
| 2 | 1 | Middle mounting bracket set | - |
| 3 | 1 | Rear mounting bracket set | - |
| 4 | 2 | Front and middle auxiliary bracket set | - |
| 5 | 1 | Rear auxiliary bracket set | - |
| 6 | 6 | 5/16" bolt plate | 11 Lb-Ft |
| 7 | 12 | 5/16" Square head bolt | 11 Lb-Ft |
| 8 | 18 | 5/16" Flat washer | - |
| 9 | 18 | 5/16" Lock washer | - |
| 10 | 18 | 5/16" hex nut | 11 Lb-Ft |
| 11 | 6 | M12 x 120mm Hex head bolt | 70 Lb-Ft |
| 12 | 6 | 1/2" Flat washer | - |
| 13 | 6 | 1/2" Lock washer | - |
| 14 | 6 | 3/8 x 1" Carriage head bolt | 30 Lb-Ft |
| 15 | 6 | 3/8" Flat washer | - |
| 16 | 6 | 3/8" Lock washer | - |
| 17 | 6 | 3/8" Hex nut | 30 Lb-Ft |

Go Rhino recommends you, the installer, read this installation instruction manual from front to back before installing the product. You may also [click here](#) to view an installation video or visit <http://www.gorhino.com/Installation-Videos>.

TOOLS NEEDED FOR INSTALLATION:

- Socket hex 18mm-19mm -9/16" - 1/2"
- 17mm hex socket (12 point) or 15mm Wrench

ESTIMATED TIME FOR INSTALLATION:




1 hr

If you need installation service for your new product, call the authorized distributor from whom you purchased the product or an authorized installation service company which can be found by calling toll free 1-888-427-4466

GO RHINO®

INSTALLATION INSTRUCTIONS

Passenger Side Orientation

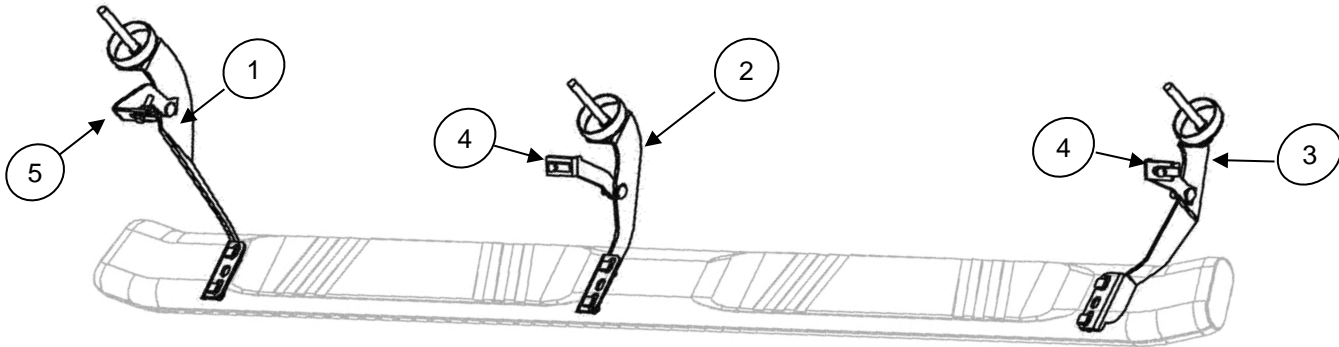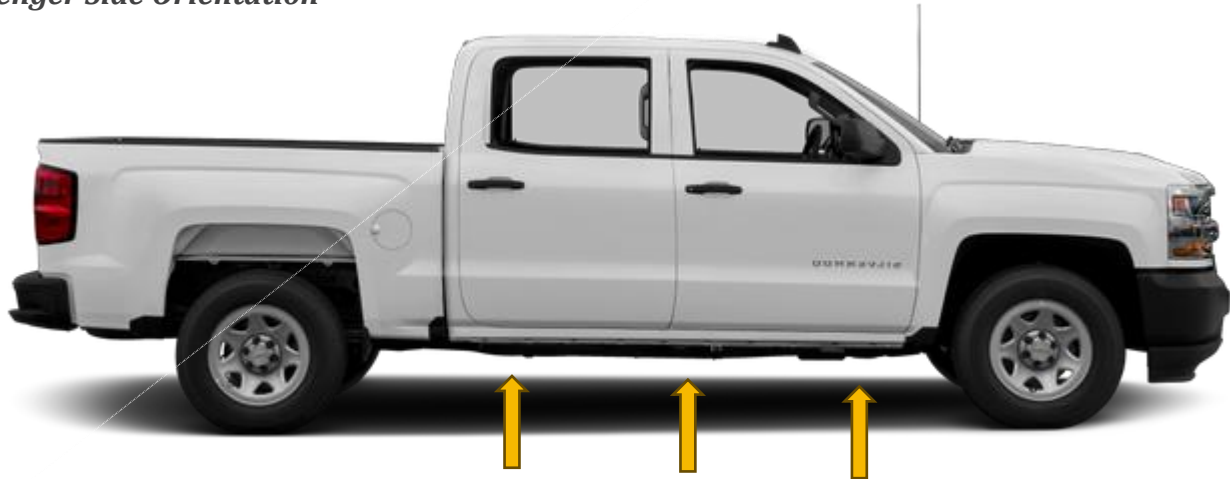

WARNING!




2011-Current models do not use an impact wrench to Un-Tighten the body mounting bolts! Always loosen them by hand.

NOTE:

2001-2004 models change the original body mount bolt for the M12 x 120 mm hex head Bolt, 1/2" flat and lock washers provided. 2005-Current models use the original bolts to attach the brackets.



INSTALLATION INSTRUCTIONS

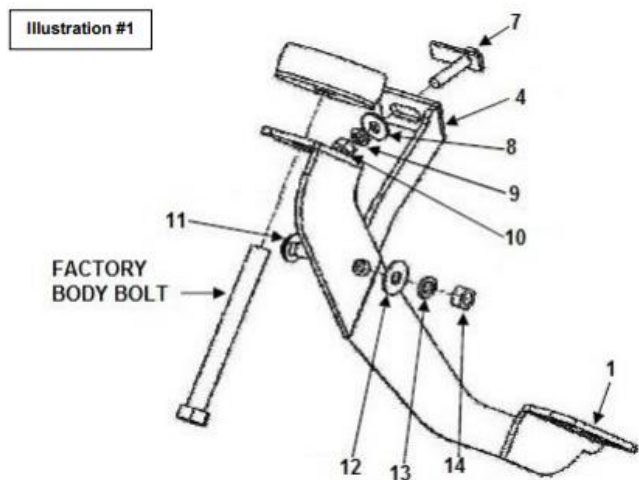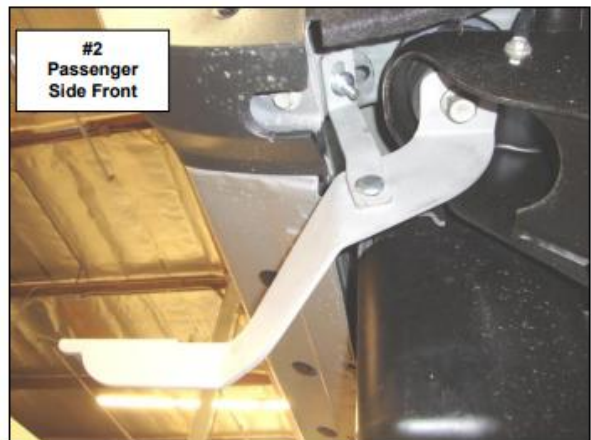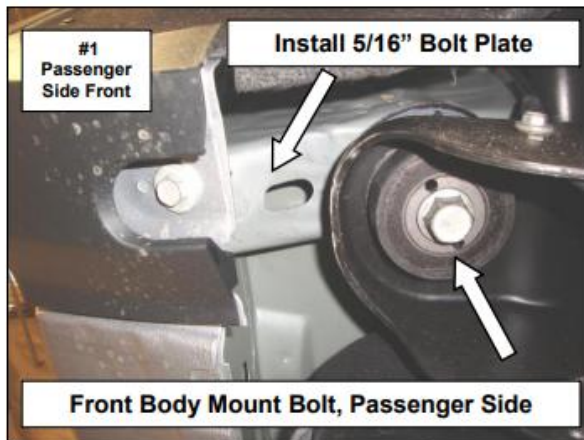

Step 1: Install Front Bracket




- Remove the front body mount bolt on the passenger side (see Photo 1).
- Keep the factory washers and bushings in place.
- Attach the front bracket to the vehicle using the original body mount bolt. Leave it loose for adjustment (Photo 2, Illustration 1).

Step 2: Install Front Auxiliary Bracket

- Locate the obround hole on the underside of the body and insert a 5/16" bolt plate (see Photo 1).
- Secure the front auxiliary bracket to the body using:
 - (1) 5/16" flat washer
 - (1) 5/16" lock washer
 - (1) 5/16" hex nut
- Connect the other end of the auxiliary bracket to the side of the front bracket using:
 - (1) 3/8" x 1" carriage bolt
 - (1) 3/8" flat washer
 - (1) 3/8" lock washer
 - (1) 3/8" hex nut
- Leave all fasteners loose for final adjustment (Photo 2, Illustration 1).



INSTALLATION INSTRUCTIONS

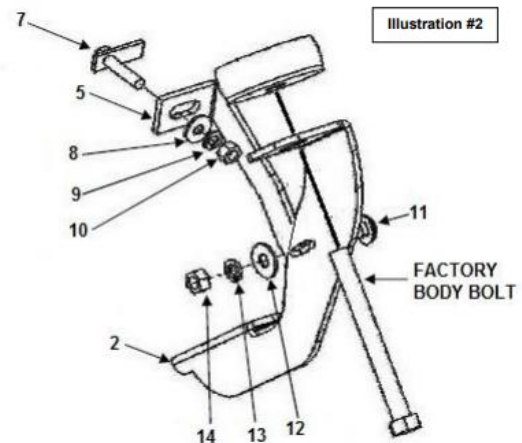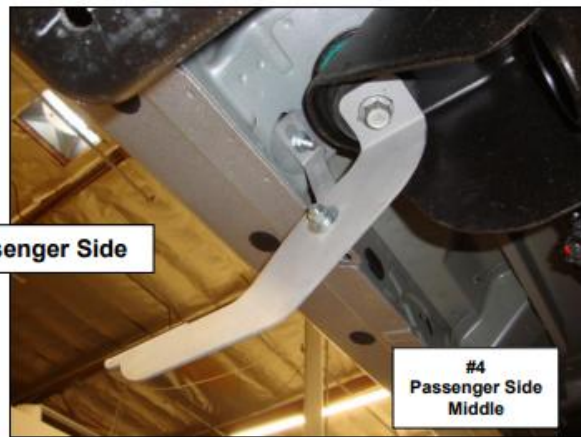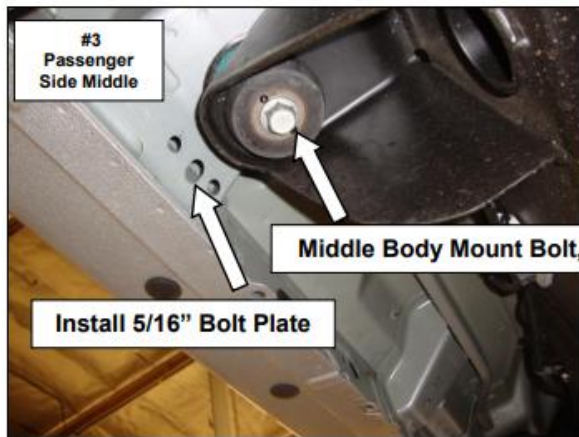

Step 3: Install Middle Bracket



- Remove the middle body mount bolt on the passenger side (see Photo 3).
- Retain the original washers and bushing.
- Attach the middle bracket using the factory bolt. Leave it loose for adjustment (Photo 4, Illustration 2).

Step 4: Install Middle Auxiliary Bracket

- Find the obround hole beneath the body and insert a 5/16" bolt plate (see Photo 3).
- Secure the auxiliary bracket to the body using:
 - (1) 5/16" flat washer
 - (1) 5/16" lock washer
 - (1) 5/16" hex nut
- Attach the other end of the auxiliary bracket to the middle bracket using:
 - (1) 3/8" x 1" carriage bolt
 - (1) 3/8" flat washer
 - (1) 3/8" lock washer
 - (1) 3/8" hex nut
- Leave all fasteners loose (Photo 4, Illustration 2).



INSTALLATION INSTRUCTIONS

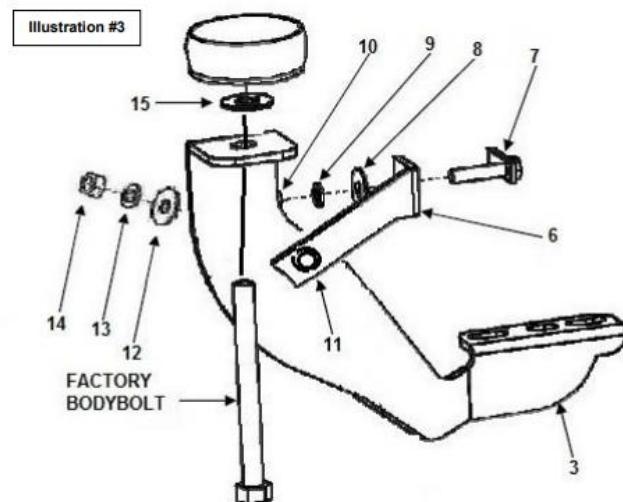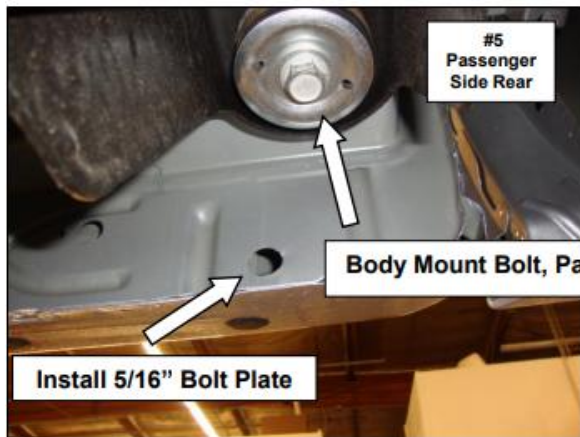

Step 5: Install Rear Bracket

- Remove the rear body mount bolt on the passenger side (see Photo 5).
- Keep all existing washers and bushings.
- Attach the rear bracket using the factory bolt and one supplied $\frac{1}{2}$ " flat washer. Leave the bolt loose (Photo 6, Illustration 3).

Step 6: Install Rear Auxiliary Bracket

- Remove the plastic plug from the rocker panel to expose the round hole (see Photo 5).
- Insert a 5/16" bolt plate into the hole.
- Secure the auxiliary bracket to the rocker panel using:
 - (1) 5/16" flat washer
 - (1) 5/16" lock washer
 - (1) 5/16" hex nut
- Attach the other end to the rear bracket with:
 - (1) $\frac{3}{8}$ " x 1" carriage bolt
 - (1) $\frac{3}{8}$ " flat washer
 - (1) $\frac{3}{8}$ " lock washer
 - (1) $\frac{3}{8}$ " hex nut
- Leave all hardware loose for final alignment (Photo 6, Illustration 3).



INSTALLATION INSTRUCTIONS

LIMITED WARRANTY

Go Rhino warrants to Buyer that for a period of five (5) years from the date of shipment of the product(s) ("Warranty Period") for black finishes and chrome finishes, that such products will materially conform to the specifications set forth in Go Rhino's specifications in effect as of the date of shipment(s) and will be free from material defects in material workmanship.

Go Rhino warrants to Buyer that for the life of the product(s) from the date of shipment of the product(s) ("Warranty Period") for polished stainless steel finished products purchased after April 2004, that such products will materially conform to the specifications set forth in Go Rhino's specifications in effect as of the date of shipments and will be free from material defects in material workmanship.

Warranty claims must be accompanied with the original invoice and photos of the product. It is the customer's responsibility to clean regularly and protect finish with regular applications of a nonabrasive polish that is compatible with the product's finish.

This warranty covers the cost of the product only and does not include the cost of removal, installation, third party modifications or shipping of the product. In no event shall Go Rhino be liable to buyer or any third party for any damage or harm caused by the product or use thereof, regardless of weather such damages were foreseeable and whether or not Go Rhino has been advised of the possibility of such damages, not withstanding the failure of any agreed or other remedy of its essential purpose. This warranty is void if the product shows signs of alteration, misuse, mishandling, improper care, neglect, improper application and/or damage due to improper installation.

With respect to any such product(s) during the limited warranty period, Go Rhino shall, in its sole discretion, either: (i) provide a one-time repair or replacement of such products (or the defective part) or (ii) credit or refund the price of such products at the pro rata contract rate provided that, if Go Rhino so requests, Buyer shall, at Go Rhino's expense, return such product(s) to Go Rhino. The remedies shall be the Buyer's sole and exclusive remedy and Go Rhino's entire liability for any breach of the limited warrant(ies).

Go Rhino disclaims all other warranties except to the extent that any such warranty cannot be validly disclaimed under applicable law.

Finish Limited Warranty:

Limited lifetime on stainless steel products (after April 2004)

5 year warranty on black powder coat products

5 year warranty on chrome products

This warranty does not cover exposed welds

Finish warranty covers peeling, flaking, or cracking. Washing all finishes regularly with car wash soap and rinsing well with water is the best method for maintaining the finish on your products. You must also protect the finish with nonabrasive automotive wax on a regular basis. The use of any compound which contains abrasives becomes a self-defeating exercise as the compound scratches the finish and opens it to corrosion. The use of harsh chemicals used to remove bugs and tar may also cause the finish to fail and should be avoided.

If you are unsatisfied with your purchase please contact the establishment you purchased the product from.

If you need to place a warranty claim or need assistance, the Go Rhino customer service team will answer any questions you may have. Please contact the Go Rhino customer service team at 1-888-427-4466 during normal business hours Monday thru Friday 7 am to 5 pm PST. You may also email warranty@gorhino.com. In order to better serve you please provide a copy of the original invoice / receipt, a photo of the issue you are experiencing and a photo of the vehicle the product is installed on.

All warranty returns must have an approved RGA number. The RGA number must be clearly marked on the exterior of the return package. All approved warranty returns must be shipped to Go Rhino Products, 1002 Carriers Drive, Laredo, Texas 78045.

PRODUCT REGISTRATION

Please remember to register your new purchase. You may register your product at www.gorhino.com. Registering your product may help speed any future warranty or customer service inquiries.

Thank you again for purchasing from Go Rhino Products

Please take a few minutes to view additional products for your vehicle and more at GORHINO.com
These installation instructions are available on the Go Rhino web site along with installation videos for many of our products.


www.gorhino.com

www.bigcountryauto.com

www.gorhinopd.com


INSTALATION INSTRUCTIONS
UNIVERSAL RUNNING BOARD

| Parts List | | | |
|------------|-------|----------|-------------------|
| Item | QTY | Code | Description |
| 1 | 1 set | | Running Board |
| 2 | 6 pcs | 397872AA | U (clamp) bracket |

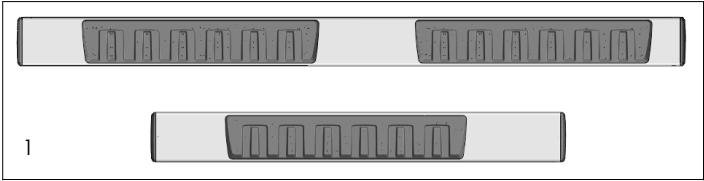

Required Tool:

- A. Ratchet w/5" extension
- B. 15mm wrench
- C. 17mm 12-point socket

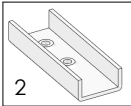

1. Before beginning the installation read all instructions thoroughly and verify that all hardware is accounted for. if there are any listed parts missing, please notify your distributor immediately.
2. To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. It is recommended to use only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.
3. Once the main brackets are installed **(sold separately)**, the approximate installation time is **15 min.**
4. Identify the outboard side of the running board prior to install. **See illustration 1.**
5. Place the U brackets inside the Running Board. Move them to align to the main brackets.
6. Place the flat and lock washers with the square head bolts. This hardware kit is included on the main brackets that are **(sold separately)**. **See illustration 2.**
7. Align the Running board and tighten the bolts using the wrench or the socket.
8. **NOTE: For some regular cabs only two U brackets are needed per side.**

Illustration 1


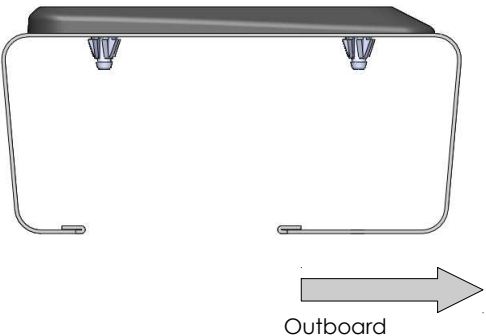



Illustration 2

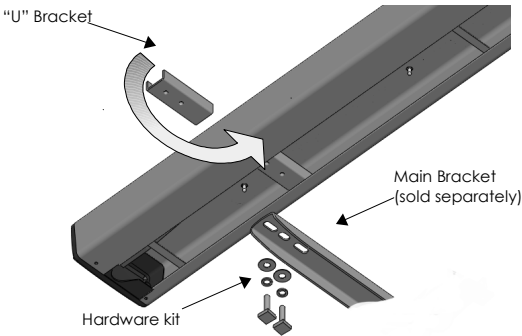

INSTRUCTIVO DE INSTALACIÓN


ESTRIBO UNIVERSAL

| Lista de partes | | | |
|-----------------|--------|----------|-------------|
| ítem | Cant | Código | Descripción |
| 1 | 1 jgo. | | Estribos |
| 2 | 6 pzas | 397872AA | Bracket "U" |

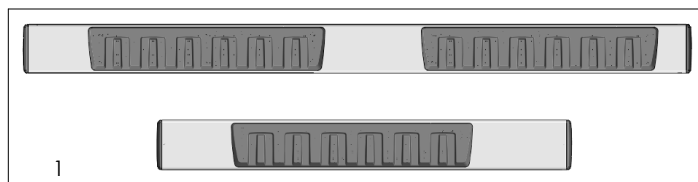

Herramienta Requerida:

- A. Matraca c/ extensión 5"
- B. Llave española 15mm
- C. Dado estriado 17mm



1. Lea y comprenda perfectamente todas las instrucciones antes de comenzar la instalación. Si alguna de las partes listadas no se encuentra, no continúe con la instalación y llame a su distribuidor inmediatamente para obtener los componentes faltantes.

2. Para el cuidado y mantenimiento de este producto se recomienda mantenerlo limpio y no utilizar ceras abrasivas con el fin de proteger el acabado.

3. Una vez instalados los brackets **(se venden por separado)**, el tiempo de instalación de este producto es de **15 min.**

4. Identifique la cara exterior del estribo, ésta es la que tiene la ceja más grande por la parte de abajo. Ver ilustración 1.

5. Coloque los brackets U dentro del Running board y desplácelos para alinearlos con el bracket principal. Ver ilustración 2.

6. Coloque rondanas planas y de presión con los tornillos cabeza cuadrada. Esta tornillería va incluida dentro de los brackets **(que se venden por separado)**. Ver ilustración 2.

7. Alineé el Running board y apriete la tornillería, usando la llave española ó el dado estriado.

NOTA: En algunos casos para cabinas regulares (estribos con una huella por lado), sólo se utilizan dos brackets U por lado.

Ilustración 1

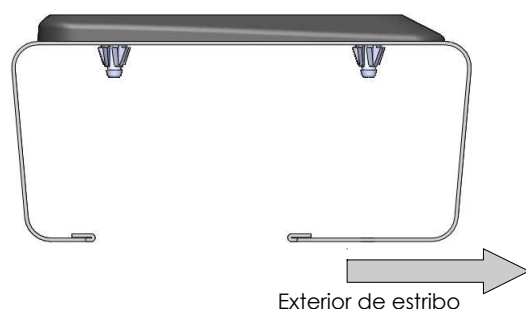


Ilustración 2

