


# INSTALLATION INSTRUCTIONS

## PRO MOD SKID PLATE




**APPLICATION:**  
Silverado 2500/3500 2020  
**PART NUMBER:**  
58-71225

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	SKID PLATE	18MM SOCKET
2	1	DRIVER SIDE BRACKET	18MM WRENCH
3	1	PASSENGER SIDE BRACKET	19MM SOCKET
4	4	M12 HEX HEAD BOLT	19MM WRENCH
5	4	M12 HEX NUT	13MM SOCKET
6	8	M12 FLAT WASHER	13MM WRENCH
7	4	M12 SPLIT LOCK WASHER	UTILITY KNIFE
8	10	M8 BUTTON HEAD BOLT	RATCHET
9	10	M8 FLAT WASHER	TORQUE WRENCH
10	10	M8 SPLIT LOCK WASHER	PLIERS
11	6	M8 SERRATED FLANGE NUT	5MM ALLEN
12	4	M8 U-CLIP	
<b>ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING</b>			

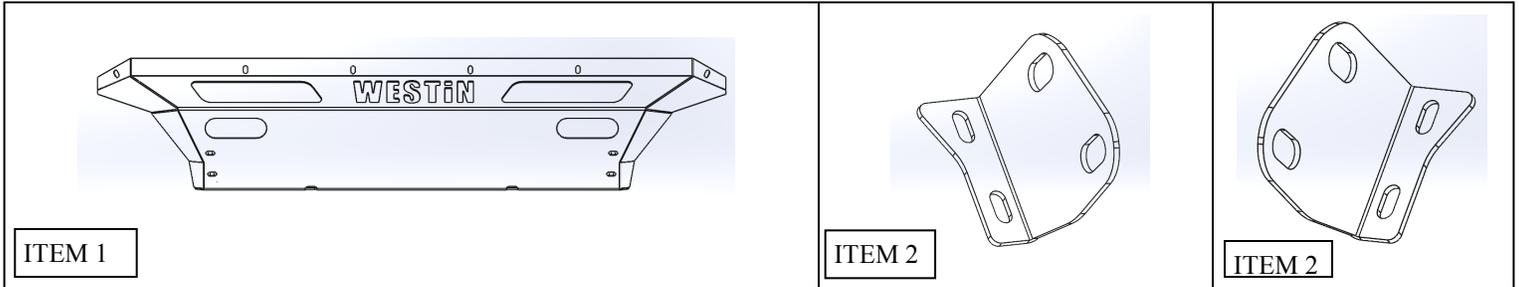


**PROCEDURE**

1. Remove contents from box, verify if all parts listed are present and free from damage.  
Carefully read and understand all instructions before attempting installation.  
**Failure to identify damage before installation could lead to a rejection of any claim.**

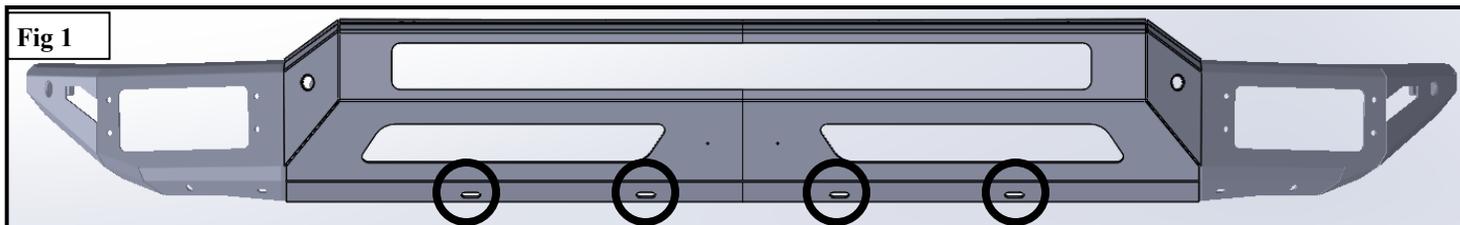


2. Install U-Clips (Item 12) on the bumper at the locations circled on **Figure 1**.

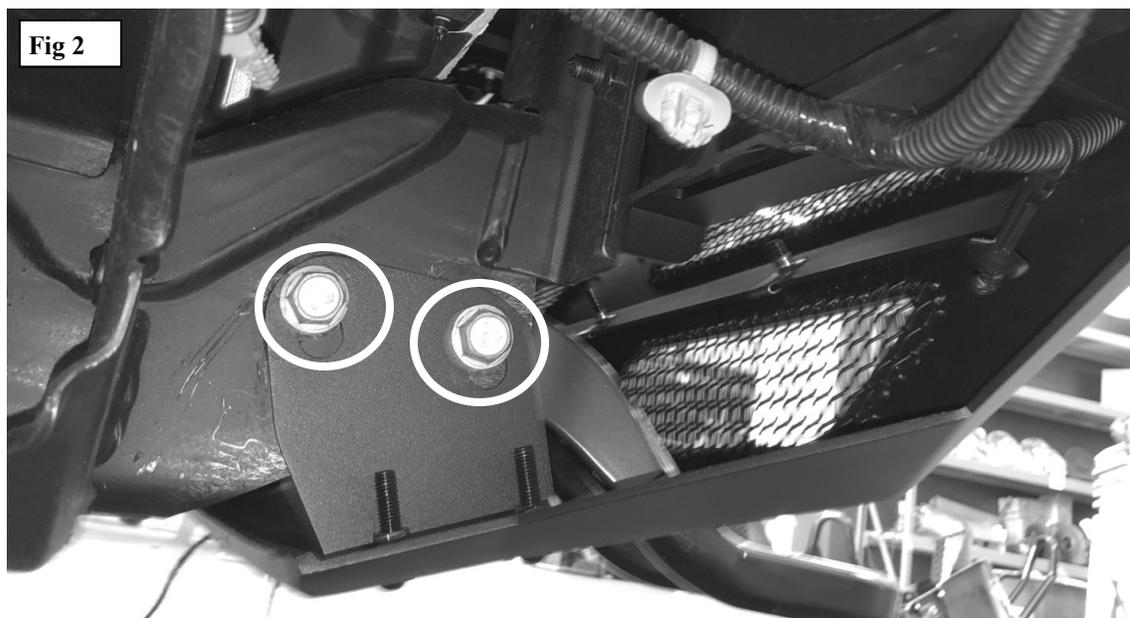

3. Install mounting brackets items 2 and 3 on frame according to **Figure 2** using M12 hardware (**Items 4-7**).  
Note: If tow hooks are present, use OEM hardware instead of the supplied M12 hardware.

4. Install skid plate and fasten using M8 hardware. Use serrated flange nuts for the four bottom bolts and for the two outer bolts on the top. **See figure 3.**

Fig 3

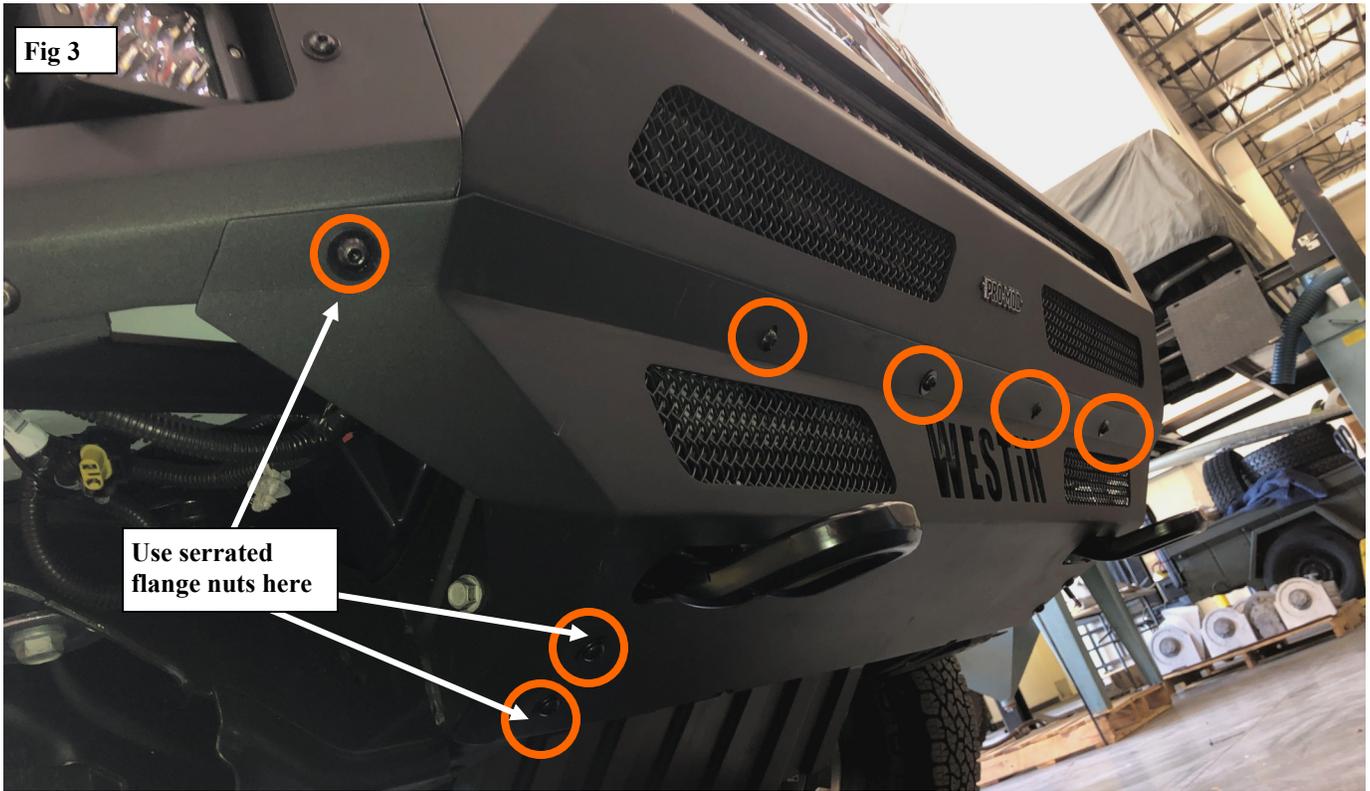

Use serrated  
flange nuts here

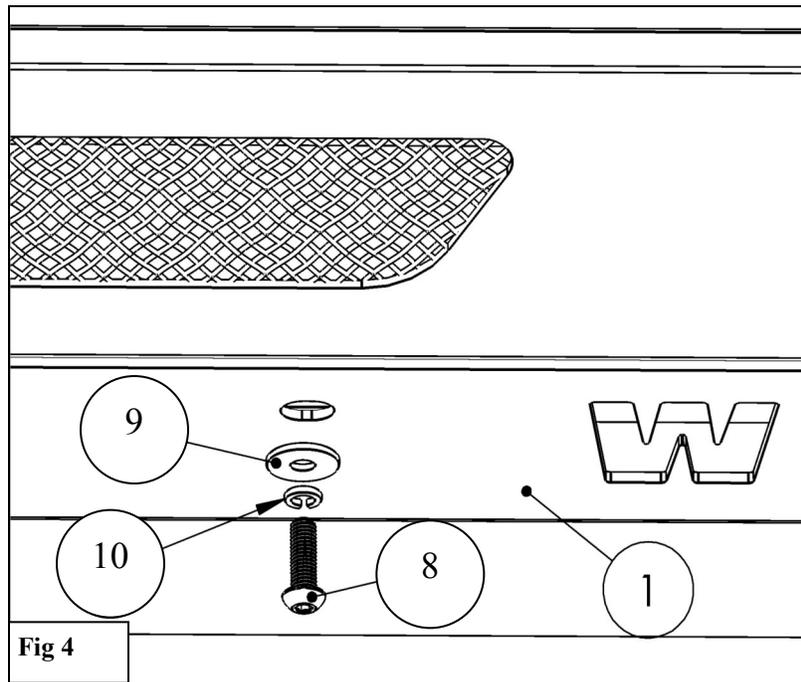


Fig 4

Installation Complete



©19 WESTIN AUTOMOTIVE PRODUCTS, INC. ALL RIGHTS RESERVED

Bumper and lights sold separately.

#### CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.

**WESTIN** Westin Automotive Products, Inc.  
320 W. Covina Blvd  
San Dimas, Ca. 91773

P.N.:75-5871225-RevA ECO #: W19-0104

4

Thank you for choosing Westin products  
for additional installation assistance please call  
Customer Service (800) 793-7846  
[www.westinautomotive.com](http://www.westinautomotive.com)

DATE: 12/30/19



## WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

### FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

### DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

### EYE PROTECTION:

**ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.**

### MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

### FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov)



Westin Automotive Products, Inc.  
320 W. Covina Blvd  
San Dimas, Ca. 91773