



HD FORGED TIE ROD ENDS

(2011-2024 SILVERADO 2500 / 3500)

INSTALLATION INSTRUCTIONS

CONTENTS


(2) Tie Rod Ends

TOOLS REQUIRED

21mm Socket
Ratchet
Breaker Bar
Large Adjustable Wrench
Joint Removal Tool
Grease Gun

SKU # HS58058

STEP 1

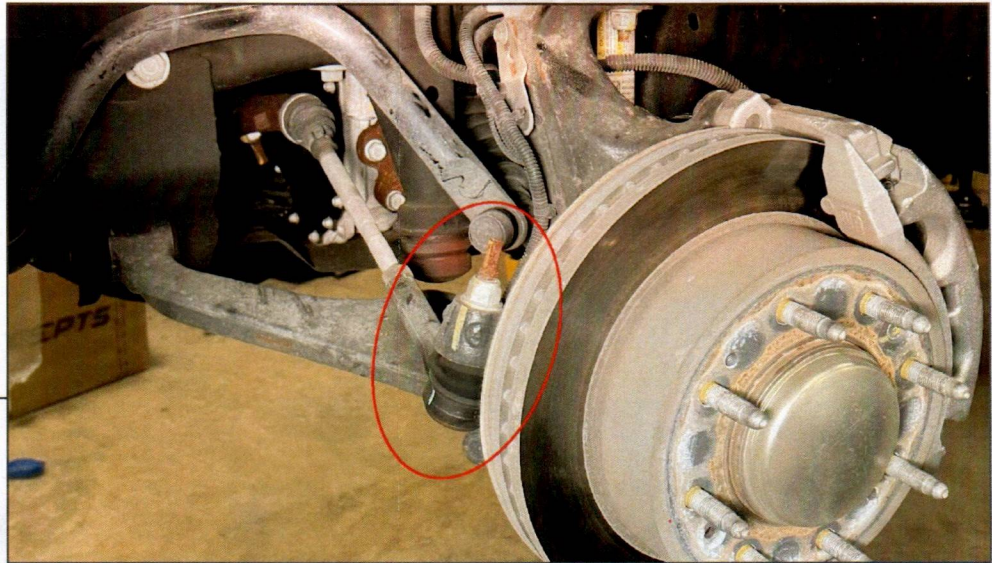


Lift and support the front of the vehicle using a floor jack and jack stands. Remove the front wheels.

Locate and loosen the front tie rod end from the steering knuckle using a 21mm socket. Once the nut is loose, use a joint removal tool to disconnect the joint from the knuckle.


Repeat this step for the opposite side of the vehicle

STEP 2

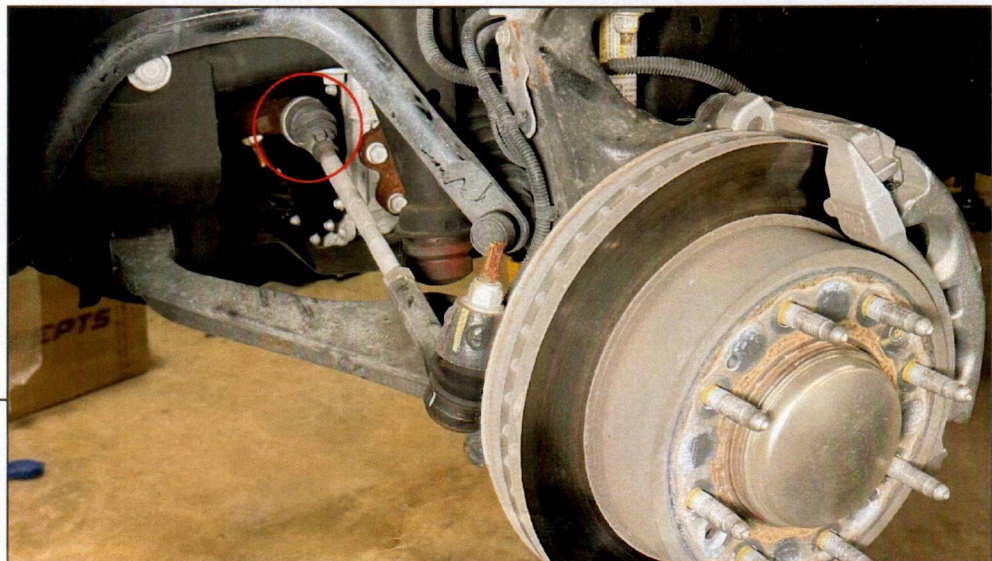

Using a large adjustable wrench, loosen the tie rod end from the vehicle center link.

Note: Additional leverage may be necessary.

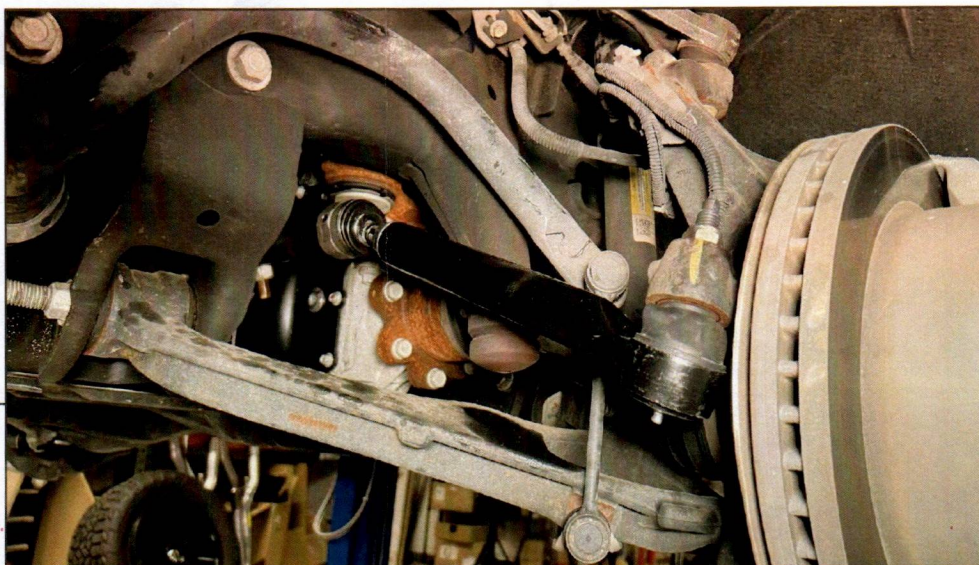

STEP 3

With the tie rod end loose, completely unthread from the center link and remove from the vehicle. Adjust the new tie rod end to a similar length as the original, and install the new tie rod end to the vehicle center link and steering knuckle.

Tighten the tie rod end to the knuckle using the included lock nut to 26 ft. lbs. + 85°-100°.

Installation is now complete.