

# LDS SERIES LED TAIL LIGHTS

(2007-2013 SILVERADO 1500)  
(2007-2014 SILVERADO 2500HD/3500HD)

## INSTALLATION INSTRUCTIONS

### CONTENTS


- (1) LH Tail Light
- (1) RH Tail Light
- (2) Resistor Brackets
- (4) Phillips Bolts
- (4) Lock Nuts
- (4) Vampire Clips
- (8) Cable Ties

### TOOLS REQUIRED

- Phillips Screwdriver
- Pry Tool

SKU # S204429


### STEP 1

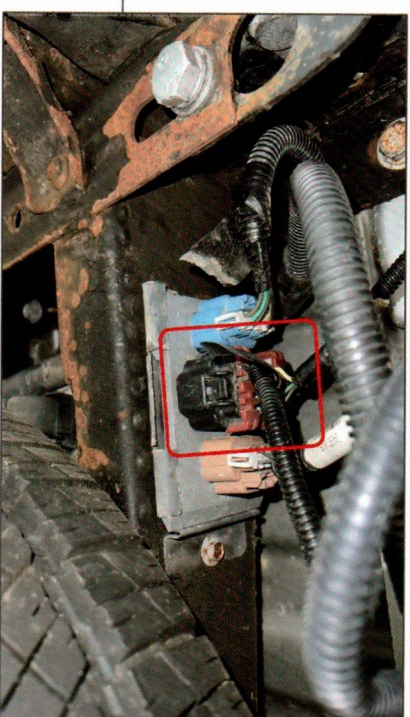

From under the vehicle, locate the electrical junction block on the driver's side of the frame. Unplug the (2) center connectors. The top connector routes to the driver's side tail light. The lower connector routes to the passenger's side tail light.

Use a pry tool to dislodge the harness retainers securing the tail light harness to the vehicle.

### STEP 2

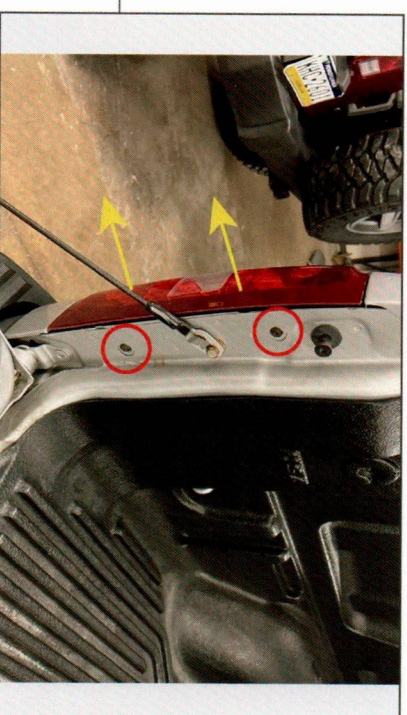

Lower the vehicle tailgate. Remove (2) Phillips screws securing the tail light to the vehicle bed. Then, firmly pull the tail light assembly away from the vehicle bed.



**STEP 3**

If the original tail light mounting grommets remain in the bed, use 1-2 pry tools to remove the grommets from the bed. The tail lights include new grommets to replace the original grommets.



**STEP 5**

Using (2) vampire clips, secure the resistor bracket to the inside of the tail light area of the vehicle. Ensure the resistor is placed away from the tail light wiring.



**STEP 4**

Secure the resistor to the resistor bracket using (2) Phillips bolts and (2) lock nuts. Tighten the hardware until secure.




**STEP 6**

Route the LED wiring harness through the vehicle bed. Then, secure the tail light to the bed using the provided (2) Phillips bolts w/ washers.

Under the vehicle, route the harness neatly towards the electrical junction block. Plug the electrical connector into the electrical junction block, and secure each harness using (4) cable ties per tail light.

Note: The connectors take some pressure to fully seat. The connector will audibly click when seated.

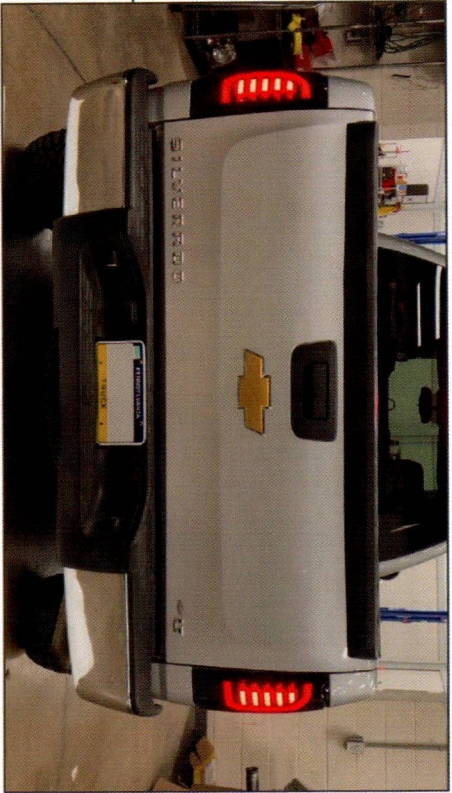

**STEP 7**

Installation is now complete.