

Installation Instructions

I - Sheet Number INS-HS131 Rev.A



Hood Shield

**For proper installation and best possible fit, please read all instructions BEFORE you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-344-8759.**


Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents

NOTE: Actual product may vary from illustration.




Hood shield



Screw x4



Fastener x2



Bump On x4


Tools Required



Car Wash Supplies



Clean Towel



Phillips Screwdriver



Grease pencil


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps

NOTE: Actual application may vary slightly from illustrations.


Open hood. Note the location of the rubber seal on leading edge of hood.

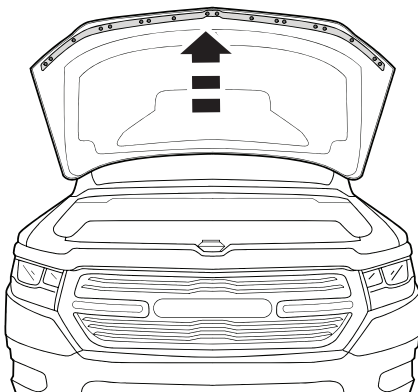

1



Center hood shield in place on hood. Use a grease pencil to mark the locations on rubber seal that correspond to holes in hood shield flange.

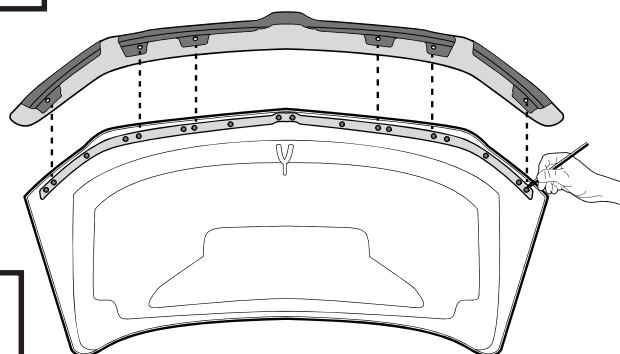

2


Installation Steps

NOTE: Actual application may vary slightly from illustrations.

Remove hood shield from hood. Remove the corresponding factory installed rubber seal retaining fasteners that were marked in **Step 2**.


NOTE: Some applications may require additional fasteners to be removed in order to fully access the holes underneath.

3

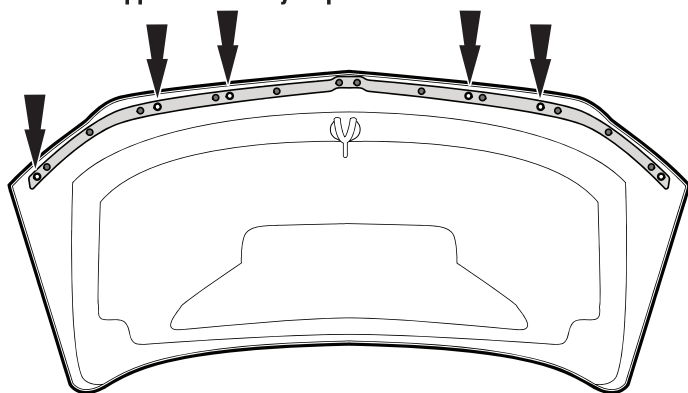




NOTE: Exercise extreme caution not to tear or damage the rubber seal when separating from hood.

4

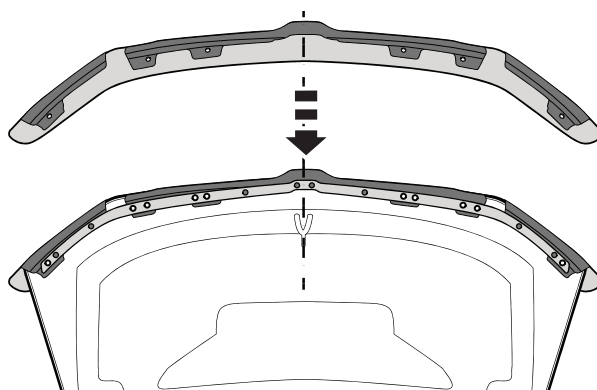

Install a fastener at each **OUTBOARD** flange location.

(X2)

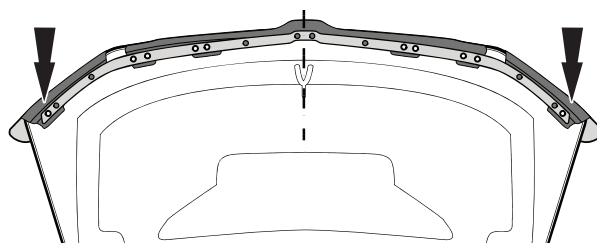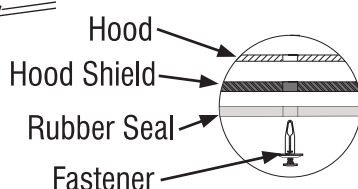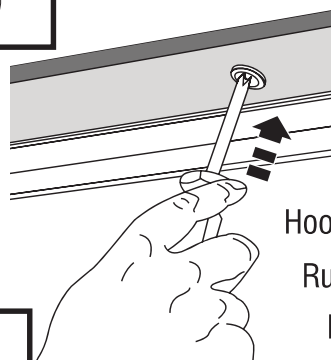




5

Do not overtighten



Install a screw at each **INBOARD** flange location.

(X4)

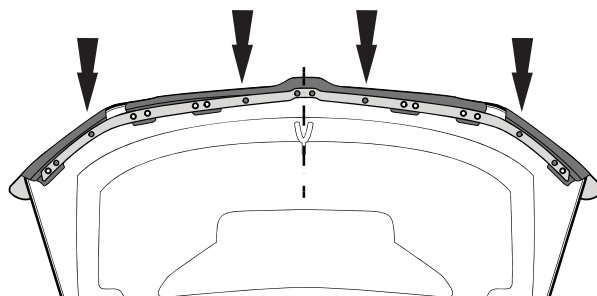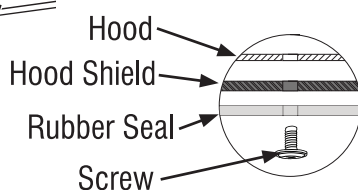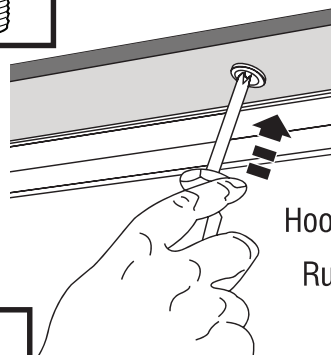

6


Do not overtighten

Installation Steps

NOTE: Actual application may vary slightly from illustrations.


Close hood. Adjust hood bump stops to raise hood as needed.

7

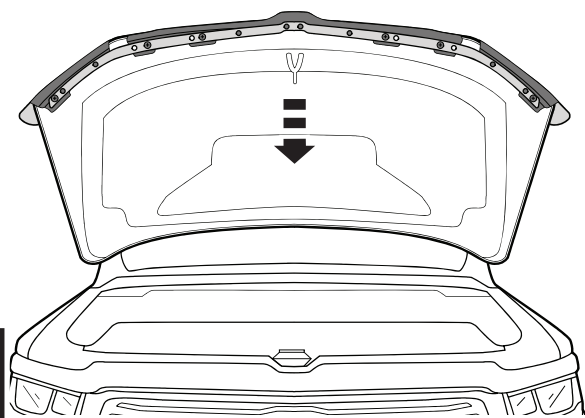

Install bump ons at pre-cleaned locations on the painted hood surface.

8

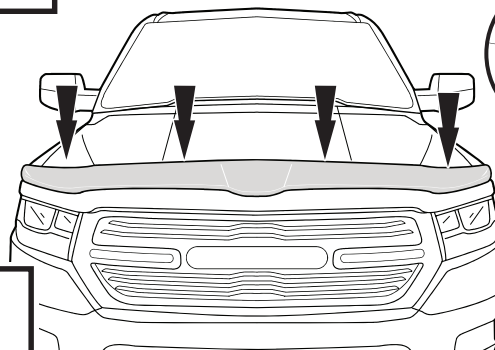

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



Congratulations!

You have purchased one of the many quality Husky® branded products. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



1-800-344-8759 • Visit us at huskyliners.com

© 2024 Husky Liners, Inc. All rights reserved.

Husky® and the Husky® logo are trademarks of Husky Liners, Inc.