
EARRICADE

HD4 REAR BUMPER

2019-25 SILVERADO 1500/2020-25 SILVERADO 25-3500 Installation Instructions

PARTS LIST: S206146; S206147

Qty	Item Description	Qty	Item Description
1	Bumper base	2	Mesh Mounting Plate
2	Plastic Plugs for License Plate	2	Light Grid Mounting Plate 2
10	Zip Ties	2	Light Grid Mounting Plate 1
6	Anti-Collision Rubber Stoppers	4	12mm Plastic Retainers
2	Blind Spot Monitor Protective Cover	12	6mm Lock Washers
3	Parking Sensor Extension Harness	16	6mm x 18mm x 1.6mm Flat Washers
1	DS/Left BSM Mounting Bracket 1	8	12mm x 37mm x 3mm Flat Washers
1	PS/Right BSM Mounting Bracket 1	8	6-1.00mm x 20mm Button Head Allen Bolt
2	BSM Cover Plate	4	12mm Hex Lock Nuts
2	BSM Mounting Bracket 2	12	6mm Hex Nuts
4	15.5mm x 25mm OD x 2mm Foam Washer	4	6mm Hex Flange Nuts
8	4mm x 15mm Flat Head Self Tapping Screw	4	6-1.00mm x 20mm Hex Bolts
4	20mm x 10mm Foam Spacers	4	12-1.75mm x 40mm Hex Bolts
4	Plastic Plug (Without sensors) (PP)	2	6-1.00mm x 20mm Combo Bolts
4	Retaining Cap (PP)	1	4mm Allen Wrench

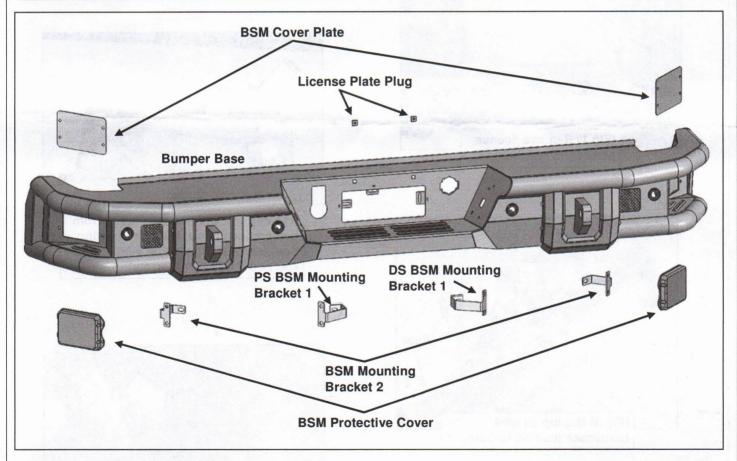


TOOLS REQUIRED





Socket








1

Follow (Fig 1 - 9) to remove hardware and bumper to prepare for HD4 Rear Bumper installation.




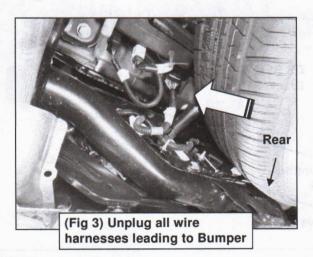

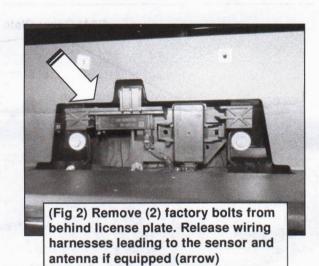

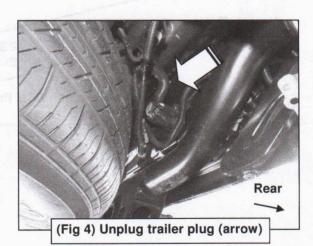


HD4 REAR BUMPER 2019-25 SILVERADO 1500/2020-25 SILVERADO 25-3500

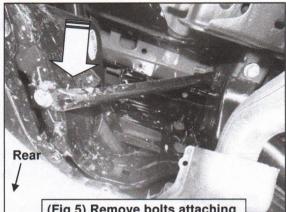


(Fig 5) Remove bolts attaching outer bumper supports to bottom of bumper (arrow)




(Fig 7) Remove license plate lights, trailer plug and wiring harness

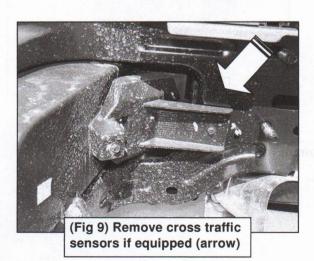

WARNING! Before removing hardware, fully support the weight of the bumper with blocks or stands to prevent injury or damage to the vehicle.

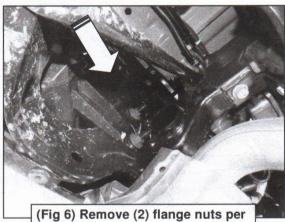



side attaching bumper to frame

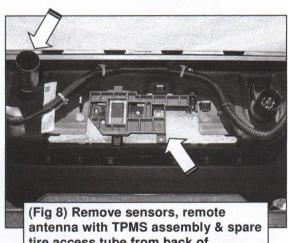



tire access tube from back of bumper. Also remove wire harness.

Follow (Fig 10 - 14) to attach Parking Sensors and TPMS Assembly to HD4 Rear Bumper. Ensure hardware is hand tightened.

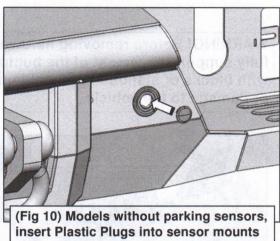




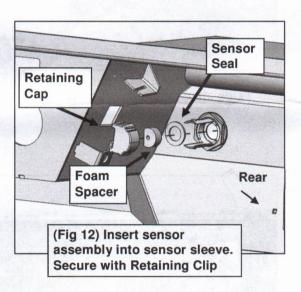


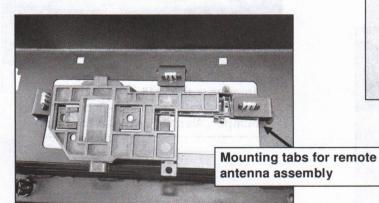


(Fig 14) Attach remote antenna assembly (Fig 13), to slots in mounting tabs

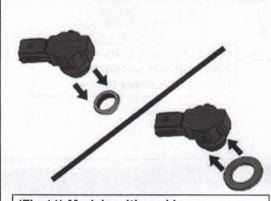


(Fig 11) Models with parking sensors, remove silicone seal from sensor. Slide Foam Seal over end of sensor (arrow)

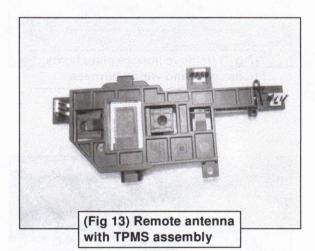


Follow (Fig 15 - 19) to attach Cross Traffic Alert Sensors to HD4 Rear Bumper. Ensure hardware is hand tightened.

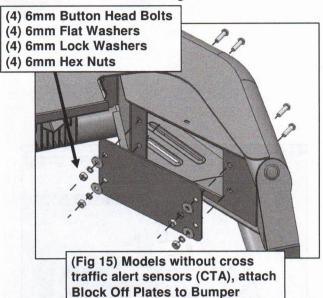



- (4) 6mm Button Head Bolts (4) 6mm Flat Washers
- (4) 6mm Lock Washers

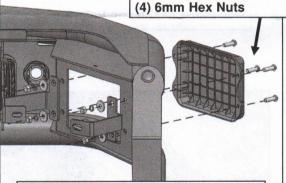

(Fig 17) Attach CTA Brackets to inside of Bumper and Outer Plastic Cover

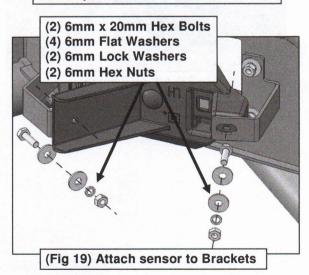


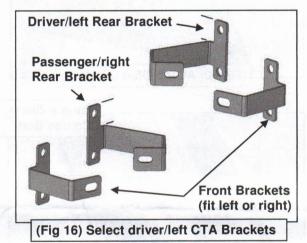


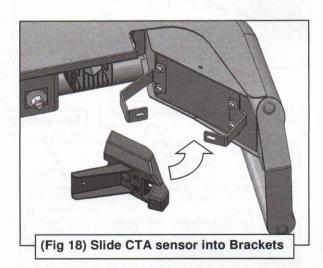



HD4 REAR BUMPER 2019-25 SILVERADO 1500/2020-25 SILVERADO 25-3500


Follow (Fig 20 – 24) to attach License Plate Lights, Trailer Plug, Tire Access Plug, and License Plate. Ensure hardware is hand tightened.

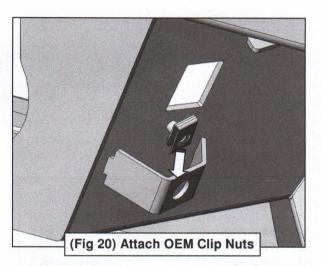

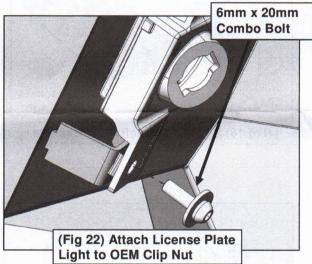


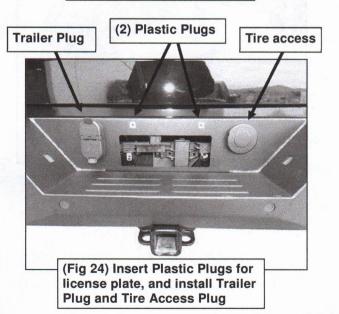

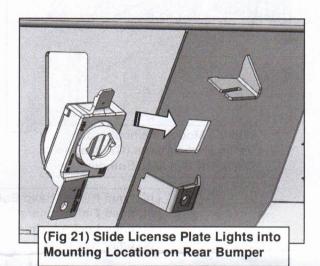


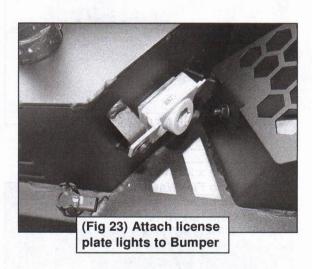

Follow (Fig 25 - 29) to attach LED Lights, then attach Bumper to vehicle. Hand tighten hardware at this point.

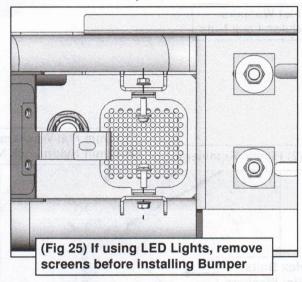


WARNING! Fully support the weight of the bumper with blocks or stands to prevent injury or damage to the vehicle.

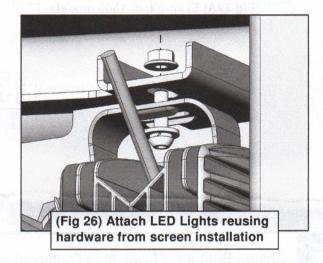




(Fig 27) Remove outer bumper supports from both sides of frame (arrow)

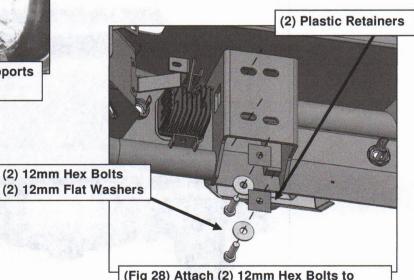

(Fig 28) Attach (2) 12mm Hex Bolts to Bumper. For 1500 models, use outer slots. For 2500-3500 models, use inner slots.

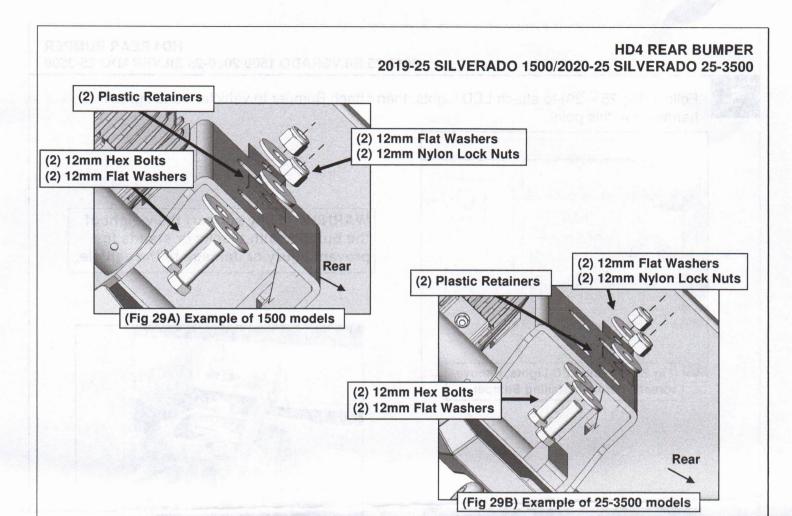

Ensure Bumper is level, then tighten all hardware and double check all wiring connections. At this point, installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.



Page 8 of 8

1-10-25 (JY)