

INSTALLATION INSTRUCTIONS

BRACKET	OVAL SIDE BAR WIDESIDER 4"	WHEEL TO WHEEL WIDESIDER 4"	RUNNING BOARD WIDESIDER 5" & 6"	APPLICATION	MODEL
6841805	64180B	-	650087 660087	FORD SUPER DUTY CREW CAB.	99 - 13
	64176B	-	650080 660080	FORD SUPER DUTY EXT. CAB.	99 - 13
	-	641262	-	FORD SUPER DUTY CREW CAB. 6'	99 - 13
	-	641256	-	FORD SUPER DUTY EXT. CAB. 6'	99 - 13

Parts List:

ITEM	QTY	CODE	DESCRIPTION	MAX. TORQUE
1	3	3910306AB	Brackets set (Front & Middle & Rear)	-
		KTE-390305	Hardware kit includes:	
2	12	-	5/16" Box head bolt	11 lb.ft
3	12	-	5/16" Flat washer	-
4	12	-	5/16" Lock washer	-
5	12	-	5/16" Hex nut	11 lb.ft
6	12	-	3/8 x 1 1/4" Hex head bolt	30 lb.ft
7	18	-	3/8" Flat washer	-
8	12	-	3/8" Lock washer	-
9	6	-	3/8" Hex nut	30 lb.ft
10	6	-	3/8" Clip nut	30 lb.ft


NOTA: 64180(B-PS) / 64176(B-PS) / 641262(B-PS) / 641256(B-PS) ADEMÁS:

11	1	-	Oval side bar widesider 4"	-
----	---	---	----------------------------	---

Tools required not including:

DESCRIPTION	QTY
9/16" & 1/2" Hex socket / 9/16" Wrench	1
17mm Double hex socket (12 point) or 15mm Wrench	1
Ratchet	1
Ratchet extension	1

ILLUSTRATION 1

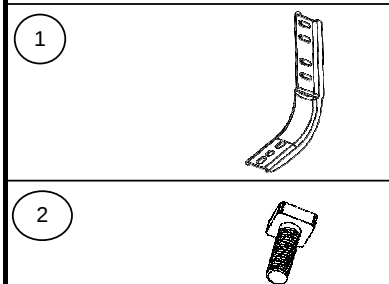

Instructions:

Approximated installation time: 30 min.

1. Before beginning the installation read all instructions thoroughly and verify that all hardware is accounted for. if there are any listed parts missing, please notify your distributor immediately.

ILLUSTRATION 2

Running board widesider 5" & 6" /
Oval Side Bar widesider 4"
NOT INCLUDED

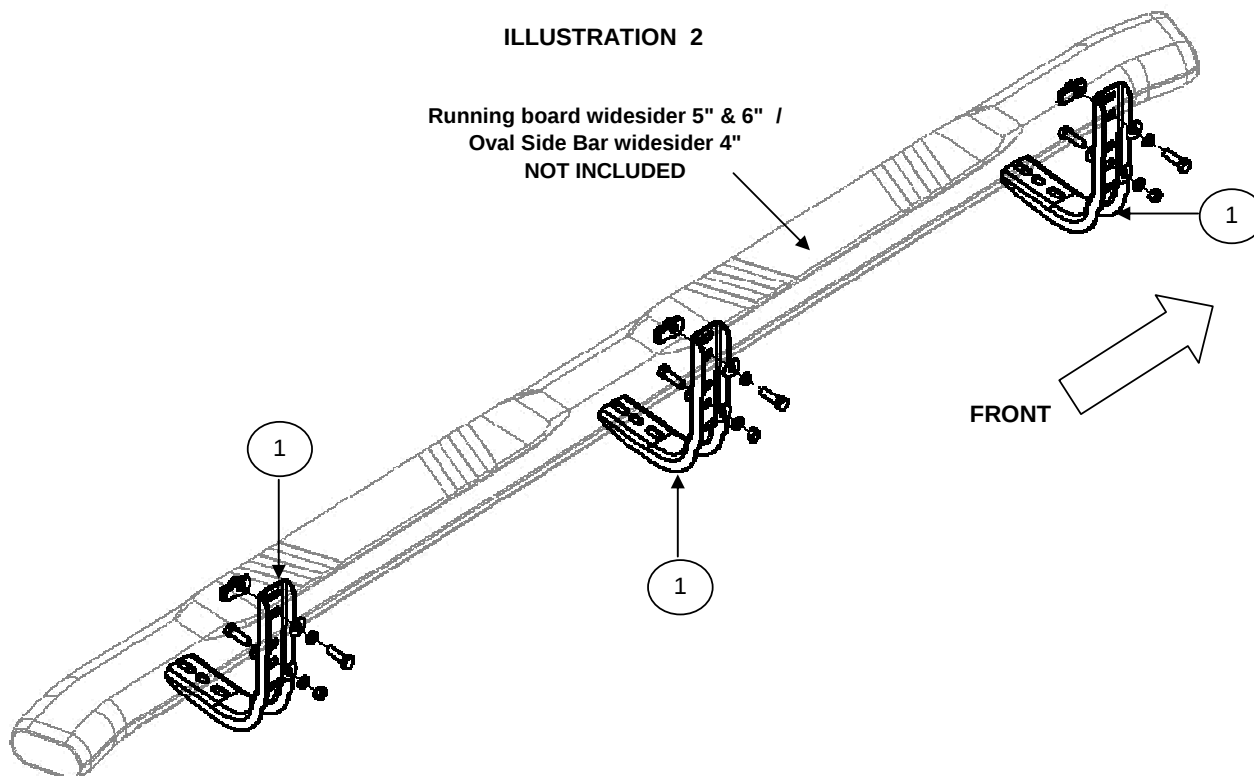


Illustration driver side.

Cleaning and care instructions:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Revised 24/06/13

Design:


Quality:

INSTALLATION INSTRUCTIONS

2. Located holes inside the body in vehicle, front, middle, rear, place a clip nut in upper part. **SEE ILLUSTRATION 3.**


ILLUSTRATION 3

To install the brackets in rocker panel.

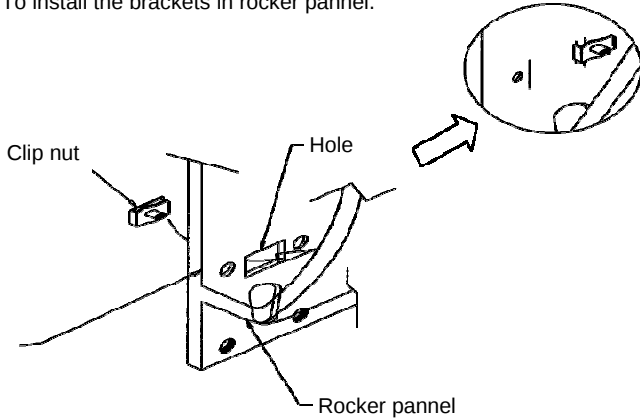

3. Mount bracket and attach with: (1) 3/8 x 1 1/4" hex head bolt, (1) 3/8" flat and lock washers, in lower part attach with: (1) 3/8 x 1 1/4" hex head bolt, (2) 3/8 flat washer, (1) 3/8" lock washer, (1) 3/8" hex nut. **SEE ILLUSTRATION 4.** By each bracket. Leave loose.

ILLUSTRATION 4

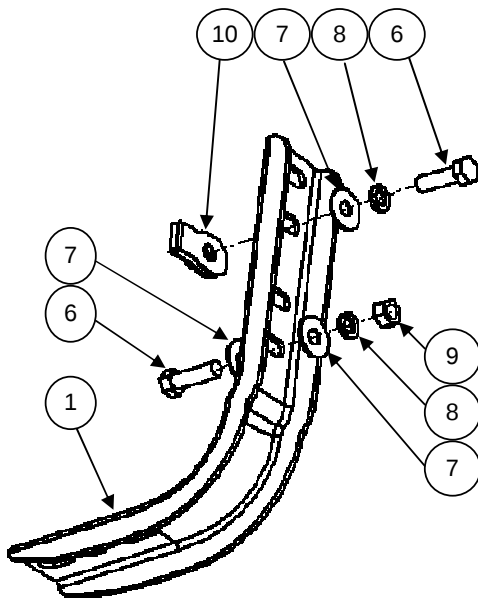


Use ratchet & 9/16" hex socket & 9/16" wrench.

Illustration to front, middle and rear part. Driver side.

4. If you acquired a Running board widesider 5" & 6", insert 5/16" square head bolt on rail, place on brackets and attach with: 5/16" Flat and lock washer, 5/16" hex nut. **SEE ILLUSTRATION 5.** Repeat for the opposite side. Leave loose.

ILLUSTRACION 5


RUNNING BOARD WIDESIDER 5" & 6" INSTALLATION

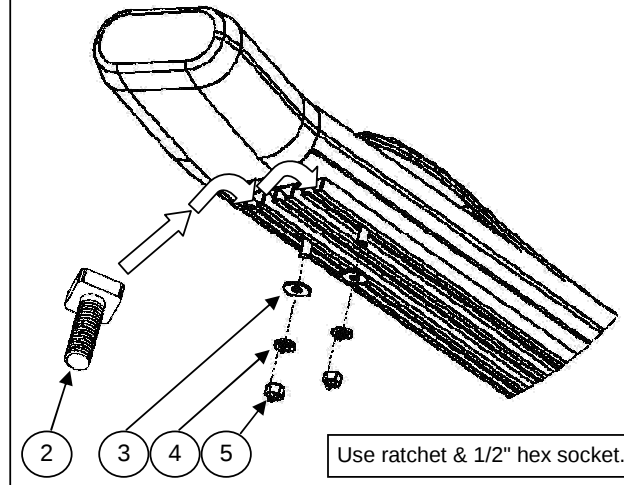

5. If you acquired a Oval side bar widesider 4", place on brackets and attach with: 5/16" square head bolt, 5/16" Flat and lock washer. **SEE ILLUSTRATION 6.** Repeat for the opposite side. Leave loose.
6. Align Running board widesider 5" & 6" or Oval side bar widesider 4" and then tighten all bolts.
7. Periodically check your product because it may need a re-tighten of bolts.
8. Fill the warranty card and place it inside your vehicle's glove box.

ILLUSTRACION 6

OVAL SIDE BAR WIDESIDER 4" INSTALLATION

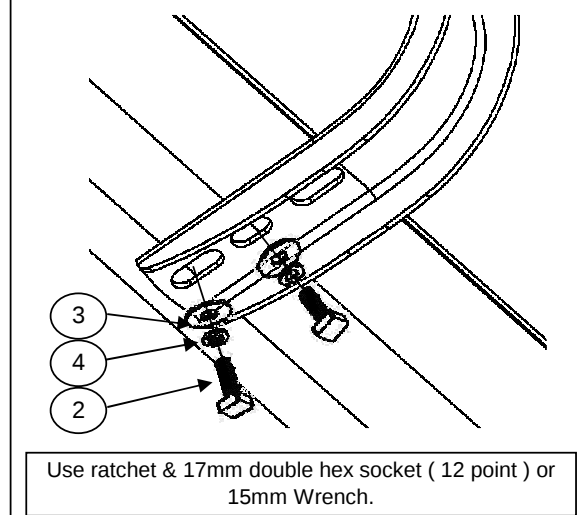

Cleaning and care instructions:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Revised 24/06/13

Design:

Quality:

INSTRUCCIONES DE INSTALACIÓN

BRACKET	ESTRIBO OVALADO WIDESIDER 4"	WHEEL TO WHEEL WIDESIDER 4"	RUNNING BOARD WIDESIDER 5" & 6"	APLICACIÓN	MODELO
6841805	64180 67180	-	39587 39687	FORD SUPER DUTY CREW CAB.	99 - 13
	64176 67176	-	39587 39687	FORD SUPER DUTY EXT. CAB.	99 - 13
	-	641262	-	FORD SUPER DUTY CREW CAB. 6'	99 - 13
	-	641256	-	FORD SUPER DUTY EXT. CAB. 6'	99 - 13


Lista de Partes:

ITEM	CANT.	CÓDIGO	DESCRIPCIÓN	TORQUE MAX.
1	3	3910306AB	Juego de brackets (delantero / medio / trasero)	-
		KTE-390305	KIT DE TORNILLOS QUE INCLUYE:	
2	12	-	Tornillo cab. Cuadrada 5/16"	11 lb.ft
3	12	-	Rondana plana 5/16"	-
4	12	-	Rondana presión 5/16"	-
5	12	-	Tuerca hex. 5/16"	11 lb.ft
6	12	-	Tornillo cab. hex. 3/8 x 1 1/4"	30 lb.ft
7	18	-	Rondana plana 3/8"	-
8	12	-	Rondana presión 3/8"	-
9	6	-	Tuerca hex. 3/8"	30 lb.ft
10	6	-	Tuerca clip 3/8"	30 lb.ft

Herramienta Requerida no incluida:

DESCRIPCIÓN	CANTIDAD
Dado 1/2" & 9/16" Llave 9/16"	1
Dado estriado (12 puntas) de 17mm ó llave 15mm	1
Matraca	1
Extensión para matraca	1

ILUSTRACIÓN 1

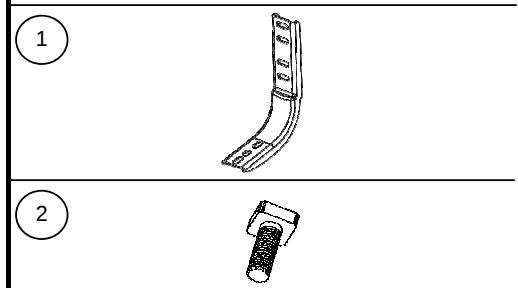

NOTA: 64180B / 67180PS / 64176B / 67176PS 641262 (B-PS) / 641256 (B-PS) ADEMÁS:

11	1	-	Estribo ovalado Widesider 4"	-
----	---	---	------------------------------	---

Instrucciones:

Tiempo aprox. de instalación: 30 min.

1. Lea y comprenda perfectamente las instrucciones antes de comenzar la instalación. Si alguna de las partes listadas no se encuentra, no proceda con la instalación y llame a su distribuidor inmediatamente para obtener los componentes necesarios.

ILUSTRACIÓN 2

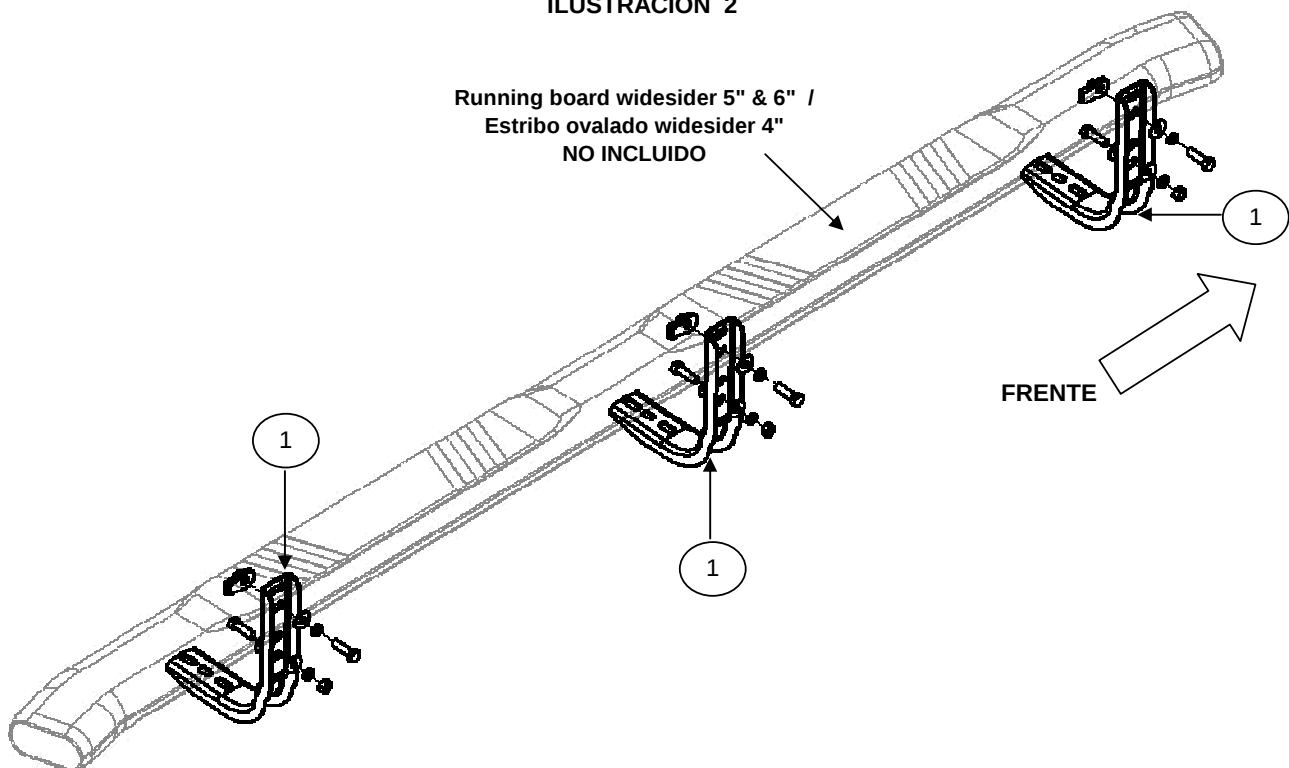


Ilustración lado conductor.

Recomendaciones de cuidado y mantenimiento:

Diseño:

Calidad:

Para proteger el acabado de este producto, manténgalo limpio para evitar la corrosión y no utilice ceras abrasivas.


Revisado 26/06/13

INSTRUCCIONES DE INSTALACIÓN

2. Localice las perforaciones ubicadas en el interior de la carrocería del vehículo, adelante, en medio y atrás. Coloque una tuerca grapa en la parte superior. **VER ILUSTRACIÓN 3.**


ILUSTRACIÓN 3

Posición en carrocería para instalar los brackets.

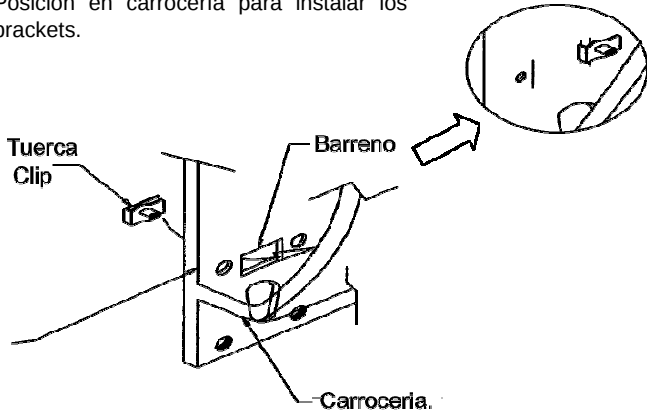

3. Monte el bracket y fije a la tuerca grapa con: Tornillo cab. Hex. 3/8 x 1 1/4", rondana plana y de presión 3/8", y en la parte inferior fije con: Tornillo cab. Hex. 3/8 x 1 1/4", rondana plana, rondana de presión 3/8", tuerca hex. 3/8. **VER ILUSTRACIÓN 4.** Por cada bracket. No apriete aún.

ILUSTRACIÓN 4

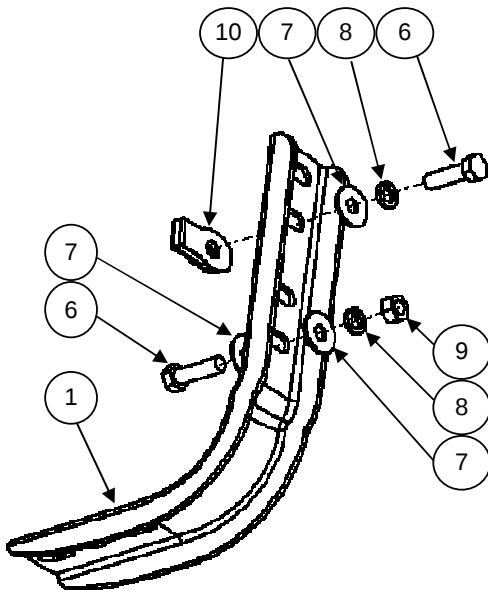


Utilice matraca y dado 9/16", llave 9/16".

Ilustración referente a parte delantera, media y trasera. Lado conductor.

4. Para instalar Running Board 5" y 6", inserte: (3) tornillos cabeza cuadrada dentro de cada riel lateral del estribo. **VER ILUSTRACIÓN 5.** Monte el estribo sobre los brackets, alinee y fije con: (2) rondanas planas y de presión 5/16", (2) tuercas hex. 5/16". Repita para cada bracket. No apriete aún.

ILUSTRACIÓN

INSTALACIÓN RUNNING BOARD WIDESIDER 5" & 6"

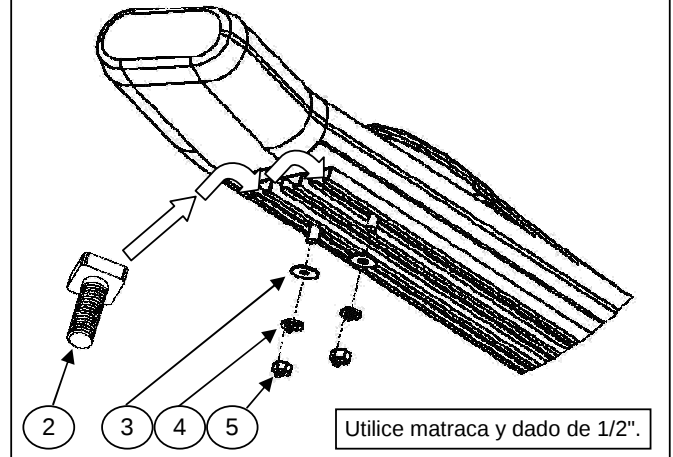

5. Si adquirió Estribo ovalado widesider bar 4", colóquelo sobre los brackets y fije con: tornillo cab. cuadrada 5/16", rondanas planas y de presión 5/16". **VER ILUSTRACIÓN 6.** Repita para el lado contrario. No apriete aún.


6. Haga cualquier ajuste final a la alineación y apriete toda la tornillería, empezando por los brackets y después el Running board widesider 5" & 6" ó Estribo ovalado widesider bar 4".

7. Reapriete la tornillería periódicamente.

8. Llene la tarjeta de garantía y colóquela en la guantera de su vehículo.

ILUSTRACIÓN 6

INSTALACIÓN ESTRIBO OVALADO WIDESIDER 4"

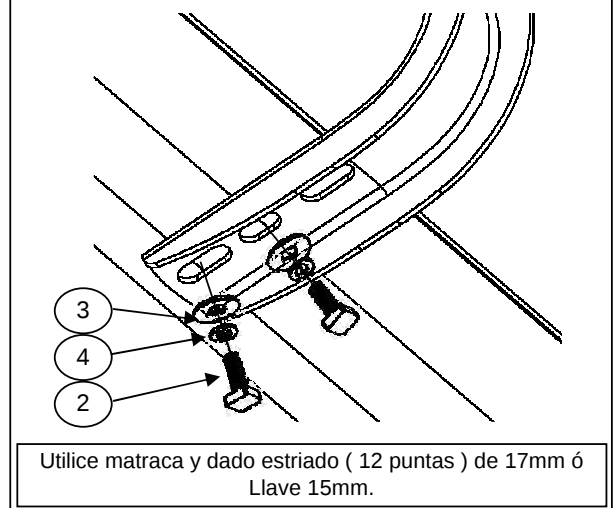

Recomendaciones de cuidado y mantenimiento:

Para proteger el acabado de este producto, manténgalo limpio para evitar la corrosión y no utilice ceras abrasivas.

Revisado 26/06/13

Diseño:

Calidad: